


CURRENT INFORMATION SUMMARY

Opening Instructions for the KODAK ADVANTIX Access Flash Camera

Wear eye protection when opening all cameras.

1 Wind Off

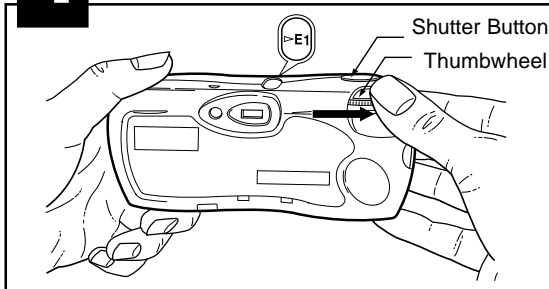


- Cover lens.
- With Shutter Button depressed, wind Thumbwheel until it no longer advances.

NOTE: To prevent damage to customer photos, you must wind Thumbwheel until it no longer advances to close the film cassette door inside the camera. Do this before you remove the outside camera film door.


- Make sure "E" is visible in frame-counter window and located at the arrow.

2 Open Film Door

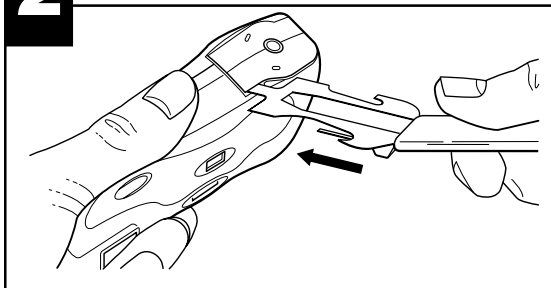


- Insert camera-opening tool into film-door slot.

3 Remove Film

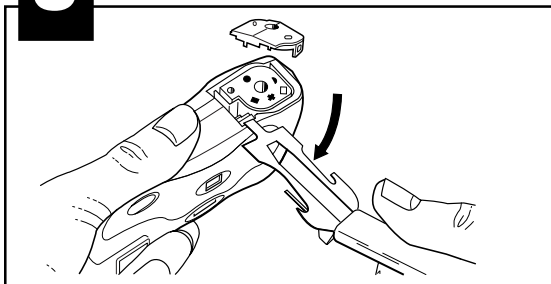


- Use the tool to remove film door.
- Tip the opened end of the camera downward to remove film cassette.
- Film cassette will slide out.

4 Open Battery Door

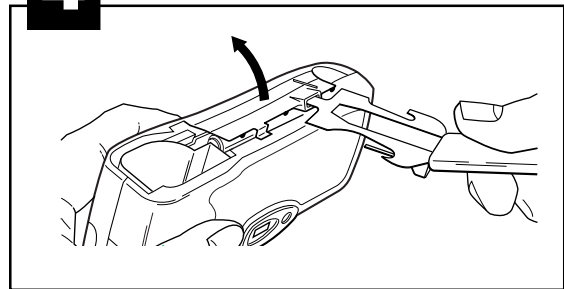

- Insert tool into battery-door slot.
- Use tool to bend door back.

5 Remove Battery

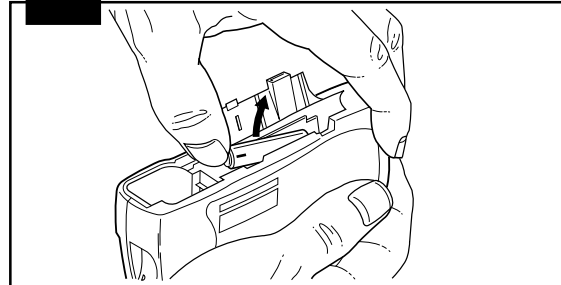

- Use finger to slide either end of the battery towards the other end.
- Pull up and out to remove battery.

- 6 • Place used camera in recycle bin.
- Return camera to Kodak for recycling.



CAUTION: This camera body contains a high-voltage capacitor and circuit board. To avoid electric shock, do not pry apart the front and back sections of camera. Remove only film and battery from their respective compartments. If sections of the camera are separated, do not touch the circuit board.

CAUTION: To avoid injury, use tool carefully.

Current Information Summaries provide information of limited or specific application. Responsibility for judging the timeliness and applicability of the information to a specific photographic use rests with the end user.

Consumer Imaging
EASTMAN KODAK COMPANY • ROCHESTER, NY 14650



CIS-203
Opening Instructions for the
KODAK ADVANTIX Access Flash Camera

Kodak, Advantix, and the
Advanced Photo System symbol and logotype are trademarks.

New 1-00
Printed in U.S.A.