

---

# Kodak EasyShare-One zoom digital camera



## User's guide

[www.kodak.com](http://www.kodak.com)

For interactive tutorials, [www.kodak.com/go/howto](http://www.kodak.com/go/howto)

For help with your camera, [www.kodak.com/go/easyshare-one6mpsupport](http://www.kodak.com/go/easyshare-one6mpsupport)



Eastman Kodak Company  
Rochester, New York 14650  
© Eastman Kodak Company, 2005

All screen images are simulated.

Contains Macromedia® Flash™ technology by Macromedia, Inc.

Copyright © 1995-2003 Macromedia, Inc. All rights reserved.


Wi-Fi® is a registered trademark of the Wi-Fi Alliance.

All other trademarks are the trademarks of their respective owners.

Eastman Kodak Company is an authorized licensee of the SD trademark.  
Kodak, EasyShare, EasyShare-One, and Perfect Touch are trademarks of  
Eastman Kodak Company.


P/N 4J4675\_en

## Front/top/side view

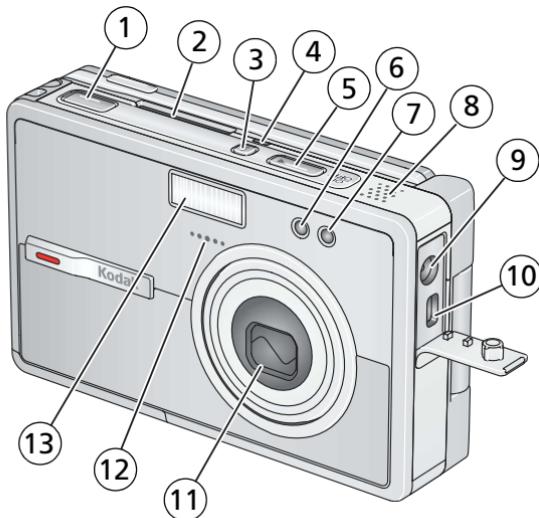

- |  |  |   |
|--|--|---|
| 1 Shutter button   | 8 Speaker  |   |
| 2 Slot for Kodak Wi-Fi® card<br>(may be sold separately) | 9 DC-In (5V)  | 10 USB, A/V Out  |
| 4 Wireless network status light                          | 11 Lens/Lens cover   |   |
| 5 On/Off button  | 12 Microphone  |   |
| 6 Self-Timer/Video light                                 | 13 Flash unit  |   |
| 7 Light sensor   |  |   |

## Back/bottom/side view (open)

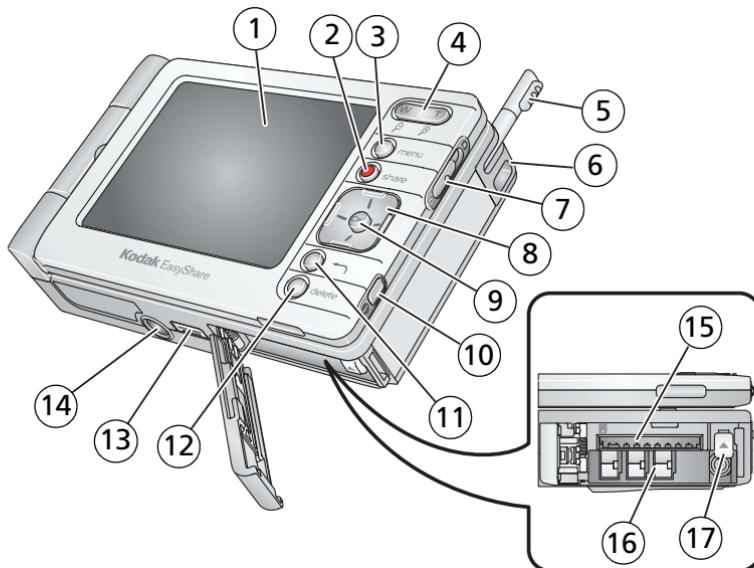

- 1 Touchscreen display (LCD)
- 2 Share button
- 3 Menu button
- 4 Zoom (Wide Angle/Telephoto)/Magnifier
- 5 Stylus
- 6 Wrist strap mount
- 7 Capture/View switch /
- 8 4-way controller / /
- 9 OK button (press)
- 10 Info (information) button
- 11 Back button
- 12 Delete button
- 13 Dock connector
- 14 Tripod socket
- 15 Slot for **optional** SD/MMC card
- 16 Battery slot
- 17 Battery release switch

---

# Table of contents

|   |           |
|---|-----------|
| <b>1 Getting started .....</b>                                | <b>1</b>  |
| What is the EasyShare-One camera?.....                        | 1         |
| Attaching the wrist strap .....                               | 2         |
| Charging the battery .....                                    | 2         |
| Loading the battery.....                                      | 3         |
| Turning the camera on and off .....                           | 4         |
| Navigating in your camera.....                                | 5         |
| Setting up your camera .....                                  | 7         |
| Storing pictures and videos on an optional SD/MMC card .....  | 11        |
| <b>2 Taking pictures and videos .....</b>                     | <b>12</b> |
| Taking a picture .....  | 12        |
| Taking a video .....  | 13        |
| Viewing the picture or video just taken.....                  | 13        |
| Overview of capture icons .....                               | 14        |
| Using optical zoom .....                                      | 15        |
| Using digital zoom .....                                      | 15        |
| Using the flash.....  | 16        |
| <b>3 Viewing pictures and videos .....</b>                    | <b>17</b> |
| Locating pictures and videos on your camera .....             | 17        |
| Playing videos .....  | 18        |
| Viewing picture and video information.....                    | 19        |
| Magnifying a picture .....                                    | 19        |
| <b>4 Organizing and editing on your camera .....</b>          | <b>20</b> |
| Working with albums .....                                     | 20        |
| Tagging pictures and videos as favorites.....                 | 22        |
| Using the drawer to select multiple pictures and videos ..... | 23        |
| Adding or modifying a caption.....                            | 25        |

|   |           |
|---|-----------|
| Cropping pictures.....  | 25        |
| Automatically enhancing pictures .....                          | 26        |
| Copying pictures and videos.....                                | 26        |
| Deleting pictures, videos, and albums.....                      | 27        |
| <b>5 Taking pictures and videos: more tips and tricks .....</b> | <b>28</b> |
| Choosing a scene mode .....                                     | 28        |
| Using burst .....   | 30        |
| Changing exposure compensation .....                            | 31        |
| Using the self-timer.....                                       | 32        |
| Taking overhead pictures and videos .....                       | 33        |
| Pre-assigning pictures to an album .....                        | 34        |
| Changing capture settings.....                                  | 34        |
| Changing device settings.....                                   | 37        |
| Changing preferences .....                                      | 39        |
| <b>6 Using your camera with a Wi-Fi wireless network .....</b>  | <b>40</b> |
| Why go wireless? .....  | 40        |
| What are some of the wireless features of my camera? .....      | 41        |
| Types of Wi-Fi wireless networks .....                          | 42        |
| Wireless networking and the Internet .....                      | 43        |
| Inserting and deploying a Kodak Wi-Fi® card .....               | 44        |
| Connecting to a Wi-Fi wireless network.....                     | 45        |
| Glossary of common wireless network terms.....                  | 52        |
| <b>7 Synchronizing and transferring to a computer .....</b>     | <b>57</b> |
| Installing the software.....                                    | 58        |
| Setting up your camera for sync and transfer .....              | 59        |
| <b>8 Sharing pictures and videos .....</b>                      | <b>62</b> |
| Do it from your camera—just press Share! .....                  | 62        |
| More ways to share your pictures and videos .....               | 71        |
| The outbox .....  | 74        |

|   |           |
|---|-----------|
| <b>9 Troubleshooting .....</b>            | <b>78</b> |
| Camera.....                               | 78        |
| Picture quality .....                     | 80        |
| USB connection to computer .....          | 81        |
| Wireless network connection .....         | 82        |
| Synchronization and transfer .....        | 86        |
| Printing.....                             | 87        |
| Getting help.....                         | 88        |
| <b>10 Appendix .....</b>                  | <b>91</b> |
| Camera specifications .....               | 91        |
| Storage capacities .....                  | 95        |
| Dock compatibility.....                   | 97        |
| Power-saving features.....                | 98        |
| Wireless channels.....                    | 98        |
| Important safety instructions .....       | 99        |
| Battery life .....                        | 101       |
| Upgrading your software and firmware..... | 102       |
| Additional care and maintenance .....     | 102       |
| Warranty.....                             | 103       |
| Regulatory compliance .....               | 105       |

# 1

# Getting started

## What is the EasyShare-One camera?



(printer dock not included)


More than just a digital camera, the Kodak EasyShare-One zoom digital camera combines Kodak's signature ease-of-use with new technology into a single, innovative device: a device ideal for taking, viewing, organizing, sharing, and printing pictures. In addition, the wireless capabilities of the EasyShare-One camera let you share the world right from the palm of your hand.

Like all EasyShare digital cameras, the Kodak EasyShare-One zoom digital camera is compatible with the Kodak EasyShare system and software, so you know it's simple to use.

### About using your EasyShare-One camera


There may be several ways to accomplish the same task. You'll find that part of the fun of owning and using the EasyShare-One camera is in discovering different methods to operate it. As you use the EasyShare-One camera, you're sure to find intuitive shortcuts and techniques that work for you.

## Attaching the wrist strap

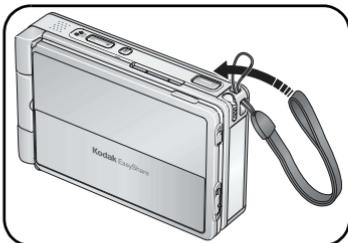

## Charging the battery

Charge the Li-Ion rechargeable battery before first use. Use the correct plug adapter for your country.

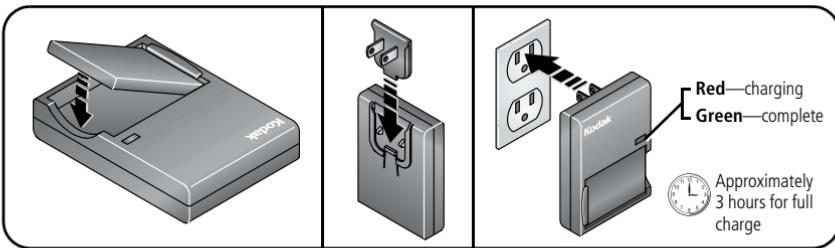

You can also charge the battery using a Kodak EasyShare printer dock or camera dock\*. See a dealer of Kodak products or visit [www.kodak.com/go/easyshare-one6mpaccessories](http://www.kodak.com/go/easyshare-one6mpaccessories).


\*The touchscreen display must be in the open position (see page 4) to enable charging on a dock.

## Loading the battery




### CAUTION:

Use only a Kodak Li-Ion rechargeable digital camera battery KLIC-5000, and orient it so that the battery contacts line-up with the contacts inside the battery slot.

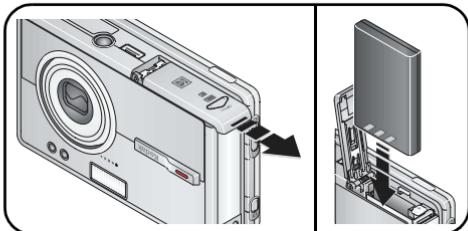

## Removing the battery

- 1 Turn off the camera, then open the battery/card door.
- 2 Press the release tab and pull the battery out.

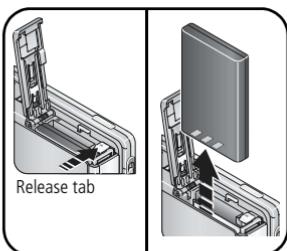

For information on battery life see [page 101](#).

# Turning the camera on and off


## To turn on the camera:

Open, then rotate the touchscreen display.




### CAUTION:

Rotate the display in the direction shown. Do not force.

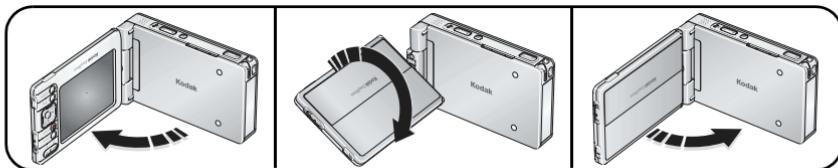

Your camera is ready for use when the On/Off button glows steady blue. If the Capture/View switch is in the Capture position , the lens extends.

- After 10 seconds of not using the camera, the screen dims to conserve power. Press the OK button to refresh the screen.

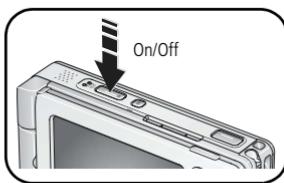

- If you do not use the camera for 8 minutes, it automatically turns off. Press the On/Off button to restore power to the camera.

## To turn off the camera:

Open, rotate, then close the touchscreen display.

## Navigating in your camera



### CAUTION:

**Do not use a pen, pencil, or other sharp instrument with the touchscreen. Do not exert excessive pressure upon the touchscreen. Doing so may damage the touchscreen display.**

You can move from screen to screen and make selections three ways:


- Press the 4-way controller  $\blacktriangleleft/\blacktriangleright\,\blacktriangleup/\blacktriangledown$  to move between options, pictures, and videos. Press the OK button to select options, pictures, and videos, and to actuate buttons and icons.
- Touch the touchscreen with the stylus to select options, pictures, and videos, and to actuate buttons and icons.
- Touch the touchscreen with your finger to select options, pictures, and videos, and to actuate buttons and icons.

**IMPORTANT:** *Calibrate the touchscreen before using (see [page 8](#)).*





- Press the Back button, ↺, to return to a higher menu or to the previous view.

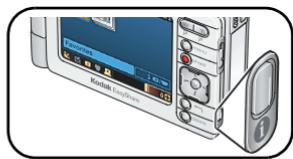

- Press the Info button, ⓘ, located on the outside edge of the touchscreen display, for more information about selected icons or pictures and videos.

## Using the touch keyboard

Some features of your camera may require you to enter words or phrases that help you identify images or set up account information on your camera. When presented with the touch keyboard screen, touch keys with the stylus to enter information.



- Touch abc to enter alphanumeric characters.
- Touch Intl for international characters.
- Touch sym for symbols.

When finished, touch Done.

## Setting up your camera

The first time you turn on the camera, you are guided through the setup process.

### Selecting a language

The Language screen appears the first time you turn on the camera.



- Press the 4-way controller  $\Delta/\nabla$  to highlight a language, then press the OK button to select it.


### To select a language anytime:

- 1 Press the Menu button, then select Setup.
- 2 Select Device , then select Language.
- 3 Press the 4-way controller  $\Delta/\nabla$  to highlight a language, then press the OK button to select it.

## Calibrating the touchscreen

The Touchscreen Calibration screen appears after the Language screen the first time you turn on the camera.

- 1 Remove the stylus then touch Next to begin.

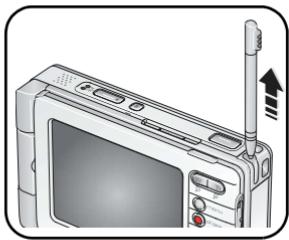

- 2 Touch each point with the stylus.
- 3 When finished, touch Next.



### To calibrate the touchscreen anytime:

- 1 Press the Menu button, then select Setup.
- 2 Select Device , then select Touchscreen Calibration.
- 3 Touch Start.
- 4 Touch each point with the stylus.
- 5 When finished, touch Done.

### Setting the date and time

The Date & Time screen appears after the Touchscreen Calibration screen the first time you turn on the camera. The Date & Time screen may also appear if the battery has been removed or discharged for a long period of time.

**IMPORTANT:** *Keeping the date and time accurate helps ensure proper organization of your pictures and videos when transferring pictures to your computer and when connecting to KODAK EASYSHARE Gallery.*



- 1 For each field, touch the up and down arrows to select a value.
- 2 When finished, touch Next.

#### To set the date and time anytime:

- 1 Press the Menu button, then select Setup.
- 2 Select Device , then select Date & Time.
- 3 For each field, touch the up and down arrows to select a value.
- 4 When finished, touch Done.

NOTE: Depending on your settings, Kodak EasyShare software may update the camera clock during synchronization (see [page 57](#)). Click the Help button in the Kodak EasyShare software for details.

## Setting KODAK EASYSHARE Gallery account information

The Email Address and Gallery Password screens appear after the Date & Time screen the first time you turn on the camera.

Join the KODAK EASYSHARE Gallery online at [www.kodakgallery.com/one](http://www.kodakgallery.com/one), then enter the email address and password for your account.



- 1 Use the touch keyboard (see [page 6](#)) to type the email address used for your Gallery account.
- 2 When finished, touch Next.
- 3 Type your Gallery account password.
- 4 When finished, touch Next.

### To set Gallery account information anytime:

- 1 Press the Menu button, then select Setup.
- 2 Select Preferences .
- 3 Touch Email Address.
- 4 Use the touch keyboard (see [page 6](#)) to type the email address used for your Gallery account. When finished, touch Done.
- 5 Touch The Gallery Password.
- 6 Type your Gallery account password. When finished, touch Done.

## Storing pictures and videos on an optional SD/MMC card

Your camera has 256 MB of internal memory (approximately 185 MB available for image storage)\*. You can purchase optional SD/MMC cards for removable, reusable storage for your pictures and videos (compatible up to 1 GB). The camera automatically stores pictures and videos on the card if one is inserted.

\*1 MB equals 1 million bytes, 1 GB equals 1 billion bytes.


NOTE: When using the card for the first time, format it in this camera before taking pictures or videos (see [Changing device settings, page 37](#)). We recommend Kodak SD or MMC cards.



### CAUTION:

**Insert card as shown. Do not force. Do not insert a Kodak Wi-Fi® card in the SD/MMC card slot. Doing so may damage the camera or card.**

**After taking a picture, allow time for processing before removing a card to avoid damaging your pictures, card, or camera.**

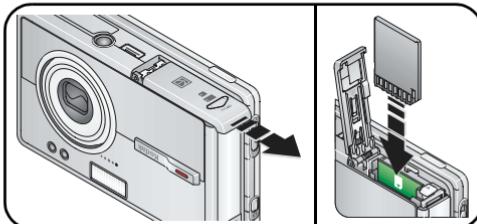

### To remove the card:


- 1 Turn off the camera.
- 2 Push the card in, then release it.
- 3 When the card is ejected, pull it out.

See [page 95](#) for storage capacities. Purchase SD/MMC cards at a dealer of Kodak products or [www.kodak.com/go/easyshare-one6mpaccessories](http://www.kodak.com/go/easyshare-one6mpaccessories).

## 2

# Taking pictures and videos

## Taking a picture

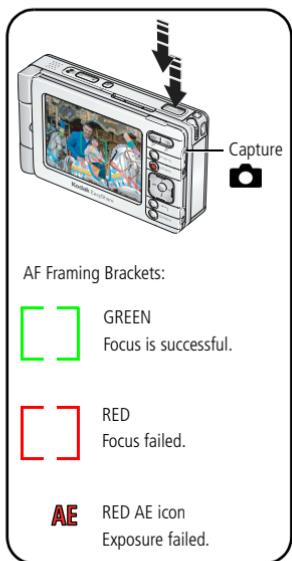

- 1 Turn on the camera (see [page 4](#)).
- 2 Slide the Capture/View switch to Capture .
- 3 Press the Menu button, then select Auto (default).
- 4 Frame your subject in the screen.
- 5 Press and hold the Shutter button **halfway** to set the Auto Focus (AF).

*When the AF framing brackets turn green, focus is successful in the region indicated.*

*If the AF framing brackets turn red, focus failed. Release the Shutter button then try again.*

*If a red AE (Auto Exposure) icon appears, exposure failed. Release the Shutter button then try again.*
- 6 Press the Shutter button **the rest of the way down** to take the picture.

**NOTE:** The camera attempts to focus on foreground subjects, even if the subjects are not centered in the scene.

The AF framing brackets are disabled for videos and some scene modes (see [page 28](#)).

- Press the OK button to turn the capture and toolbar icons off. Press again to turn them on.

## Taking a video



- 1 Turn on the camera (see [page 4](#)).
- 2 Slide the Capture/View switch to Capture .
- 3 Press the Menu button, then select Video.
- 4 Frame your subject in the screen.
- 5 Press the Shutter button completely down and release. To stop recording, press and release the Shutter button again.

- Alternatively, you can press the Shutter button completely down and hold it for more than 2 seconds to begin recording. To stop recording, release the Shutter button.

## Viewing the picture or video just taken


After you take a picture or video, a brief view, or Quickview, of the picture is displayed on the screen for several seconds. During Quickview:



\* See [Sharing pictures and videos, page 62](#).


## Overview of capture icons

Icons that appear on the screen indicate active camera and picture settings.

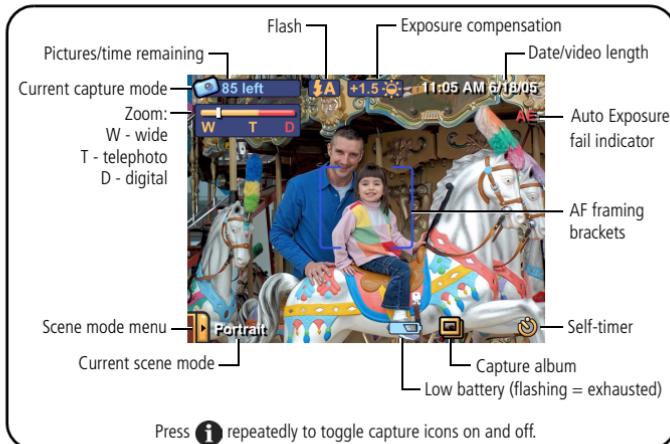

## Using optical zoom

Use optical zoom to get up to 3X closer to your subject.

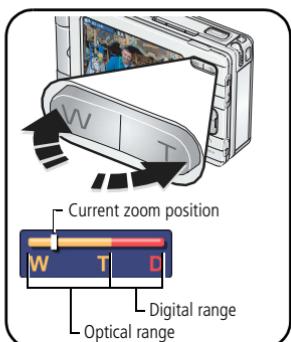

- 1 In Capture , frame your subject in the screen.
- 2 Press the Zoom Telephoto (T) button to zoom in. Press Wide Angle (W) to zoom out.  
*The zoom indicator shows zoom status.*
- 3 Take the picture or video.

## Using digital zoom

Use digital zoom to get additional 3.3X magnification beyond optical zoom. Combined zoom settings are from 3.3X to 10.0X in 0.3X increments.


NOTE: Digital zoom is disabled for videos.

You may notice decreased image quality when using digital zoom. The blue slider on the zoom indicator pauses, then turns red when the picture quality reaches the limit for an acceptable 4 x 6 in. (10 x 15 cm) print.

- 1 In Capture , frame your subject in the screen.
- 2 Press the Zoom Telephoto (T) button to the optical zoom limit. Release the button, then press it again.  
*The zoom indicator shows zoom status.*
- 3 Take the picture.

# Using the flash

Use the flash when you take pictures at night, indoors, or outdoors in heavy shadows.

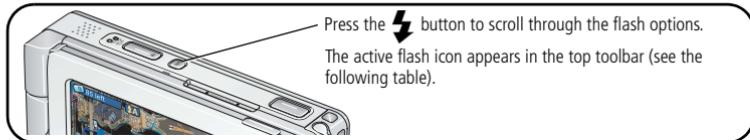

## Effective flash range:

**Wide Angle**—2–10.5 ft (0.6–3.2 m)


**Telephoto**—2–7.5 ft (0.6–2.3 m)

NOTE: Flash settings are preset for each scene mode (see [page 28](#)). Flash is disabled for videos and burst.

| Flash setting   | Flash fires   |  |
|---|---|--|
|  <b>No flash</b> | Never.  |  |
|  <b>Auto</b>     | When the lighting conditions require it.  |  |
|  <b>Red-eye</b>  | <p>If Red-eye Pre-flash is turned off:</p> <ul style="list-style-type: none"> <li>■ The flash fires once.</li> <li>■ The camera automatically corrects red-eye in the picture.</li> </ul> <p>To turn Red-eye Pre-flash on or off, see Red-eye Pre-flash under <a href="#">Changing capture settings, page 34</a>.</p> | <p>If Red-eye Pre-flash is turned on:</p> <ul style="list-style-type: none"> <li>■ The flash fires once so the subject's eyes become accustomed to the flash, then fires again when the picture is taken.</li> </ul> |
|  <b>Fill</b>    | Every time you take a picture, regardless of the lighting conditions. Use when the subject is in shadow or is "backlit" (when light is behind the subject). In low light, hold the camera steady or use a tripod.   |  |

# 3 Viewing pictures and videos

## Locating pictures and videos on your camera

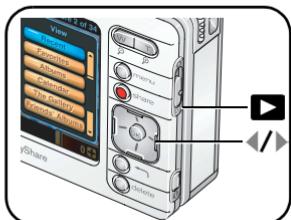

- 1 Turn on the camera (see [page 4](#)).
- 2 Slide the Capture/View switch to View .

- 3 Press the Menu button, then select a view option:

**Recent**—all pictures and videos, from newest to oldest.

**Favorites**—pictures and videos tagged as favorites (see [page 22](#)).

**Albums**—pictures and videos arranged by albums (see [page 20](#)).

**Calendar**—pictures and videos arranged by the month they were taken (according to the camera date and time—see [page 9](#)).

**The Gallery**—pictures from your albums on KODAK EASYSHARE Gallery (see [page 68](#)).

**Friends' Albums**—pictures from your friends' albums on KODAK EASYSHARE Gallery (see [page 68](#)).

**Outbox (not shown)**—pictures tagged for print or for email (see [page 74](#)).

**Storage (not shown)**—recent pictures and videos stored in internal memory or on an installed SD or MMC card, including pictures in internal memory that have been synchronized with EasyShare software (see [page 60](#)).

**Setup (not shown)**—change picture-taking settings, camera preferences, wireless network profiles, and other settings.



- 4 Press  $\Delta/\nabla \leftarrow/\rightarrow$  to locate a thumbnail of the picture, video, or album you want to view (the active selection is highlighted with a yellow border).
  - To view the selection full-screen, press the OK button or touch the selection.
  - Press the Back button,  $\leftarrow$ , to return to the previous view.
- 5 Press  $\leftarrow/\rightarrow$ , or touch the left- or right-hand portion of the image, to scroll backward or forward through pictures and videos, and also albums. (For fast scrolling, press and hold  $\leftarrow/\rightarrow$ .)

## Playing videos

- 1 Slide the Capture/View switch to View .
- 2 Select a video (the current selection is highlighted with a yellow border, and resembles a film clip, ).
  - To view the selection full-screen, press the OK button or touch the selection.
  - Press the Back button,  $\leftarrow$ , to return to the previous view.
- 3 Press the OK button to play the video.
  - To adjust the volume, press  $\Delta/\nabla$ .
  - To pause the video, press the OK button during playback.

## **Viewing picture and video information**

- 1 In View , select a picture or video.
- 2 Press the Info button, , located on the outside edge of the touchscreen display, to view and manage information about the current selection.
  - Touch  to view the picture or video caption. To add or change a caption, see [page 25](#).
  - Touch  to view albums the picture or video is assigned to. See also [Working with albums, page 20](#).
  - Touch  to view the settings used to take the picture or video.

## **Magnifying a picture**

- 1 In View , select a picture.
- 2 Press the Zoom Telephoto (T) button repeatedly to increase the magnification up to 8X or press Wide (W) to decrease it.
  - To see different parts of the picture, press  /   / .
  - To redisplay the picture at the 1X (original) size, press the Back button, .

# 4

# Organizing and editing on your camera

## Working with albums

NOTE: Album settings are automatically updated when you synchronize with EasyShare software (see page 57).

### Adding pictures and videos to albums



- 1 In View , select a picture or video.
- 2 Touch the Edit/Album icon, .
- 3 Select Album.

#### 4 To place the selected picture or video into a new album:

Touch New Album, then enter an album name using the touch keyboard.

#### To add the picture or video into an existing album:

Select the album names in which to add the picture or video.

#### 5 When finished, touch Done.

## Removing pictures and videos from albums



- 1 In View , press the Menu button.
- 2 Select Albums.
- 3 Select an album, then press the Info button,   
*The album name, contents, and other information appears.*
- 4 Select pictures and videos to remove. Touching a picture or video repeatedly adds or removes it.
- 5 When finished, touch OK.

■ Alternatively:

- 1 Select a picture or video, then press the Info button, .
- 2 Touch .
- 3 Touch albums from which to remove the picture or video. Touching an album repeatedly adds or removes the picture from the album.

## Renaming albums

- 1 In View , select an album to rename.
- 2 Press the Info button,   
*The album name, contents, and other information appears.*
- 3 Touch the album name, then change the name using the touch keyboard. When finished, touch Done.

## Tagging pictures and videos as favorites

In addition to arranging your pictures and videos using albums, you can tag pictures and videos as favorites for easy showcasing of your prized images.

NOTE: Pictures tagged as favorites are automatically transferred to and from your computer and are updated when synchronizing with EasyShare software (see [page 57](#)).

- 1 In View , select a picture or video.
- 2 Touch the Favorite icon, .  
*A blue fill appears in the Favorite icon, indicating the picture or video has been tagged as a favorite.*
  - To remove the Favorite tag, touch the Favorite icon again.
- 3 Press / and  to scroll through and tag other favorites.



To view Favorites, see [page 17](#).

## Using the drawer to select multiple pictures and videos

The drawer is a temporary location in your camera that is useful in sorting and organizing your pictures and videos. For example, you can place pictures and videos in the drawer, then touch the Favorite icon, . As a result, all the pictures and videos in the drawer are tagged as favorites on the camera (see [page 22](#)).

### To place pictures and videos into the drawer:



- 1 In View , touch the multi-select icon, , to activate the drawer.  
*The icon turns blue with a plus sign.*
- 2 Touch one or more pictures or videos to add to the drawer. (Selections are highlighted with a yellow border.)
  - To remove a picture or video from the drawer, touch it again.
  - To select or deselect a group of pictures, use the stylus to touch the screen and drag a bounding box over pictures and videos.



*The number next to the multi-select icon increases or decreases as selections are added to or removed from the drawer.*

## To view the drawer contents:

- Touch the drawer tab, , to open the drawer. Touch the tab again to close the drawer.

## To remove pictures and videos from the drawer:



- 1 With the drawer open, touch one or more pictures or videos to remove.

*Pictures and videos to be removed turn dim. The number next to the multi-select icon decreases.*

- 2 Touch the drawer tab, , to close the drawer.

*The selected pictures and videos are removed from the drawer.*

**NOTE:** Pictures and videos removed from the drawer are not deleted, and still reside in their original location on the camera. To permanently delete a picture or video, see page 27.

The drawer contents are emptied when the camera powers-off.

## To remove *all* pictures and videos from the drawer:

- With the drawer open, touch Empty.

## Adding or modifying a caption



- 1 In View , select a picture or video.
- 2 Press the Info button, , located on the lower outside edge of the touchscreen display.  
*The Picture Info screen appears.*
- 3 Touch .
- 4 Touch the text box, then use the touch keyboard to enter a caption.
- 5 When finished, press the Info button, , or the Back button, .

## Cropping pictures



- 1 In View , select a picture.
  - 2 Touch the Edit/Album icon, .
  - 3 Select Crop.
  - 4 Press Telephoto (T) to make the crop box smaller.  
Press Wide Angle (W) to make the crop box larger.  
Press / / to move the crop box.
  - 5 Press the OK button to crop the picture.  
*A new cropped image is saved to your camera. (The original image is also retained.)*
- Alternatively, you can touch and drag the crop box and touch the on-screen W - T icons to zoom in or out, as described above.

## Automatically enhancing pictures

Kodak Perfect Touch technology helps ensure better, brighter pictures.

- 1 In View , select a picture.
- 2 Touch the Edit/Album icon, .
- 3 Select Perfect Touch.

*The enhancement is previewed in a split screen. Press / to view other parts of the picture.*

- 4 Press the OK button to save as a new picture, or press the Back button, , to cancel.

NOTE: An enhanced picture cannot be enhanced again on the camera. Kodak Perfect Touch technology can only be used with pictures, not video.

## Copying pictures and videos

You can copy pictures and videos from an SD or MMC card to internal memory or from internal memory to an installed card.

Before you copy, make sure that an SD/MMC card is inserted in the camera ([page 11](#)).

- 1 In View , press the Menu button.
- 2 Select Storage, then select a storage location to view.
- 3 Select a picture or video, then touch the Edit/Album icon, . To select multiple pictures and videos, use the drawer (see [page 23](#)).
- 4 Select Copy, then select Yes to copy the picture or video to either internal memory or the card.

NOTE: Pictures and videos are copied, not moved. After copying, to remove a picture or video from its original location, find the picture or video in Storage view (see [page 17](#)), then delete it.

Tags applied for print, email, and favorites are not copied.

## **Deleting pictures, videos, and albums**

- 1** In View  , select a picture, video, or album. To select multiple pictures and videos, select an album or use the drawer (see [page 23](#)).
- 2** Press the Delete button.
- 3** Choose whether to continue by selecting Yes or No.

# 5


# Taking pictures and videos: more tips and tricks

Visit [www.kodak.com/go/esonetips](http://www.kodak.com/go/esonetips) for more information.

## Choosing a scene mode

NOTE: Scene modes are unavailable for videos.

The default scene mode is Auto. However, you can choose from a variety of scene modes to accommodate almost any picture-taking condition. The capture settings for each mode are preset to best suit the scene. To change them, see page 34.

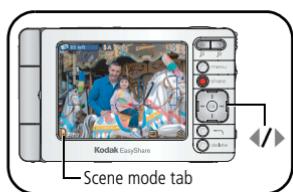

- 1 In Capture , touch the scene mode tab.
  - 2 Press / to find the scene mode that best suits your picture-taking situation. (See the following table for descriptions.)
- 3 Press the OK button to select the highlighted scene mode.  
*The scene mode remains until you leave still capture or turn off the camera.*
- Alternatively, you can press the Menu button then select Scenes to access the scene mode menu.

| Use this mode          | For  |
|------------------------|--|
| <b>Auto</b>            | General picture-taking—offers an excellent balance of image quality and ease of use. Automatically sets exposure, focus, and flash.  |
| <b>Portrait</b>        | Full-frame portraits of people. Allows the subject to be sharp and the background to be indistinct. For best results, position your subject at least 6 ft (2 m) away and fill the frame with a head-and-shoulder pose. Use zoom to exaggerate background blur. |
| <b>Sports</b>          | Subjects in motion. Uses fast shutter speed and Auto flash setting.  |
| <b>Landscape</b>       | Distant scenery. Flash does not fire.  |
| <b>Close-Up</b>        | Subjects closer than 24 in. (61 cm).   |
| <b>Night Portrait</b>  | People in night scenes or low-light conditions. Minimizes red-eye. Place the camera on a flat, steady surface or use a tripod.   |
| <b>Night Landscape</b> | Distant scenery at night. Flash does not fire. Place the camera on a flat, steady surface or use a tripod.   |
| <b>Snow</b>            | Bright snow scenes.  |
| <b>Beach</b>           | Bright beach scenes and sunlit water surfaces.   |
| <b>Text</b>            | Copying documents. Focus is close-up.  |
| <b>Fireworks</b>       | Fireworks. Flash does not fire. Place the camera on a flat, steady surface or use a tripod.  |
| <b>Flower</b>          | Close-ups of flowers or other small subjects in bright light.  |
| <b>Museum / Polite</b> | Quiet occasions, like a wedding or lecture. Flash and sound are disabled.  |
| <b>Self-Portrait</b>   | Close-ups of yourself. Assures proper focus and minimizes red-eye.   |
| <b>Party</b>           | People indoors. Minimizes red-eye.   |
| <b>Children</b>        | Action pictures of children in bright light.   |
| <b>Backlight</b>       | Subjects that are in shadow or "backlit" (when light is behind the subject).   |

## Using burst


Use burst to take pictures in rapid succession. To choose a burst setting:

Capture mode



- 1 In Capture , touch the Capture mode icon.
  - 2 Select First Burst or Last Burst (see table, below).
- To return to still capture mode, select Single Picture.
- This setting remains until you change scene modes or turn off the camera.*

NOTE: Burst settings are disabled for videos and for some scene modes.
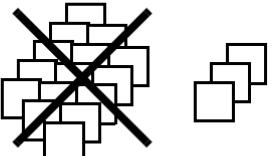
| Burst setting  | Description   |
|--|---|
| <br><b>First Burst</b><br>Capture an expected event.<br><b>Example:</b><br>A person swinging a golf club.                                   | <p>While the Shutter button is pressed, the camera takes up to three pictures in rapid succession.</p>  <p>Pictures from start of burst series are saved</p>   |
| <br><b>Last Burst</b><br>Capture an event when the precise timing is uncertain.<br><b>Example:</b><br>A child blowing out birthday candles. | <p>While the Shutter button is pressed, the camera takes pictures in rapid succession for as long as you hold the Shutter button. When the Shutter button is released, pictures at the end of the series (up to three) are saved.</p>  <p>Pictures from end of burst series are saved</p> |


NOTE: If you press Delete after taking a burst series of pictures, all pictures in the burst series are deleted.

To delete a single picture in a burst series, do so in View (see [page 27](#)).

## Changing exposure compensation

You can manually adjust the exposure for further control in different lighting conditions, such as bright backlight and other non-standard scenes. If the picture is too light, decrease the setting ▼ ; if it is too dark, increase the setting ▲ .

NOTE: Exposure compensation is disabled for videos.

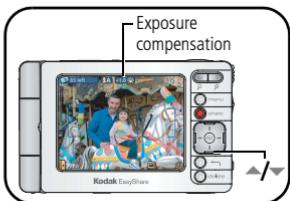

- In Capture , press ▲/▼ to adjust the exposure compensation between -2.0 to +2.0.  
*This setting remains until you change scene modes or turn off the camera.*
- Alternatively, you can touch the Exposure compensation icon repeatedly to change it.

## Using the self-timer


Use the Self-Timer to create a timed delay between the moment you press the Shutter button and the moment a picture or video is taken. (For videos, the Self-Timer is also used to set the recording duration.)

- 1 In Capture , touch the Self-Timer icon, .
- 2 Select an increment, in seconds, for the self-timer duration (default is 10 seconds).

For videos, set the video duration first:

Choose **5, 15, 30, or 60** seconds; or choose **Max**—video records as long as there is room on the SD/MMC card or internal memory, or until you press the Shutter button.

- 3 Open the touchscreen display and position it so that the screen faces the same direction as the lens.

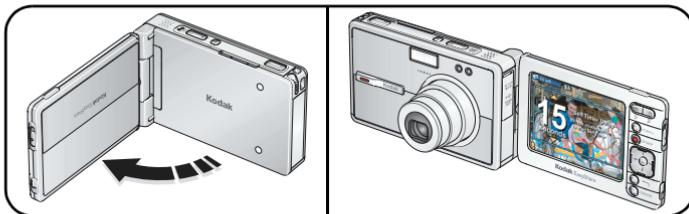

- 4 Place the camera on a flat surface or tripod and compose the scene.
- 5 Press the Shutter button **halfway and hold** to set the exposure and focus, then press **completely down**. Move into the scene.

*A countdown appears on the screen before the picture or video is taken.*

*The Self-Timer setting turns off after you take the picture or video or if you change capture modes. Video recording stops when the duration is reached or there is no storage space remaining.*

- To cancel the Self-Timer during countdown or during video recording, press the Shutter button.




## Taking overhead pictures and videos

Adjust the touchscreen display to take pictures and videos over crowds and obstacles.



**CAUTION:**

Rotate the display in the direction shown. Do not force.

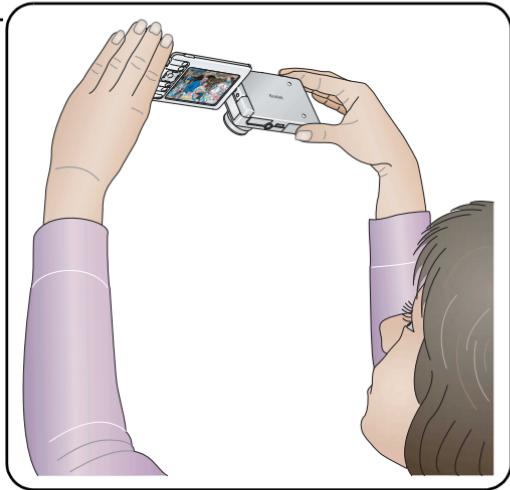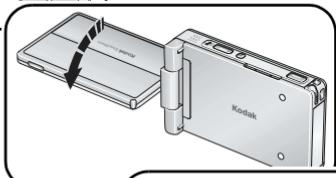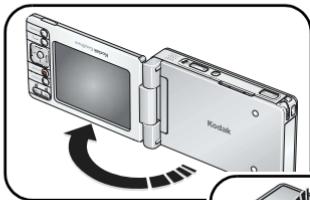

## Pre-assigning pictures to an album

You can create or assign an album in which to place your pictures and videos as you take them.

- 1 In Capture , touch the Capture album icon, .
  - 2 Touch New Album to start a new album, or touch an existing album to select it.
  - 3 Touch Done.
- A check mark appears in the Capture album icon.  
The setting remains until you change it.*
- To stop pre-assigning pictures to the album, touch the Capture album icon again.  
*The check mark in the Capture album icon disappears.*

## Changing capture settings

- 1 Press the Menu button, then select Setup.
- 2 Touch Capture .
- 3 Select a setting and option to change.

NOTE: Some capture settings are unavailable in some scene modes and videos.

| Setting   | Options  |
|---|--|
| <b>Picture Size</b><br>Choose a picture resolution.<br><i>This setting remains until you change it.</i> | <b>6.0 MP</b> (default)—for printing up to 20 x 30 in. (50 x 76 cm); pictures are highest resolution, largest file size.<br><b>5.3 MP (3:2)</b> —ideal for printing 4 x 6 in. (10 x 15 cm) prints without cropping. Also for printing up to 20 x 30 in. (50 x 76 cm).<br><b>4.0 MP</b> —for printing up to 20 x 30 in. (50 x 76 cm); pictures are medium resolution, smaller file size.<br><b>3.1 MP</b> —for printing up to 11 x 14 in. (28 x 36 cm); pictures are medium resolution, smaller file size.<br><b>1.1 MP</b> —for printing 4 x 6 in. (10 x 15 cm) prints, emailing, Internet, screen display, or for conserving space. |

| Setting  | Options  |
|--|--|
| <b>White Balance</b><br>Choose your lighting condition.<br><i>This setting remains until you change modes or turn off the camera.</i>                  | <b>Auto</b> (default)—automatically corrects white balance. Ideal for general picture-taking.<br><b>Daylight</b> —for pictures in natural lighting.<br><b>Tungsten</b> —corrects the orange cast of household light bulbs. Ideal for indoor pictures under tungsten or halogen lighting without flash.<br><b>Fluorescent</b> —corrects the green cast of fluorescent lighting. Ideal for indoor pictures under fluorescent lighting without flash. |
| <b>ISO</b><br>Control the camera's sensitivity to light.<br><i>This setting remains until you change modes or turn off the camera.</i>                 | <b>Auto (default), manual: 80, 100, 200, 400</b><br>Choose a lower ISO setting in brightly lit scenes; use a higher ISO setting in low-light scenes.   |
| <b>Date Stamp</b><br>Imprint the date on pictures.<br><i>This setting remains until you change it.</i>   | Choose a date format, or turn on Date Stamp. (Default is Off.)   |
| <b>Red-eye Pre-flash</b><br>Choose if Red-eye Pre-flash fires before a picture is taken.<br><i>This setting remains until you turn off the camera.</i> | <b>On</b> —when Red-eye flash is selected, the flash fires once before the picture is taken.<br><b>Off (default)</b> —when Red-eye flash is selected, the flash doesn't fire before the picture is taken. Instead, the camera applies internal red-eye correction to the picture.<br>To turn Red-eye flash on or off, see <a href="#">page 16</a> .  |
| <b>Color Mode</b><br>Choose color tones.<br><i>This setting remains until you change modes or turn off the camera.</i>                                 | <b>Color</b> (default)—for color pictures.<br><b>Black &amp; White</b> —for black-and-white pictures.<br><b>Sepia</b> —for pictures with a reddish-brown, antique look.<br>NOTE: EasyShare software also lets you change a color picture to black-and-white or sepia.  |

| Setting   | Options   |
|---|---|
| <b>Focus Zone</b><br>Select a large or concentrated area of focus.<br><i>This setting remains until you change it.</i>  | <b>Multi-zone</b> (default)—evaluates 3 zones to give an even picture focus. Ideal for general picture taking.<br><b>Center-zone</b> —evaluates the small area centered in the viewfinder. Ideal when precise focus of a specific area in the picture is needed.<br>NOTE: For the best pictures, the camera is set to Multi-zone when in Landscape mode.  |
| <b>Exposure Metering</b><br>Evaluate light levels at specific areas of a scene.<br><i>This setting remains until you change modes or turn off the camera.</i> | <b>Multi-pattern</b> (default)—evaluates lighting conditions throughout the image to give an optimum picture exposure. Ideal for general picture-taking.<br><b>Center-weight</b> —evaluates the lighting conditions of the subject centered in the viewfinder. Ideal for backlit subjects.<br><b>Center-spot</b> —similar to Center-weight, except the metering is concentrated on a smaller area of the subject centered in the viewfinder. Ideal when you need an exact exposure of a specific area in the picture. |
| <b>Sharpness</b><br>Control picture sharpness.<br><i>This setting remains until you change modes or turn off the camera.</i>                                  | <b>High</b><br><b>Normal</b> (default)<br><b>Low</b>  |
| <b>Continuous AF</b><br>Choose an auto-focus setting.<br><i>This setting remains until you turn off the camera.</i>   | <b>On</b> (default)—the camera continuously adjusts focus. When the Shutter button is pressed halfway, focus is locked.<br><b>Off</b> —the camera adjusts (and locks) focus only when the Shutter button is pressed halfway.  |

| Setting   | Options   |
|---|---|
| <b>Video AF</b><br>Turn auto-focus on or off for videos.<br><i>This setting remains until you change it.</i>        | <b>On</b> or <b>Off</b> (default)<br>NOTE: The auto-focus mechanism inside the camera may be audible during playback of videos. Turning off this reduces noise, but your subject may be out of focus, especially if it is moving. |
| <b>Video Zoom</b><br>Turn optical zoom on or off during videos.<br><i>This setting remains until you change it.</i> | <b>On</b> (default) or <b>Off</b><br>NOTE: Like many video cameras, the zoom mechanism inside the camera may be audible during playback of videos. Turning off this setting reduces noise but disables zoom.                      |

## Changing device settings

- 1 Press the Menu button, then select Setup.
- 2 Select Device .
- 3 Select and change settings as needed:

| Setting   | Options   |
|---|---|
| <b>Language</b>   | See <a href="#">page 7</a> .                                      |
| <b>Date &amp; Time</b>  | See <a href="#">page 9</a> .                                      |
| <b>Touchscreen Calibration</b>  | See <a href="#">page 8</a> .                                      |
| <b>Slide Show Interval</b><br>Set the duration of the interval between slides during slide show.                | <b>3</b> (default), <b>5</b> , <b>10</b> , or <b>30</b> seconds   |
| <b>LCD Backlight</b><br>Set the duration of camera inactivity before the screen dims to conserve battery power. | <b>10</b> (default), <b>20</b> , <b>30</b> , or <b>60</b> seconds |

| Setting   | Options  |
|---|--|
| <b>Orientation Sensor</b><br>Orient pictures so that they are displayed with the correct side up.   | <b>On</b> (default) or <b>Off</b>  |
| <b>Sound Theme</b>  | <b>Shutter Only, Dew</b> (default), <b>Skies, Dunes, Days</b>  |
| <b>Sound Volume</b>   | <b>Off, Low, Medium</b> (default), or <b>High</b>  |
| <b>Video Out</b><br>Choose the regional setting that lets you connect the camera to a television or other external device.  | <b>NTSC</b> (default)—used in North America and Japan; most common format.<br><b>PAL</b> —used in Europe and China.  |
| <b>About</b><br>View camera information.  |  |
| <b>Format</b><br><br> <b>CAUTION:</b><br><b>Formatting deletes all pictures and videos, including those that are protected. Removing a card during formatting may damage the card.</b> | <b>Memory Card</b> —deletes everything on the card; formats the card.<br><b>Internal Memory</b> —deletes all pictures and videos stored in internal memory; formats the internal memory (still retains email addresses and album names). |

## Changing preferences

- 1 Press the Menu button, then select Setup.
- 2 Select Preferences .
- 3 Select and change settings as needed:

| Setting  | Options                       |
|--|-------------------------------|
| Email Address  | See <a href="#">page 10</a> . |
| The Gallery Password   | See <a href="#">page 10</a> . |
| <b>The Gallery URL</b><br>Choose the domain name for EASYSHARE Gallery service for the region you live in. | See <a href="#">page 66</a> . |


# 6

# Using your camera with a Wi-Fi wireless network

## Why go wireless?

(For definitions of common wireless terms, see [page 52](#).)

Perhaps the most obvious benefit of a Wi-Fi wireless network is the absence of cables or wires to connect devices on a network. Wireless devices on a Wi-Fi wireless network use radio signals to communicate and transfer data. This flexibility makes for quick and relatively easy setup of networks. Additionally, a Wi-Fi wireless network offers great portability and accessibility to networks from locations where wired connections may not be practical or are otherwise impossible.

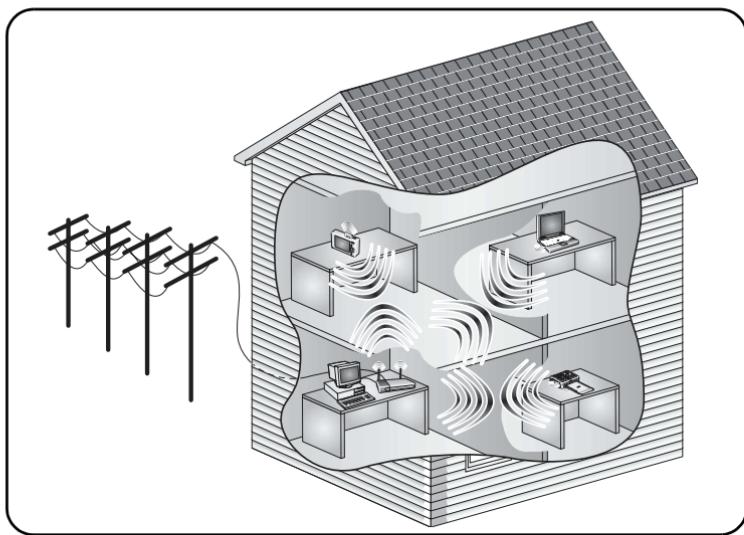

For more information, visit [www.kodak.com/go/wifisupport](http://www.kodak.com/go/wifisupport) or [www.wi-fi.org](http://www.wi-fi.org).

[www.kodak.com/go/support](http://www.kodak.com/go/support)

## **What are some of the wireless features of my camera?**

(For definitions of common wireless terms, see [page 52](#).)

The Kodak Wi-Fi® card (may be sold separately) unlocks a whole new experience in wireless network technology, allowing you to connect to a Wi-Fi wireless network\* and remotely:

- Transfer pictures to your computer with EasyShare software (see [page 57](#)).
- Email picture invitations to your friends and family (see [page 63](#)).
- Print to a Wi-Fi enabled Kodak EasyShare printer dock, photo printer, or other printer connected to a Wi-Fi wireless network (see [page 65](#)).
- Upload to, and view your pictures on KODAK EASYSHARE Gallery (see [page 66](#)).

\* Uses Wi-Fi 802.11b protocol—compatible with Wi-Fi wireless 802.11b and 802.11g networks.

NOTE: Wireless functions are only available in View .

## Types of Wi-Fi wireless networks


(For definitions of common wireless terms, see [page 52](#).)

There are generally two types of Wi-Fi wireless networks: Infrastructure networks, and device-to-device, or Ad Hoc networks.

### Infrastructure network

An Infrastructure network is a wireless network configuration commonly used in home networks and hotspots (see [page 49](#)). Data transferred between wireless devices on the network pass through a central access point (AP), such as a wireless network router.


NOTE: Kodak Wi-Fi® card may be sold separately.

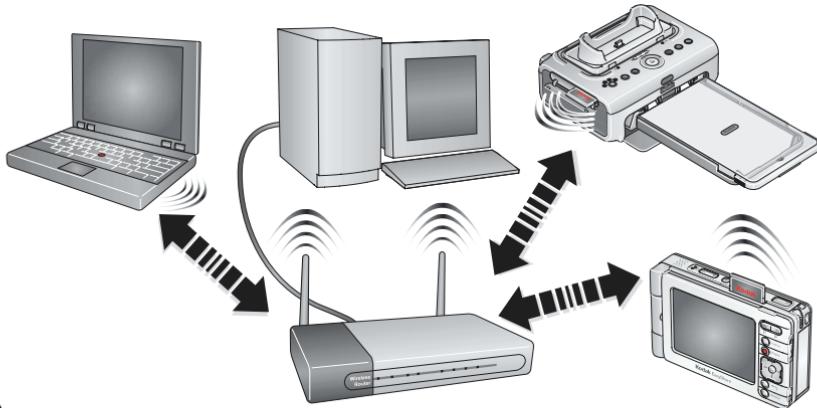

For more information, visit [www.kodak.com/go/wifisupport](http://www.kodak.com/go/wifisupport) or [www.wi-fi.org](http://www.wi-fi.org).

## **Ad Hoc network**

An Ad Hoc, or device-to-device network is a wireless network where data is transmitted directly between wireless devices on the network, without passing through an access point.

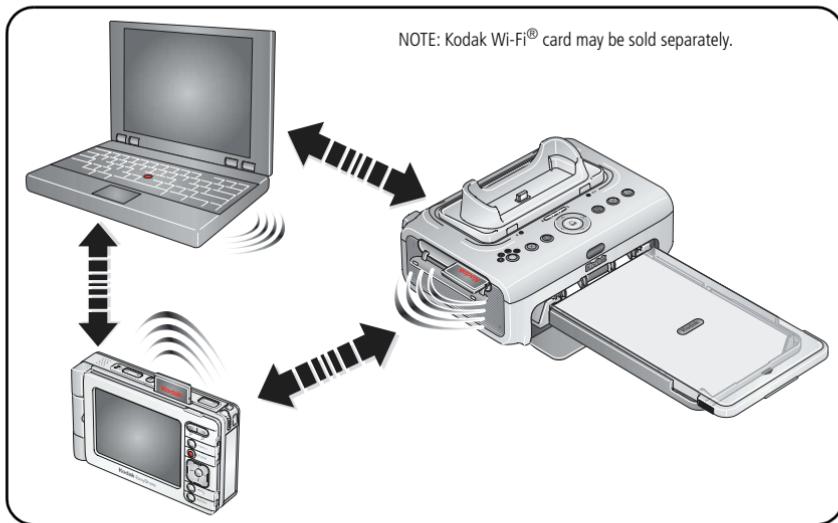

For more information, visit [www.kodak.com/go/wifisupport](http://www.kodak.com/go/wifisupport) or [www.wi-fi.org](http://www.wi-fi.org).

## **Wireless networking and the Internet**

(For definitions of common wireless terms, see [page 52](#).)

Some wireless functions on your camera, including emailing picture invitations (see [page 63](#)), and uploading & viewing pictures on EASYSHARE Gallery (see [page 66](#)) require access to the Internet. Most public networks are connected to the Internet, as are most home networks, typically through an Internet Service Provider (ISP).

## Inserting and deploying a Kodak Wi-Fi® card



### CAUTION:

Insert the Wi-Fi card as shown. Do not insert an SD or MMC card in the Wi-Fi card slot.

NOTE: Kodak Wi-Fi® card may be sold separately.



(1)



(2)

(3)



Push the card all the way in  
to the retracted position.

Push the card again so it is  
in the deployed position.

When possible, keep the Wi-Fi card in the retracted (2) position for safe-keeping and to conserve battery life. To connect to an available Wi-Fi wireless network, push the card in so that it springs back up to the deployed (3) position (see [page 45](#)).

- To remove the Wi-Fi card: from the deployed position, pull it out.

For more information, visit [www.kodak.com/go/wifisupport](http://www.kodak.com/go/wifisupport) or [www.wi-fi.org](http://www.wi-fi.org).

## Connecting to a Wi-Fi wireless network

(For definitions of common wireless terms, see [page 52](#).)

Once connected to a Wi-Fi wireless network, you can use the wireless capabilities of your camera.

**NOTE:** The range of a typical Wi-Fi wireless network can vary between 100 to 300 ft (30 to 90 m), depending on signal obstructions or other interference. Make sure you are in the vicinity of the Wi-Fi wireless network you want to connect to.

- 1 Slide the Capture/View switch to View .
- 2 Insert a Kodak Wi-Fi® card (may be sold separately) into the camera (see [page 44](#)).
- 3 Deploy the Wi-Fi card (see [page 44](#)). If the card is already deployed, touch the Wireless icon, , located on the bottom toolbar to rescan for available networks.  
*The wireless network status light (next to the Wi-Fi card slot) blinks amber as the camera scans for available networks.*
  - If one or more wireless networks are available, the camera checks for a matching network name, or SSID, from the profiles stored in the camera (see [page 47](#)):
    - If a matching SSID is found, and if the Connect Mode of the profile is set to Auto, the camera attempts to connect to the network.
    - If a matching SSID is found, and if the Connect Mode of the profile is set to Prompt, you must accept the connection before the camera attempts to connect to the network.

- If a matching profile is not on the camera, or if a matching profile exists but the Connect Mode is set to Manual, the camera screen lists the available networks. Select the network you want to connect to.

For each network on the list:

Connection type is designated with either  (Infrastructure) or  (Ad Hoc).

The presence of a padlock, , indicates the network is secure, and requires a security key to access. Enter the security key if prompted. (Ask the network administrator for this information if it is unavailable.)

Relative signal strength is indicated by the number of escalating bars, . Green bars indicate a connection to the network.

*When a connection is made, the wireless network status light glows steady green.*

- If a wireless network is not available or you are unable to connect:
  - You may be out of the signal range. Move within range.
  - The network may not be broadcasting its SSID or network name, so it does not appear as an available network on your camera. Set up a profile on your camera to match the network settings (see [page 47](#)) and try again.
  - Network settings may not match the settings in any of the profiles in your camera. Set up a profile on your camera to match the network settings (see [page 47](#)) and try again.

For other reasons that might prevent a connection, see [Wireless network connection, page 82](#).

For more information, visit [www.kodak.com/go/wifisupport](http://www.kodak.com/go/wifisupport) or [www.wi-fi.org](http://www.wi-fi.org).

## Setting up a network profile

Depending on the settings for a given Wi-Fi wireless network, you may need to create a network profile on the camera to be able to detect, then connect to it. For example, if the network is not broadcasting its SSID, or network name, the network does not appear as an available network on the camera. However, if you know the SSID and other information about the network, you can manually create a profile on the camera that will allow your camera to detect and connect to the network.

**NOTE:** When you connect to a secure network, designated by a padlock, , or if you connect to a network more than once, a profile containing the network settings is automatically created and stored on your camera.

- 1 In View , press the Menu button, then select Setup.
- 2 Select Wireless , then select Profiled Networks.
- 3 Select Add Network Profile.
- 4 Select and change settings to match the network to which you want to connect, including the SSID, Security, and other settings, as appropriate.

**NOTE:** In an Infrastructure network, you can usually view the network settings with the software program included with the router. See the router documentation for details.

You can also choose a connect mode to determine the behavior of the camera each time the Wi-Fi card (may be sold separately) is deployed:

**Auto** (default)—The camera scans for available networks. If the SSID and settings of an available network match the SSID and settings of a network profile on the camera, the camera automatically connects.

**Prompt**—The camera scans for available networks. If the SSID and settings of an available network match the SSID and settings of a network profile on the camera, you are prompted to allow or deny the connection.

**Manual**—The camera screen lists the available networks. After you select the network you want to connect to, the camera uses the SSID and settings of the matching profile on the camera to connect to the network.

**5** When finished, touch Done.

For more information, visit [www.kodak.com/go/wifisupport](http://www.kodak.com/go/wifisupport) or [www.wi-fi.org](http://www.wi-fi.org).

## Choosing or changing a network connection

If you are connected to a Wi-Fi wireless network and you want to switch the connection to a different Wi-Fi wireless network, select another available network on your camera:

- 1** In View , press the Menu button, then select Setup.
- 2** Select Wireless .
- 3** To see a list of networks that are broadcasting in your vicinity, select Available Networks.  
To see a list of networks stored on your camera, select Profiled Networks.
- 4** Select a network from the list.
  - If prompted, enter a security key code for the network. (Ask the network administrator for this information if it is unavailable.)

For more information, visit [www.kodak.com/go/wifisupport](http://www.kodak.com/go/wifisupport) or [www.wi-fi.org](http://www.wi-fi.org).

## Connecting to public hotspots

A hotspot is a location that provides free or fee-based public wireless broadband Internet service to mobile visitors. Hotspots can be found in places such as airports, libraries, coffee shops, and hotels.

NOTE: The requirements for connecting to public hotspots vary. If you have trouble connecting to a particular hotspot, ask the network administrator or operator of the hotspot about specific requirements or settings that may be required to connect. Connection to some hotspots may not be supported by the camera.

## Connecting to a fee-based hotspot

Fee-based hotspots usually require an account with specific network settings and a username and password to gain access.

Contact the fee-based service provider or visit the provider Web site to enroll in a hotspot account plan. For information on Kodak partner service providers, visit [www.kodak.com/go/wifisupport](http://www.kodak.com/go/wifisupport).

NOTE: Your camera contains one or more pre-configured network profiles for Kodak partner hotspot service providers. Sites that use unique or non-standard methods for authentication may not be supported.

To connect to a fee-based hotspot:

- At the hotspot location, slide the Capture/View switch to View , then deploy the Wi-Fi card (see [page 44](#)). (Wi-Fi card may be sold separately.) If the card is already deployed, touch the Wireless icon, , located on the bottom toolbar.

*The wireless network status light (next to the Wi-Fi card slot) blinks amber as the camera scans for available networks.*

The first time you try to connect, enter your account information for the hotspot provider:

- a Select the provider name from the list. If the hotspot provider name is not shown, select Other.

- b** Enter your username for the provider hotspot account.

If prompted, enter the domain name for your hotspot provider.

NOTE: If you chose Other from the list of hotspot providers, you may be required to enter your username in the form of *providername/username@domainname*. Check with the service provider for details.

- c** Enter your password for the provider hotspot account.

*When a connection is made, the wireless network status light glows steady green.*

## Connecting to a free hotspot

Access to free hotspots is usually gained in one of three ways:

- Connection without authentication—The network SSID is broadcast; the camera scans, discovers, then connects to the network and your KODAK EASYSHARE Gallery account.
- Connection with authentication (limited support)—Access to the network is granted after entering account information for the provider.  
NOTE: Sites that use unique or non-standard methods for authentication may not be supported.
- Connection with license agreement or welcome page (not supported)—Access to the network is granted after accepting a license agreement or acknowledgement. Since the camera interface does not support general Web browsing, it is not capable of displaying site license agreements or welcome pages.

To connect to a free hotspot:


- At the hotspot location, slide the Capture/View switch to View , then deploy the Wi-Fi card (see [page 44](#)). (Wi-Fi card may be sold separately.) If the card is already deployed, touch the Wireless icon, , located on the bottom toolbar.

*The wireless network status light (next to the Wi-Fi card slot) blinks amber as the camera scans for available networks.*

The first time you try to connect, select the provider name from the list. If the hotspot provider name is not shown, select Other.

*When a connection is made, the wireless network status light glows steady green.*

## Key to the wireless status icon and network status light

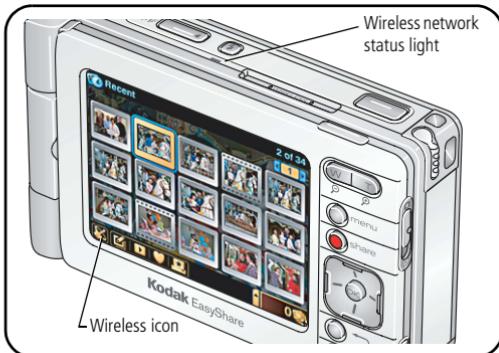

See [page 44](#) for Wi-Fi card positions (Wi-Fi card may be sold separately).

| Color / behavior |                      | Indicates...   |
|------------------|----------------------|--|
| Wireless icon    | Network status light |  |
| None             | Off                  | Camera power is off or Wi-Fi card is not inserted; no network connection                                     |
|                  | Off                  | Wi-Fi card is retracted (fully inserted); no network connection  |
|                  | Amber                | Wi-Fi card is deployed; no network connection  |
|                  | Amber / blinking     | Wi-Fi card is deployed; scanning for available networks  |
|                  | Green                | Wi-Fi card is deployed; connected to network   |
|                  | Green                | Wi-Fi card is deployed; connected to network with limited connectivity (dynamic IP address was not received) |
|                  | Red / blinking       | Wi-Fi card error; remove and reinsert Wi-Fi card   |

## Glossary of common wireless network terms

**Access point**—(Also called AP.) A wireless network transceiver or “base station” hub, often used to connect a local area network to one or more wireless devices. An access point can also provide a communication link to a wired local area network.

**Ad Hoc**—A client setting for a wireless local area network that allows devices connected to the network to communicate with one another directly, independent of an access point or router.

**Bridge**—A product that connects a local area network to another local area network that uses the same protocol (for example, wireless, Ethernet or token ring). Wireless bridges are commonly used to link buildings in campuses.

**Client**—An application on a computer or device connected to a network that requests services (files, print capability) from another connected computer or device on the network.

**Device-to-device**—See Ad Hoc.

**DHCP**—Dynamic Host Configuration Protocol: a utility that enables a server to dynamically assign IP addresses from a predefined list and limit their time of use so they can be reassigned. Without DHCP, an IT Manager would have to manually enter in all the IP addresses of all the clients on the network. With DHCP, whenever a client connects to the network, it automatically gets an IP address assigned to it.

**DNS**—Domain Name System (or Service, or Server): a program that translates domain names to IP addresses by accessing a database maintained on a collection of Internet servers. The program works behind the scenes to facilitate surfing the Web with alpha versus numeric addresses. A DNS server converts a name like mywebsite.com to a series of numbers like 107.22.55.26. Every Web site has its own specific IP address on the Internet.

**Domain name**— The portion of a URL or Web address that identifies a specific Web site. For example, the domain name portion of the URL *http://www.kodak.com* is *kodak.com*.

All domain names have a suffix that indicates the top level domain (TLD) it belongs to. Examples include:

com: US commercial business  
gov: US government agency  
edu: US educational institution  
mil: US military organization  
net: US network organization  
org: US nonprofit organization  
au: Australia  
br: Brazil  
ca: Canada  
de: Germany  
do: Dominican Republic  
es: Spain  
fr: France  
it: Italy  
nl: Netherlands  
pr: Puerto Rico  
pt: Portugal  
ru: Russian Federation  
uk: United Kingdom

**DSL**—Digital Subscriber Lines: various technology protocols for high-speed data, voice and video transmission over ordinary twisted-pair copper POTS (Plain Old Telephone Service) telephone wires.

**Dynamic IP address**—An IP address assigned to a client, each time the client connects to the network. The dynamic IP address is configured by the DHCP server and can be different each time the client connects to the network.

**Encryption key**—An alphanumeric (letters and/or numbers) series that enables data to be encrypted then decrypted so it can be safely shared among members of a network. WEP uses an encryption key that automatically encrypts outgoing wireless data. On the receiving side, the same encryption key enables the computer to automatically decrypt the information so it can be read.

**Hotspot**—A hotspot is a location that provides free or fee-based public wireless broadband Internet service to mobile visitors. Hotspots can be found in places such as airports, libraries, coffee shops, and hotels.

**Infrastructure**—A client setting for a local area network that allows devices connected to the network to communicate with one another through a central access point or router. This configuration is commonly used in wireless home networks and hotspots.

**IP**—Internet Protocol: technology that supports voice, data and video transmission via IP-based local area networks, wide area networks, and the Internet. This includes VoIP (Voice over IP).

**IP address**—A number that identifies each sender or receiver of information that is sent across the Internet.

**Network name**—Identifies the wireless network for all the shared components. During the installation process for most wireless networks, you need to enter the network name or SSID. Different network names are used when setting up your individual computer, wired local area network, or workgroup.

**Passphrase**—A text string used for WPA security on a Wi-Fi wireless network. A passphrase may contain up to 31 alphanumeric characters, including spaces and other special characters.

NOTE: A passphrase used for WPA security is not the same as a WEP key, nor is it the same as a passphrase commonly found in router software that is used to generate a WEP key.

**Router**—An access point (AP) or hub that sends data from one local area network (LAN) or wide area network (WAN) to another. A router monitors and controls data flow and sends information using the most efficient route based on traffic load, line costs, speed, bad connections, etc.

**SSID**—Service Set Identifier: also referred to as a network name, since it is essentially a name that identifies a wireless network. The identifier is attached to the wireless local area network (WLAN) and acts as an identifier when a device tries to connect to the system. A device will not be permitted to join the network unless it can provide the unique SSID. An SSID can be broadcast by the network router, allowing devices to detect it as an available network. An SSID does not supply security to the network.

**SSL**—Secure Sockets Layer: a commonly used encryption scheme used by many online retail and banking sites to protect the financial integrity of transactions.

**TCP/IP**—The underlying technology behind the Internet and communications between computers in a network.

**URL**—Uniform Resource Locator: also referred to as a Web address, since it identifies the location of a file or resource on the Web. For example, the URL for the Eastman Kodak Company Web site is <http://www.kodak.com>.

**WEP**—Wired Equivalent Privacy: basic wireless security provided by Wi-Fi. In some instances, WEP may be all a home or small-business user needs to protect wireless data. WEP is available in 40-bit (also called 64-bit), or in 108-bit (also called 128-bit) encryption modes. As 108-bit encryption provides a longer algorithm that takes longer to decode, it can provide better security than basic 40-bit (64-bit) encryption.

**WEP key**—A text string used for WEP security on a Wi-Fi wireless network. A WEP key with 10 or 23 characters can include numbers and the letters A - F, and are not case-sensitive. 5 and 13 character WEP keys can include numbers and all letters (as well as some special characters), and are case sensitive.

**WPA**—Wi-Fi Protected Access: a Wi-Fi security standard that provides a high level of wireless network security. It uses data encryption through the Temporal Key Integrity Protocol (TKIP). TKIP scrambles the keys and ensures that the keys haven't been tampered with. User authentication is performed through the Extensible Authentication Protocol (EAP), to ensure that only authorized network users can access the network.

**Wi-Fi**—Wireless Fidelity: a term developed by the Wi-Fi Alliance commonly used to describe any type of 802.11 standard wireless network. Products tested and approved as "Wi-Fi Certified" (a registered trademark) by the Wi-Fi Alliance are certified as interoperable with each other, even if they are from different manufacturers.

For more information, visit [www.kodak.com/go/wifisupport](http://www.kodak.com/go/wifisupport) or [www.wi-fi.org](http://www.wi-fi.org).

# 7

# Synchronizing and transferring to a computer

Connect your camera to a computer to synchronize (or "sync") with or transfer pictures and videos to your computer.

Synchronizing with Kodak EasyShare software is an easy way to organize and match the pictures on your camera with the pictures on your computer (and vice versa). More than just transferring pictures from your camera to your computer, synchronizing lets you:

- Copy Favorites from EasyShare software on your computer to your camera\*
- Synchronize picture and album information between the camera and EasyShare software
- Update the date and time on your camera with the date and time on your computer
- Synchronize address book information between your camera and EasyShare software

\* If this option is selected, recently taken pictures and videos on your camera are also transferred to EasyShare software. To save storage space, EasyShare software replaces the original pictures on your camera with lower-resolution versions. These pictures are suitable for printing 4 x 6 in. (10 x 15 cm) prints.

When you connect to EasyShare software with the USB cable to your computer, updates are exchanged between EasyShare software and your camera, according to your EasyShare software sync & transfer preferences. Click the Help button in the Kodak EasyShare software for details.

Of course, you can always transfer pictures and videos without synchronizing. The Transfer feature lets you copy the pictures and videos of your choosing to your EasyShare software collection on your computer. What's more, with a Kodak Wi-Fi® card (may be sold separately), you can transfer pictures over a Wi-Fi wireless network.

## Installing the software



### CAUTION:

**Install Kodak EasyShare software before connecting an EasyShare camera or dock to the computer. Failure to do so may cause the software to load incorrectly.**

- 1 Close all software applications that are open on your computer (including anti-virus software).
- 2 Place the Kodak EasyShare software CD into the CD-ROM drive.
- 3 Load the software:

**Windows OS**—if the install window does not appear, choose Run from the Start menu and type **d:\setup.exe** where **d** is the drive letter that contains the CD.

**Mac OS X**—double-click the CD icon on the desktop, then click the Install icon.

- 4 Follow the on-screen instructions to install the software.

When prompted, register your camera and software. Registering lets you sign up for information that keeps your system up-to-date. To register later, visit [www.kodak.com/go/register](http://www.kodak.com/go/register).

Also, enter your KODAK EASYSHARE Gallery account information or create a new account. Providing this information lets you take advantage of many wireless features of your camera.

## Setting up your camera for sync and transfer

Your camera can transfer pictures and videos to any computer running EasyShare software. However, to ensure consistent organization of images and information, your camera stores an internal identifier that allows it to synchronize with only one computer. This identifier is established and sent to your camera through the sync & transfer settings in EasyShare software.

The first time you connect to a computer using the USB cable, you are prompted to select a sync & transfer option. Choose an option that best suits your situation (you may change these options in EasyShare software later):

**Yes, synchronize with my software**—recommended if installing on a single or "primary" computer. Each time you connect your camera with a USB cable, recently taken pictures and videos are automatically transferred to your computer. In addition, images, albums, date & time, and address book information are updated on your computer and on the camera according to the synchronization options you set in EasyShare software.

**No, only transfer my pictures**—recommended if installing on an additional, or "secondary" computer. Each time you connect your camera with a USB cable, pictures and videos are transferred to your computer. Synchronization is disabled.

NOTE: After the initial connection between your camera and your computer has been established, synchronization or transfer is automatic when connecting with a USB cable (see [page 60](#)). When connecting to EasyShare software over a Wi-Fi wireless network, the synchronization option is not available, and transfer can only be performed using the Transfer feature on your camera (see [page 61](#)).

**IMPORTANT:** *To avoid unintentional deletion of pictures and videos, make sure synchronization is disabled for additional computers on which you install EasyShare software. Follow the prompts closely during software installation and when connecting to your computer. Click the Help button in the Kodak EasyShare software for details.*


## Sync and transfer with a USB connection

When you connect your camera to a computer using the USB cable, synchronization or transfer starts automatically, depending on which option you choose the first time you connect your camera. You can change this setting in EasyShare software any time. Click the Help button in the Kodak EasyShare software for details.



### CAUTION:

**Install Kodak EasyShare software before connecting the camera to the computer. Failure to do so may cause the software to load incorrectly.**

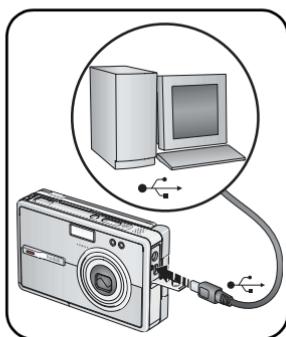

- 1 Install Kodak EasyShare software (see [page 58](#)).
- 2 Turn off the camera.
- 3 Plug the labeled  end of the USB cable into the labeled USB port on your computer. See your computer user's guide for details.
- 4 Plug the other end of the USB cable into the labeled USB port on the camera.
- 5 Turn on the camera and follow the instructions on the computer screen.

The first time you connect to your computer, the setup assistant guides you through the connection setup process. Choose a sync & transfer option when prompted (see [page 59](#)).

*Pictures and videos on your camera are synchronized with or transferred to your computer according to the sync & transfer settings in EasyShare software.*

To view the pictures and videos on your camera that have been synchronized with EasyShare software:

- 1 In View , press the Menu button then select Storage
- 2 Select Synchronized.

## Wireless transfer of your pictures and videos

You can transfer the pictures and videos on your camera to EasyShare software on your computer over a Wi-Fi wireless network using a Kodak Wi-Fi® card (may be sold separately).

**IMPORTANT:** *Make sure your computer is on and you are logged-in. In EasyShare software, make sure the Enable Wireless Connection option is checked (under Tools > Preferences > Wireless). Click the Help button in the Kodak EasyShare software for details.*

- 1 Connect to the same wireless network as the computer you want to transfer pictures and videos to (see [page 45](#)).
- 2 In View , select a picture or video. To select multiple pictures and videos, select an album or use the drawer (see [page 23](#)).
- 3 Press the Share button on the camera, then select Transfer.

*The camera checks for available computers running EasyShare software on the Wi-Fi wireless network.*

- 4 If one or more computers running EasyShare software are available, on your camera select the computer you want to transfer your pictures and videos to.
  - If prompted, select an authentication option on your computer to authorize your camera to transfer. Click the Help button in the Kodak EasyShare software for details.
  - The first time you connect to your computer, choose a sync & transfer option on your computer when prompted (see [page 59](#)).

*Transfer starts, and a message appears on the camera screen indicating the transfer status.*

**NOTE:** If the camera is also connected via the USB cable when attempting wireless transfer, pictures are transferred to the computer through the USB connection.

See [Using your camera with a Wi-Fi wireless network, page 40](#) for more information.

# 8

# Sharing pictures and videos

With the Kodak EasyShare-One zoom digital camera, sharing pictures with your family and friends has never been more convenient. In addition to giving you several ways to print and email your pictures, the brilliant 3 in. (7.6 cm) hybrid LCD touchscreen lets you show-off your pictures and videos from the palm of your hand.

For even greater versatility, connect to the Internet on a Wi-Fi wireless network to view your pictures on KODAK EASYSHARE Gallery. Coupled with the ability to store up to 1500 images (optimized for viewing on the camera), your Kodak EasyShare-One camera is the ultimate personal sharing device.

## Do it from your camera—just press Share!



Press the Share button to print and email pictures, to upload pictures online to KODAK EASYSHARE Gallery, and to transfer pictures and videos to your computer.

### 1 Press the Share button:

- In Capture , to share the most recent picture or video taken.
- In View , to share the pictures and videos you select.

### 2 Select a Share option:

**Email**—send pictures and videos over the Internet (see [page 63](#)).

**Prints**—print pictures right away over a Wi-Fi wireless network, or tag them for printing at a later time (see [page 65](#)).

**Upload**—add pictures to your KODAK EASYSHARE Gallery albums (see [page 66](#)).

**Transfer**—transfer pictures to your computer (see [page 70](#)).

**Slide Show**—watch a slide show of your albums (see [page 70](#)).

**Setup**—change camera settings.

## Sending email over a Wi-Fi wireless network

Use the email feature to invite your family and friends to view your pictures and videos.

NOTE: Your camera uses an Internet connection and KODAK EASYSHARE Gallery to email pictures remotely.

- 1 Deploy the Wi-Fi card (may be sold separately) to scan for available networks (see [page 44](#)).
- 2 In View , select a picture or video. To select multiple pictures and videos, select an album or use the drawer (see [page 23](#)).
- 3 Press the Share button, then select Email. Touch Start to begin.
- 4 Touch a name from the list, or touch Add Person to create a new entry.
- 5 Use the touch keyboard to enter a subject and a message.
- 6 When finished, touch Done.

*If connected to an available Wi-Fi wireless network with Internet connection, an email message inviting the recipients to view your pictures and videos on the Gallery is sent. If a network with Internet connection is not available, the email is placed in the outbox (see [page 74](#)).*

NOTE: The first time you email the selected pictures, a new album is created in your KODAK EASYSHARE Gallery account. To email invitations to view albums already stored in your Gallery collection, see [page 69](#).

See [Using your camera with a Wi-Fi wireless network, page 40](#), or visit [www.kodak.com/go/wifisupport](http://www.kodak.com/go/wifisupport) for more information.

## Creating and managing an address book

- 1 Press the Menu button, then select Setup.
- 2 Select Contacts .
- 3 Touch a name from the list, or touch Add Person to enter a new name. Use the touch keyboard to enter contact information, including email address.

NOTE: You can also create and manage an address book using EasyShare software on your computer, then synchronize to update your camera (see [page 57](#)). Click the Help button in the Kodak EasyShare software for details.

## Creating and managing group lists

- 1 Press the Menu button, then select Setup.
- 2 Select Groups .
- 3 Touch a group from the list, or touch Add Group to enter a new group.
- 4 Use the touch keyboard to enter a group name, then select contacts from your address book to add to the group.

NOTE: You can also create and manage an address book using EasyShare software on your computer, then synchronize to update your camera (see [page 57](#)). Click the Help button in the Kodak EasyShare software for details.

## Printing pictures to a Wi-Fi enabled EasyShare printer

Your camera contains a pre-configured device-to-device network profile that lets you print pictures directly to a Wi-Fi enabled Kodak EasyShare printer dock or photo printer.

- 1** Deploy the Wi-Fi card (may be sold separately) to scan for available networks (see [page 44](#)).
  - If prompted, select the network the Kodak Wi-Fi enabled printer is connected to. If the Kodak Wi-Fi enabled printer is not configured for a network, select Kodak Device-to-Device from the list of available networks.
- 2** In View , select a picture or video. To select multiple pictures and videos, select an album or use the drawer (see [page 23](#)).
- 3** Press the Share button, then select Prints.
- 4** Press / to select the number of copies to print.
- 5** When finished, press the OK button or touch Done.
  - If prompted, select an available printer.

*If connected to a Wi-Fi wireless network with one or more Wi-Fi enabled Kodak EasyShare printers, the print is sent to the printer you select. Otherwise, the picture is placed in the outbox (see [page 74](#)).*

NOTE: For the best 4 x 6 in. (10 x 15 cm) prints, set the camera to the (3:2) Picture Size setting (see [page 34](#)).

See [Using your camera with a Wi-Fi wireless network, page 40](#), or visit [www.kodak.com/go/wifisupport](http://www.kodak.com/go/wifisupport) for more information.

## Accessing KODAK EASYSHARE Gallery from your camera

With a Kodak Wi-Fi® card (may be sold separately) and available Wi-Fi wireless network with Internet connection, you can logon to your EASYSHARE Gallery account. After you've logged-in, you can upload, view, and email pictures right from your camera.

Join the KODAK EASYSHARE Gallery online at [www.kodakgallery.com/one](http://www.kodakgallery.com/one). Then, enter your account information on your camera (see [page 10](#)).

### Setting the Gallery URL

The first time you make a wireless Internet connection and try to access EASYSHARE Gallery with your camera, you are prompted to choose the proper URL, or domain name, for the region you live in. Follow the directions on the screen.

To change it at a later time:

- 1 Press the Menu button, then select Setup.
- 2 Select Preferences .
- 3 Touch EASYSHARE Gallery URL.
- 4 Select the URL for the region you live in.

## Uploading pictures and videos to the Gallery

- 1 Make sure the account settings on your camera match your EASYSHARE Gallery account settings (see [page 10](#)).
- 2 Connect to a Wi-Fi wireless network with Internet connection (see [page 40](#)).
  - The first time you connect to EASYSHARE Gallery, select your regional online picture service URL, or domain name, when prompted. (To change your regional domain name after setting it, see [page 66](#).)
- 3 In View , select a picture or video. To select multiple pictures and videos, select an album or use the drawer (see [page 23](#)).
- 4 Press the Share button, then select Upload.

*The camera checks for an Internet connection and regional EASYSHARE Gallery service.*

- If an Internet connection and Gallery service are available, the camera connects to the Gallery. Follow the instructions on the screen.  
*A message appears on the screen indicating the upload status.*
- If an Internet connection or Gallery service are not available, try again when and where these are available.

## Viewing pictures on the Gallery

- 1 Make sure the account settings on your camera match your EASYSHARE Gallery account settings (see [page 10](#)).
  - 2 Connect to a Wi-Fi wireless network with Internet connection (see [page 40](#)).
    - The first time you connect to EASYSHARE Gallery, select your regional online picture service URL, or domain name, when prompted. (To change the URL after setting it, see [page 66](#).)
  - 3 In View , press the Menu button.
  - 4 Select The Gallery to view your albums, or select Friends' Albums to view the albums of others that have been saved to your account.
- The camera checks for an Internet connection and regional EASYSHARE Gallery service.*
- If an Internet connection and Gallery service are available, the camera connects to the Gallery, and lets you view your albums and pictures.
  - If an Internet connection or Gallery service are not available, try again when and where services are available.



NOTE: When viewing Gallery images from your camera, video files appear as an image of a question mark in a cloudy sky. Viewing Gallery videos from your camera is not supported. View Gallery videos from your computer instead.

## Viewing a slide show of your pictures on the Gallery

While viewing pictures in your EASYSHARE Gallery collection, touch the Slide show icon,

*Pictures from the current album are displayed every 3 seconds. The slide show repeats after it cycles through all images in the album.*

- To move forward or backward through the slide show order, press /.
- To pause the slide show, press . To resume, press / /.
- To end the slide show any time, touch the screen or press the OK button.
- To view the slide show on your TV, connect the camera to the TV (see [page 71](#)), then run the slide show.



**NOTE:** When viewing Gallery images from your camera, video files appear as an image of a question mark in a cloudy sky. Viewing Gallery videos from your camera is not supported. View Gallery videos from your computer instead.

## Emailing from the Gallery

- 1 While viewing albums in your EASYSHARE Gallery collection (see [page 68](#)), select an album, then press the Share button.
- 2 Select Email.
- 3 Touch a name from the list, or touch Add Person to enter a new name.
- 4 Use the touch keyboard to enter a subject and a message.
- 5 When finished, touch Done.

*An email message inviting the recipients to view your pictures and videos on the Gallery is sent.*

## Transferring pictures and videos to a computer

You can transfer pictures and videos from your camera to any computer that has EasyShare software installed. Use the USB cable to transfer automatically, or select pictures on your camera then select Transfer from the Share menu to transfer over your Wi-Fi wireless network.

See [Synchronizing and transferring to a computer, page 57](#).

## Viewing a slide show

- 1 In View , press the Menu button, then select a view option (see [page 17](#)).

- 2 Press the Share button, then select Slide Show. Or, touch the Slide show icon, .

*Pictures and videos from the album are displayed every 3 seconds. The slide show repeats after it cycles through all images in the album.*

- To move forward or backward through the slide show order, press /.
- To pause the slide show, press . To resume, press / /.
- To end the slide show any time, touch the screen or press the OK button.
- To view the slide show on your TV, connect the camera to the TV (see [page 71](#)), then run the slide show.

NOTE: The display switches from the camera screen to the TV screen when a connection is made. Use the 4-way controller /  
/ to control the camera functions when connected to a TV.

## More ways to share your pictures and videos

### Displaying pictures and videos on a television

You can display pictures and videos on a television, computer monitor, or any device equipped with a video input. (Image quality on a television screen may not be as good as on a computer monitor or when printed.)

NOTE: Ensure that the Video Out setting (NTSC or PAL) is correct (see this Video Out under [Changing device settings, page 37](#)). If you are viewing a slide show (see [page 70](#)), the slide show stops if you connect or disconnect the cable during the slide show.

- 1 Connect the audio/video cable (included) from the camera A/V Out/USB port to the television video-in port (yellow) and audio-in port (white). See your television user's guide for details.

NOTE: The display switches from the camera screen to the TV screen when a connection is made. Use the 4-way controller  to control the camera functions when connected to a TV.

- 2 View pictures and videos on the television.

### Emailing pictures from your computer

Use EasyShare software on your computer to send pictures over the Internet to your friends and family.

Or, you can use EasyShare software to quickly set up an address book or a group list. Then, the next time you synchronize your camera with EasyShare software (see [page 57](#)), the address book and group lists you created are added to your camera. For details, click the Help button in the Kodak EasyShare software.

## Using the quick print option



Touch the Quick print icon, , to print a single copy of the selected picture over your Wi-Fi wireless network to a printer on the same network (see [Using your camera with a Wi-Fi wireless network, page 40](#)).

If you are not connected to a Wi-Fi wireless network, or if a printer is not available, pictures tagged for printing are placed in the outbox (see [page 74](#)).

## Docking and printing on a Kodak EasyShare printer dock

Dock your camera to a compatible EasyShare printer dock and print directly—with or without a computer (see [Dock compatibility, page 97](#)).

In addition, you can print to a Wi-Fi enabled Kodak EasyShare printer dock or photo printer directly over a Wi-Fi wireless Ad Hoc network connection. For more information about the Wi-Fi wireless capabilities of your camera, see [page 40](#).

## Printing from your computer

For details on printing pictures from your computer, click the Help button in the Kodak EasyShare software or view the documentation for the software application you want to print from.

## Printing from an optional SD/MMC card

- Automatically print tagged pictures when you insert your card into a printer with an SD/MMC card slot. See [page 77](#) and your printer user's guide for details.
- Make prints at an SD/MMC card-capable Kodak picture maker/picture kiosk. (Contact a location prior to visiting. See [www.kodak.com/go/picturemaker](http://www.kodak.com/go/picturemaker).)
- Take the card to your local photo retailer for professional printing.

## **Visit EASYSHARE Gallery from your computer**

Discover a world of sharing options when you access EASYSHARE Gallery on the Internet using your computer. KODAK EASYSHARE Gallery is one of several online print services offered in the Kodak EasyShare software. You can easily:

- Upload your pictures to albums on KODAK EASYSHARE Gallery.
- Edit, enhance, and add borders to your pictures.
- Store pictures, and share them with family and friends.
- Order high-quality prints, photo greeting cards, frames, and albums—and have them delivered to your home, or to the homes of your friends and family. EASYSHARE Gallery will even address the envelopes and mail them for you.

Join the KODAK EASYSHARE Gallery online at [www.kodakgallery.com/one](http://www.kodakgallery.com/one).

## The outbox

When sending email over a Wi-Fi wireless network (see [page 63](#)), if a Wi-Fi wireless network with Internet service or regional online picture service is not available, pictures tagged for email are placed in the outbox for future delivery.

Similarly, when printing over a Wi-Fi wireless network (see [page 65](#)), if a Wi-Fi enabled EasyShare printer dock or photo printer is not available, pictures tagged for printing are placed in the outbox for future delivery.

When an applicable service becomes available, you can use the outbox to submit pending email or print requests.

### Sending email

- 1 Connect to a Wi-Fi wireless network with Internet connection (see [page 40](#)).
- 2 Press the Menu button, then select Outbox.



- 3 Select Send Email Order.  
*A message appears on the screen indicating current activity and status.*
- 4 Touch Done.  
*Emails are sent and are removed from the outbox.*

- Alternatively, you can send the email order by synchronizing with EasyShare software on your computer (see [page 57](#)).

## Viewing or changing email in the outbox

- 1 In View  , press the Menu button, then select Outbox.
- 2 Select Edit Emails.  
*Pending emails are displayed.*
- 3 Press  to highlight the email entry you want to modify.
- 4 Press the OK button or touch the selection, then press Start to modify the email details and/or recipients.

## Removing email from the outbox


- 1 In View  , press the Menu button, then select Outbox.
- 2 Select Edit Emails.
- 3 Press  to highlight the email entry you want to delete, then press the Delete button.

*The picture is removed from the outbox. (The picture is not deleted from the original location on the camera.)*

NOTE: The accompanying email text message is also deleted.

## Sending pictures for print

- 1 Connect to a Wi-Fi wireless network (see [page 40](#)).
- 2 Press the Menu button, then select Outbox.

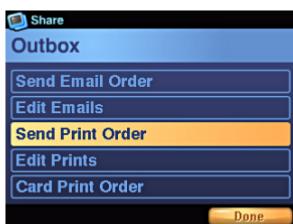

- 3 Select Send Print Order.

*A message appears on the screen indicating current activity and status.*

- 4 Touch Done.

*Pictures are sent to the printer and are removed from the outbox.*

- Alternatively, you can send the print order by synchronizing with EasyShare software on your computer (see [page 57](#)).

## Viewing or changing a print order

- 1 In View , press the Menu button, then select Outbox.
- 2 Select Edit Prints.

*The first picture in the pending print order is displayed.*

- 3 Press / to view the pictures in the print order. For the picture displayed, press / to change the number of copies to print.

## Removing pictures from a print order

- 1 In View , press the Menu button, then select Outbox.
- 2 Select Edit Prints.
- 3 Select a picture then press / to set the print quantity to zero.
- 4 Press the Back button, , to exit.

NOTE: The picture is not deleted from the original location on the camera.

## Creating a print order on a memory card

Another way to print pictures stored in the outbox is by using them to create a print order on an SD or MMC card. Once a print order has been created, simply remove the card from your camera, then insert it into an SD/MMC card-capable Kodak picture maker/picture kiosk or a compatible EasyShare printer dock or photo printer (with card reader).

**NOTE:** To ensure pictures you select for print are placed in the outbox rather than printed immediately, avoid connecting the camera to your computer or to a Wi-Fi wireless network. For best results, keep the Wi-Fi card retracted (see [page 44](#)) while selecting pictures.

**1** Make sure an SD or MMC memory card is inserted in the camera (see [page 11](#)).

**2** In View , select a picture *located on the memory card*.

**NOTE:** A print order can only be created with pictures on the memory card. To include pictures from internal memory in the print order, first copy them to the card (see [page 26](#)).

**3** Press the Share button, then select Prints.

**4** Press  to select the number of copies to print, then press the OK button.

Repeat steps 2-4 for each picture you want to add to the print order.

**5** Press the Menu button, then select Outbox.

**6** Select Card Print Order.

**7** Follow the instructions on the screen. When finished touch Done.

*The print order is created on the memory card.*

### Deleting the print order from the card

**1** In View , press the Menu button, then select Outbox.

**2** Press  to highlight Card Print Order.

**3** Press the delete button

# 9

# Troubleshooting

## Camera

For step-by-step product support, visit [www.kodak.com/go/easyshare-one6mpsupport](http://www.kodak.com/go/easyshare-one6mpsupport) and select Interactive Troubleshooting & Repairs.

| Problem  | Possible causes and/or solutions   |
|--|--|
| Camera does not turn on  | <ul style="list-style-type: none"><li>■ Remove the battery and verify that it is the correct type. Before reinserting, be sure the battery is oriented so that the battery contacts line-up with the contacts inside the battery slot on the camera (<a href="#">page 3</a>).</li></ul>  |
| Camera does not turn off and the lens does not retract               | <ul style="list-style-type: none"><li>■ With the touchscreen display in the open position (<a href="#">page 4</a>), place the camera on a compatible Kodak EasyShare camera dock or printer dock (sold separately), then try again.</li></ul>  |
| Camera buttons and controls do not function                          | <ul style="list-style-type: none"><li>■ Connect the camera to a Kodak 5-volt AC adapter (sold separately), then try again.</li></ul> <p><a href="#">See page 101</a> for more battery information.</p>   |
| Lens does not extend when camera turns on                            | <ul style="list-style-type: none"><li>■ Camera may be in View  . Slide the Capture/View switch to the Capture  position to extend lens and take pictures.</li><li>■ Remove the battery and wipe the contacts with a clean, dry cloth.</li><li>■ Insert a charged battery (<a href="#">page 3</a>).</li><li>■ Turn the camera off then on again (<a href="#">page 4</a>).</li></ul> |
| Pictures remaining number does not decrease after you take a picture | <ul style="list-style-type: none"><li>■ Continue taking pictures. The camera is operating normally. (The camera estimates the number of pictures remaining after each picture is taken, based on picture size and content.)</li></ul>  |
| Picture orientation is not accurate                                  | <ul style="list-style-type: none"><li>■ Set the Orientation Sensor to ON (see Orientation Sensor under <a href="#">Changing device settings, page 37</a>).</li><li>■ The camera lens is pointing straight up or straight down. Tilt camera slightly to allow the camera to better detect orientation.</li></ul>  |

| Problem  | Possible causes and/or solutions   |
|--|--|
| Flash does not fire                                    | <ul style="list-style-type: none"><li>■ Check the flash setting and change as needed (<a href="#">page 16</a>).</li></ul>  |
| Storage location is almost or entirely full            | <ul style="list-style-type: none"><li>■ Transfer pictures and videos to the computer (<a href="#">page 57</a>).</li><li>■ Delete unwanted pictures and videos, or insert a new SD/MMC card (<a href="#">page 11</a>).</li><li>■ Change the image storage location to internal memory by removing the SD/MMC card.</li></ul>  |
| You cannot take a picture                              | <ul style="list-style-type: none"><li>■ Slide the Capture/View switch to the Capture  position.</li><li>■ Turn the camera off, then on again (<a href="#">page 4</a>).</li><li>■ Depress the shutter button completely down (<a href="#">page 12</a>).</li><li>■ Insert a new or charged battery (<a href="#">page 3</a>).</li><li>■ Wait until the AF framing brackets turn green before attempting to take another picture (<a href="#">page 12</a>).</li></ul> |
| Cannot locate a picture                                | <ul style="list-style-type: none"><li>■ Slide the Capture/View switch to the View  position and press the Menu button to choose an appropriate view option.</li><li>■ The picture may have been transferred to EasyShare software during synchronization, and removed from your camera. Check the sync &amp; transfer settings in your EasyShare software. Click the Help button in the Kodak EasyShare software for details.</li></ul>                           |
| Slide show does not run on an external video device    | <ul style="list-style-type: none"><li>■ Adjust the camera Video Out setting (see Video Out under <a href="#">Changing device settings, page 37</a>).</li><li>■ Make sure that the external device settings are correct (see the device's user's guide).</li></ul>  |
| Memory card not recognized or camera freezes with card | <ul style="list-style-type: none"><li>■ Card may be corrupt. Format card in camera (see Format under <a href="#">Changing device settings, page 37</a>).</li><li>■ Use another SD/MMC card.</li></ul>  |
| A memory card is inserted in the Wi-Fi card slot       | <ul style="list-style-type: none"><li>■ Using a separate memory card to remove it: with contacts facing out, insert the card into the Wi-Fi card slot. Gently push the card against the inserted card to unseat it from the connector. Remove the card by inverting the camera.</li></ul>  |

## Picture quality

| Problem              | Possible causes and/or solutions   |
|----------------------|--|
| Picture is too dark  | <ul style="list-style-type: none"> <li>■ Reposition the camera for more available light.</li> <li>■ Use Fill flash (<a href="#">page 16</a>) or change your position so light is not behind the subject.</li> <li>■ Move so that the distance between you and the subject is within the effective flash range (<a href="#">page 16</a>).</li> <li>■ To automatically set exposure and focus, press the Shutter button <b>halfway</b>. When the AF framing brackets turn green, press the Shutter button <b>completely down</b> to take the picture.</li> <li>■ Increase the exposure compensation (<a href="#">page 31</a>).</li> </ul>                      |
| Picture is too light | <ul style="list-style-type: none"> <li>■ Reposition the camera to reduce the amount of available light.</li> <li>■ Turn flash off (<a href="#">page 16</a>).</li> <li>■ Move so that the distance between you and the subject is within the effective flash range (<a href="#">page 16</a>).</li> <li>■ To automatically set exposure and focus, press the Shutter button <b>halfway</b>. When the AF framing brackets turn green, press the Shutter button <b>completely down</b> to take the picture.</li> <li>■ Decrease the exposure compensation (<a href="#">page 31</a>).</li> </ul>  |
| Picture is not clear | <ul style="list-style-type: none"> <li>■ Select a scene mode that matches the scene you are trying to capture (<a href="#">page 28</a>).</li> <li>■ To automatically set exposure and focus, press the Shutter button <b>halfway</b>. When the AF framing brackets turn green, press the Shutter button <b>completely down</b> to take the picture.</li> <li>■ Clean the lens (<a href="#">page 102</a>).</li> <li>■ Make sure the camera is not in Close-up mode if you are more than 21 in. (0.7 m) from your subject.</li> <li>■ Place the camera on a flat, steady surface or use a tripod, especially in high-zoom settings or in low light.</li> </ul> |

| Problem   | Possible causes and/or solutions   |
|---|--|
| When viewing pictures on the camera, an image of a question mark in a cloudy sky appears instead of a picture:<br><br> | <ul style="list-style-type: none"><li>■ If the image appears while browsing pictures on KODAK EASYSHARE Gallery, either:<ul style="list-style-type: none"><li>– The file on the Gallery is a video file. Viewing Gallery videos from your camera is not supported. View Gallery videos from your computer instead.</li><li>– The image data is not accessible from your camera. View the file on your computer instead.</li></ul></li><li>■ If the image frequently appears when connected to a Wi-Fi wireless network, it may indicate a weak Wi-Fi signal. Move closer to the Wi-Fi access point to improve the signal strength.</li><li>■ The image on your camera is a file format other than jpeg (.jpg) and cannot be displayed.</li></ul> |

## USB connection to computer

| Problem   | Possible causes and/or solutions   |
|---|--|
| Computer does not communicate with the camera   | <ul style="list-style-type: none"><li>■ Turn on the camera (<a href="#">page 4</a>).</li><li>■ Turn on, or "wake-up" the computer.</li><li>■ Insert a charged battery (<a href="#">page 3</a>).</li><li>■ Make sure the USB cable is securely connected on the camera and the computer port (<a href="#">page 59</a>).</li><li>■ Make sure that EasyShare software is installed (<a href="#">page 58</a>).</li></ul> |
| Pictures and videos do not transfer to computer | <ul style="list-style-type: none"><li>■ Click the Help button in the EasyShare software.</li></ul>   |

## Wireless network connection

| Problem   | Possible causes and/or solutions  |
|---|---|
| <p>Camera cannot connect to the wireless network — "Camera could not connect" appears</p> | <ul style="list-style-type: none"> <li>■ Make sure a Kodak Wi-Fi® card is correctly inserted in the camera.</li> <li>■ Make sure the camera is turned on and has adequate battery power.</li> <li>■ Make sure the wireless router and network are running <b>before</b> the camera begins scanning for a network.</li> <li>■ Make sure you are within the operating range of the network.</li> <li>■ Check for sources of interference in the wireless signal, such as a microwave oven or a cordless telephone.</li> <li>■ Make sure the network profile settings on your camera match those of the network. In an Infrastructure network, you can usually view the network settings with the software program included with the router or through the interface of a connected device. See the router or device documentation for details.</li> </ul> <p>If possible, note the following settings for the network, then change the profile settings on your camera to match them:</p> <ul style="list-style-type: none"> <li>– SSID</li> <li>– Wi-Fi mode (Infrastructure or Ad Hoc)</li> <li>– Security (none, WEP, or WPA-PSK)</li> <li>– Dynamic IP (yes or no)</li> <li>– Proxy (usually present in corporate or business settings)</li> <li>– Connect Mode (yes - ask before connecting, or no - connect automatically)</li> </ul> <p>NOTE: Many wireless network routers employ the use of a WEP passphrase for generating a WEP security key code. If WEP security is enabled for the network, make sure the key code, <b>not</b> the passphrase, is entered in the security settings for the network profile on the camera.</p> |

(Continued on next table)

| Problem  | Possible causes and/or solutions  |
|--|---|
| <p>(Continued from previous table)</p> <p>Camera cannot connect to the wireless network — "Camera could not connect" appears</p> | <ul style="list-style-type: none"><li>■ If using a router, check with the manufacturer for a possible firmware update.</li><li>■ Make sure your camera is using the latest firmware. Check <a href="http://www.kodak.com/go/easyshare-one6mpdownloads">www.kodak.com/go/easyshare-one6mpdownloads</a> for updates.</li></ul>  |
| <p>Camera cannot connect to the wireless network — "Limited connectivity" appears</p>  | <p>The wireless router did not assign a valid network IP address to the camera. Check and change the router settings, as indicated below. You can usually view the network settings with the software program included with the router.</p> <ul style="list-style-type: none"><li>■ Enable DHCP on the router.</li><li>■ Change the setting on router to allow both 802.11b and 802.11 g Wi-Fi protocols.</li><li>■ Change router settings to allow enough IP addresses for the number of wireless devices on the network.</li><li>■ Disable MAC filtering on the router.</li><li>■ Temporarily disable the QoS (Quality of Service) setting on the router.</li><li>■ Check with the router manufacturer for a possible firmware update.</li></ul> <p>See the router documentation for details.</p> |
| <p>Camera cannot connect to the wireless network, or the connection is lost — "Wi-Fi card has become unavailable" appears</p>    | <ul style="list-style-type: none"><li>■ Make sure you are within the operating range of the network.</li><li>■ Check for sources of interference in the wireless signal, such as a microwave oven or a cordless telephone.</li><li>■ The camera battery is too low for the Wi-Fi card to effectively receive a signal. Replace the battery with a fully-charged one.</li><li>■ Disable MAC filtering on the router. See the router documentation for details.</li></ul>   |

| Problem  | Possible causes and/or solutions  |
|--|---|
| Camera cannot connect to a hotspot —<br>"Camera could not connect" appears     | <ul style="list-style-type: none"><li>■ The requirements for connecting to public hotspots vary. Ask the hotspot administrator about specific authentication requirements or settings that may be required in order to connect. Connection to some hotspots may not be supported by the camera.</li></ul> <p data-bbox="340 314 891 366">See <i>Camera cannot connect to the wireless network</i>, above, for other possible causes and/or solutions.</p>   |
| Camera cannot perform wireless share functions or connect to EASYSHARE Gallery | <ul style="list-style-type: none"><li>■ The Gallery URL, account email address, or account password on the camera are incorrect.</li><li>■ The proxy setting on the camera is incorrect (if required).</li><li>■ Make sure the wireless router is connected to the Internet and an Internet connection is available.</li><li>■ The Gallery or online picture service is temporarily unavailable. Try again later.</li><li>■ There may not be an EASYSHARE Gallery service in the region you are in.</li><li>■ If the problem occurs within a hotspot, ask the hotspot administrator about specific authentication requirements or settings that may be required in order to connect to the Internet. Internet connectivity at some hotspots may not be supported by the camera.</li></ul> <p data-bbox="340 783 935 835">See <i>Camera cannot connect to the wireless network</i>, above, for other possible causes and/or solutions.</p> |

| Problem  | Possible causes and/or solutions   |
|--|--|
| Camera cannot connect to EasyShare software — "Camera cannot connect to the expected EasyShare software or expected network" appears | <ul style="list-style-type: none"><li>■ Authentication in EasyShare software is needed the first time you try to connect. Click the Help button in the Kodak EasyShare software for details.</li><li>■ The Enable Wireless Connection option in EasyShare software is not checked (under Tools &gt; Preferences &gt; Wireless).</li><li>■ EasyShare software is not running. Open EasyShare software. Once open, you may close the active session; however, make sure the Kodak logo appears in the system tray.</li><li>■ EasyShare software is not installed. Load the EasyShare software CD that came with the camera, or download it from the Web (<a href="http://www.kodak.com/go/easysharesw">www.kodak.com/go/easysharesw</a>).</li><li>■ The EasyShare software is an older version that doesn't support wireless service. Load the EasyShare software from the CD that came with the camera, or download the latest software from the Web (<a href="http://www.kodak.com/go/easysharesw">www.kodak.com/go/easysharesw</a>).</li><li>■ The network SSID is not being broadcast. Using the software program included with the router or through the interface of a connected device, note the network SSID (see the router or device documentation for details). Enter the SSID in the network profile on the camera.</li><li>■ The camera battery is too low for the Wi-Fi card to effectively receive a signal. Replace the battery with a fully-charged one.</li><li>■ The computer is on a different network. Set the network profile settings on your camera to match those of the network.</li><li>■ The camera is connected to the wrong wireless router using the same setting.</li><li>■ See <i>Camera cannot connect to the wireless network</i>, above, for other possible causes and/or solutions.</li></ul> |

## Synchronization and transfer

**NOTE:** Synchronization is not possible over a Wi-Fi wireless network. Synchronize with your computer using the USB cable.

| Problem   | Possible causes and/or solutions  |
|---|---|
| Synchronization/transfer is interrupted or does not start | <ul style="list-style-type: none"> <li>■ The computer has entered standby or hibernation.</li> <li>■ The camera is disconnected (during authentication and setup), possibly due to: <ul style="list-style-type: none"> <li>– the camera turning off</li> <li>– a weak signal (pertains to transfer only)</li> <li>– interference, such as a microwave oven or a cordless telephone (pertains to transfer only)</li> <li>– the wireless router shutting down (pertains to transfer only)</li> <li>– the Wi-Fi card being improperly inserted (pertains to transfer only)</li> </ul> </li> <li>■ Synchronization/transfer is not set in EasyShare software (see EasyShare software Help for details).</li> <li>■ Set up and authenticate the camera on EasyShare software (see EasyShare software Help for details).</li> </ul> |
| Synchronization/transfer is slow                          | <ul style="list-style-type: none"> <li>■ The network is slow possibly due to: <ul style="list-style-type: none"> <li>– a weak signal (pertains to transfer only)</li> <li>– interference, such as a microwave oven or a cordless telephone (pertains to transfer only)</li> </ul> </li> <li>■ The computer is slow, possibly due to: <ul style="list-style-type: none"> <li>– processing of other tasks</li> <li>– full disk space</li> <li>– low processor speed</li> </ul> </li> <li>■ The wireless router is set to a slow transfer rate (pertains to transfer only).</li> </ul>   |
| Incomplete transfer or missing images                     | <ul style="list-style-type: none"> <li>■ There is not enough disk space left on the computer.</li> <li>■ The transfer was interrupted (see above).</li> </ul>   |

## Printing

| Problem  | Possible causes and/or solutions  |
|--|---|
| Printing does not start                          | <p>NOTE: The EasyShare-One camera is not PictBridge compatible. As such, a USB connection to Kodak EasyShare printer docks and photo printers is not supported. However, you can dock the camera on an EasyShare printer dock (see <a href="#">page 97</a>), or print remotely to a Wi-Fi enabled EasyShare printer.</p> <ul style="list-style-type: none"><li data-bbox="320 353 571 379">■ The printer power is off.</li><li data-bbox="320 388 919 440">■ The printer is busy printing or is engaged in another session, or has a full buffer.</li><li data-bbox="320 449 781 475">■ The printer is in an error state. Correct the error.</li><li data-bbox="320 484 878 536">■ The IP address setting on the camera or printer is incorrect. Change the IP address or set to Dynamic IP.</li><li data-bbox="320 545 929 622">■ If printing directly to a Wi-Fi enabled EasyShare printer, check to make sure the printer, camera, and computer (if using one) network settings match.<br/>Check for other problems with the wireless network (see <a href="#">page 82</a>).</li></ul> |
| Printing stops or is not complete                | <ul style="list-style-type: none"><li data-bbox="320 691 888 744">■ The printer was disconnected from the camera, computer, or network in mid-print.</li></ul>  |
| Camera prints to the wrong Wi-Fi enabled printer | <ul style="list-style-type: none"><li data-bbox="320 757 935 866">■ The selected printer has the same name as the intended one, and is on the same network. Change the name of one of the printers using the printer configuration utility. See the printer user's guide for details</li></ul>  |

# Getting help

## Camera

|  |  |
|--|--|
| See online demonstrations of your camera's features                            | <a href="http://www.kodak.com/go/howto">www.kodak.com/go/howto</a>   |
| Get support for your product (FAQs, troubleshooting information, etc.)         | <a href="http://www.kodak.com/go/easyshare-one6mpsupport">www.kodak.com/go/easyshare-one6mpsupport</a>         |
|  | <a href="http://www.kodak.com/go/wifisupport">www.kodak.com/go/wifisupport</a>                                 |
| Download the latest camera firmware and software                               | <a href="http://www.kodak.com/go/easyshare-one6mpdownloads">www.kodak.com/go/easyshare-one6mpdownloads</a>     |
| Purchase camera accessories (camera docks, printer docks, lenses, cards, etc.) | <a href="http://www.kodak.com/go/easyshare-one6mpaccessories">www.kodak.com/go/easyshare-one6mpaccessories</a> |
| Email, write, or phone Kodak   | <a href="http://www.kodak.com/go/contact">www.kodak.com/go/contact</a>   |

## Software

|  |   |
|--|---|
| Get information on EasyShare software  | <a href="http://www.kodak.com/go/easysharesw">(or see Help in EasyShare software)</a> |
| Get help with the Windows operating system and working with digital pictures | <a href="http://www.kodak.com/go/pcbasics">www.kodak.com/go/pcbasics</a>              |

## Other

|  |  |
|--|--|
| Get support for cameras, software, accessories, more | <a href="http://www.kodak.com/go/support">www.kodak.com/go/support</a>           |
| Get information on Kodak EasyShare printer docks     | <a href="http://www.kodak.com/go/printerdocks">www.kodak.com/go/printerdocks</a> |
| Get information on Kodak inkjet products             | <a href="http://www.kodak.com/go/inkjet">www.kodak.com/go/inkjet</a>             |
| Optimize your printer for truer, more vibrant colors | <a href="http://www.kodak.com/go/onetouch">www.kodak.com/go/onetouch</a>         |
| Register your camera                                 | <a href="http://www.kodak.com/go/register">www.kodak.com/go/register</a>         |

## Troubleshooting

---

If you have questions concerning this product, you may speak with Kodak customer support.

|           |                |                         |                                       |
|-----------|----------------|-------------------------|---------------------------------------|
| Australia | 1800 147 701   | Netherlands             | 020 346 9372                          |
| Austria   | 0179 567 357   | New Zealand             | 0800 440 786                          |
| Belgium   | 02 713 14 45   | Norway                  | 23 16 21 33                           |
| Brazil    | 0800 891 42 13 | Philippines             | 1 800 1 888 9600                      |
| Canada    | 1 800 465 6325 | Poland                  | 00800 4411625                         |
| China     | 800 820 6027   | Portugal                | 021 415 4125                          |
| Denmark   | 3 848 71 30    | Russia                  | 8 495 929 9166                        |
| Ireland   | 01 407 3054    | Singapore               | 800 6363 036                          |
| Finland   | 0800 1 17056   | Spain                   | 91 749 76 53                          |
| France    | 01 55 1740 77  | Sweden                  | 08 587 704 21                         |
| Germany   | 069 5007 0035  | Switzerland             | 01 838 53 51                          |
| Greece    | 00800 44140775 | Taiwan                  | 0800 096 868                          |
| Hong Kong | 800 901 514    | Thailand                | 001 800 631 0017                      |
| India     | 91 22 617 5823 | Turkey                  | 00800 448827073                       |
| Italy     | 02 696 33452   | United Kingdom          | 0870 243 0270                         |
| Japan     | 03 5540 9002   | United States           | 1 800 235 6325<br>585 781 6231 (toll) |
| Korea     | 00798 631 0024 | International Toll Line | +44 131 458 6714                      |
|           |                | International Toll Fax  | +44 131 458 6962                      |

## Notice of Limitations to Wireless Support

Kodak Service and Support *will* assist you with:

- Installing and setting up Kodak EasyShare software, version 5.2 or higher
- Using and setting up the Kodak EasyShare-One zoom digital camera, or a Wi-Fi enabled Kodak EasyShare printer dock or photo printer on an Infrastructure or Ad Hoc Wi-Fi wireless network

Kodak Service and Support cannot assist you with:

- Installing or setting up a wireless Infrastructure network
- Installing or setting up wireless cards or equipment not manufactured by Kodak
- Installation or setting up drivers or software not manufactured by Kodak
- Problems with your Internet connection, or cable, DSL, or dial-up equipment
- Problems with your Internet Service Provider

Before calling for wireless problems with the Kodak EasyShare-One zoom digital camera, please make sure you have a working Wi-Fi wireless network, and if possible, have the following information for your network available:

- SSID
- Wi-Fi mode: Infrastructure or device-to-device (Ad Hoc)
- Security (none, WEP, or WPA-PSK)
- Dynamic IP (yes or no)
- Proxy (usually present in corporate or business settings)
- Connect Mode (yes - ask before connecting, or no - connect automatically)

For problems setting up your wireless network, please contact the manufacturer of your wireless network equipment, or contact your network administrator for assistance.

# 10 Appendix

## Camera specifications

For more specifications, visit [www.kodak.com/go/easyshare-one6mpsupport](http://www.kodak.com/go/easyshare-one6mpsupport).

| <b>EasyShare-One zoom digital camera specifications</b> |   |
|---|---|
| <b>Image sensor</b>                                     |   |
| CCD   | 1/2.5 in. (Total 2934 x 2171 pixels, 6.4 MP); 4:3 aspect ratio  |
| Image quality modes<br>(Picture Size options)           | 6.0 MP: 2832 x 2128 pixels<br>5.3 MP (3:2): 2832 x 1888 pixels<br>4.0 MP: 2304 x 1728 pixels<br>3.1 MP: 2048 x 1536 pixels<br>1.1 MP: 1200 x 900 pixels |
| <b>Display</b>  |   |
| Color display   | 3.0 in. (7.6 cm) hybrid LCD, 960 x 240 (230K - RGB) pixels,<br>Touchscreen  |
| Preview   | Frame rate: 30 fps<br>Field-of-view: 100%. Continuous AF, AE, AWB   |
| <b>Lens</b>   |   |
| Taking lens   | 3X optical zoom, f/2.8–4.8,<br>36–108 mm (35 mm film camera equivalent)   |

| <b>EasyShare-One zoom digital camera specifications</b> |  |
|---|--|
| Focus system  | Auto focusing, TTL-AF, Multi-Zone<br>TTL-AF locked at halfway shutter press in Capture<br>Working range:<br>24 in. (60 cm)–infinity @ wide and telephoto normal<br>4–28 in. (10–70 cm) @ wide macro<br>17–28 in. (43–70 cm) @ telephoto macro<br>33 ft (10 m)–infinity in Landscape mode |
| Digital zoom  | 1.0–3.3X with 0.3X step<br>Not supported for video   |
| Accessory lens thread                                   | Not supported  |
| Lens cover  | Yes, in camera   |
| <b>Exposure</b>   |  |
| Exposure metering                                       | TTL-AE<br>Multi-pattern AE, Center-weight, Center-spot AE<br>AE (@ still) locked at halfway shutter press, Continuous AE (@ video and preview)   |
| Exposure range  | AE Range (@ wide): EV 5.4–15.3 (1/8 sec. @ f/2.8 to 1/1400 sec. @ f/4.7)<br>Full Range (@ wide): EV 1.4–15.3 (4 sec. @ f/2.8 to 1/1400 sec. @ f/4.7)   |
| Exposure compensation                                   | ±2.0 EV with 0.3 EV step   |
| Shutter   | Mechanical shutter with CCD electrical shutter<br>1/1448–1/2 sec.  |
| ISO speed   | Auto, manual: 80, 100, 200, 400  |

| <b>EasyShare-One zoom digital camera specifications</b>                               |   |
|---|---|
| <b>Flash</b>  |   |
| Electronic flash  | Guide no. 8.0 @ ISO 100<br>Auto flash<br>2–10.5 ft (0.6–3.2 m) @ Wide<br>2–7.5 ft (0.6–2.3 m) @ Tele  |
| Flash modes   | Auto, Fill, Red-eye, Off  |
| <b>Capture</b>  |   |
| Scene modes   | Auto, Portrait, Sports, Landscape, Close-Up, Night Portrait, Night Landscape, Snow, Beach, Text, Fireworks, Flower, Museum/Polite, Self-Portrait, Party, Children, Backlight                  |
| Burst mode  | 1.5 fps; maximum 3 pictures<br>AE, AF, AWB executed for first shot only   |
| Video capture   | Image size: VGA (640 x 480)<br>Frame rate: 30 fps   |
| Image file format   | Still: EXIF 2.21 (JPEG compression), file organization DCF<br>Video: QuickTime (CODEC MPEG4)  |
| Image storage   | Optional MMC or SD Card  , 1 GB maximum capacity<br>(The SD logo is a trademark of the SD Card Association.) |
| Internal storage capacity   | 256 MB internal memory/185 MB available for image storage<br>(1 MB equals one million bytes)  |
| <b>View</b>   |   |
| Quickview   | Yes   |
| Video output  | NTSC or PAL, via model AV-8 AV cable  |
| <b>Power</b>  |   |
| Kodak Li-Ion rechargeable digital camera battery KLIC-5000<br>5V AC adapter, optional |   |

| <b>EasyShare-One zoom digital camera specifications</b>   |   |
|---|---|
| <b>Communication with computer</b>  |   |
| USB 2.0 full speed (PIMA 15740 protocol), via model U-8 USB cable, EasyShare camera dock, or EasyShare printer dock |   |
| IEEE802.11b (Wi-Fi), via Kodak® Wi-Fi card (may be sold separately)   |   |
| <b>Other features</b>   |   |
| Wireless capability of camera   | Compliance: IEEE 802.11b (Wi-Fi), RCR STD-33, ARIB STD-T66<br>Transmission rate: 1/2/5.5/11Mbps (auto-detect)<br>Frequency range: 2412-2462 MHz (1 - 11 channel ISM band)<br>Access modes: Infrastructure, Ad Hoc<br>Security: 64/128 bit WEP, WPA-PSK (TKIP), WPA-EAP (TTLS-PAP)   |
| Wireless capability of Kodak Wi-Fi® card (may be sold separately)   | Card type: SD Input/Output Card (SDIO; specification Ver 1.00 compliant)<br>Compliance: IEEE 802.11b (Wi-Fi), RCR STD-33, ARIB STD-T66<br>Transmission rate: 1/2/5.5/11Mbps (auto-detect)<br>Frequency range: 2412-2462 MHz (1 - 11 channel ISM band)<br>Modulation Technique: Direct Sequence Spread Spectrum (CCK,DQPSK,DBPSK)<br>Operation: 3.3 V via device<br>Dimensions: 24 x 40 x 2.1 mm<br>Device compatibility: Wi-Fi technology enabled Kodak EasyShare devices<br>Software compatibility: Kodak EasyShare software version 5.2 or higher |
| PictBridge support  | No  |
| Self-timer  | Selectable, from 2 to 30 seconds  |
| Sound feedback  | Power up, shutter release, self-timer, error; on or off selectable.   |
| White balance   | Auto, Daylight, Tungsten, Fluorescent   |
| Power save  | Selectable LCD auto-dimmer, auto power off after 8 minutes  |

| EasyShare-One zoom digital camera specifications |   |
|--|---|
| Color modes                                      | Color, black & white, sepia   |
| Sharpness modes                                  | High, normal, low   |
| Date stamp                                       | None, YYYY/MM/DD, MM/DD/YYYY, DD/MM/YYYY                            |
| Tripod mount                                     | 1/4 in.   |
| Operating temperature                            | 32 to 104 ° F (0 to 40 ° C)   |
| Size   | 4.1 in. (10.3 cm) x 1.0 in. (2.6 cm) x 2.5 in. (6.3 cm) @ power off |
| Weight   | 8 oz (225 g) without battery or cards                               |

## Storage capacities

Actual storage capacity varies depending on subject composition, card brand, and other factors. You may be able to store more or fewer pictures and videos. Favorites take up additional space in internal memory.

### Picture storage capacity


|                         | Number of pictures |              |        |        |        |
|-------------------------|--------------------|--------------|--------|--------|--------|
|                         | 6.0 MP             | 5.3 MP (3:2) | 4.0 MP | 3.1 MP | 1.1 MP |
| <b>Internal memory*</b> | 102                | 114          | 150    | 186    | 451    |
| <b>32 MB SD/MMC</b>     | 16                 | 18           | 24     | 30     | 73     |
| <b>64 MB SD/MMC</b>     | 33                 | 37           | 48     | 60     | 146    |
| <b>128 MB SD/MMC</b>    | 66                 | 74           | 97     | 121    | 293    |
| <b>256 MB SD/MMC</b>    | 133                | 149          | 196    | 242    | 588    |
| <b>512 MB SD/MMC</b>    | 266                | 298          | 392    | 485    | 1176   |
| <b>1 GB SD/MMC</b>      | 533                | 596          | 784    | 970    | 2352   |

\*Internal memory can store up to 1500 images, tagged as Favorites, optimized for viewing on the camera.

## Video storage capacity

|                        | Minutes/seconds of video |
|------------------------|--------------------------|
| <b>Internal memory</b> | 6 min. 21 sec.           |
| <b>32 MB SD/MMC</b>    | 1 min. 1 sec.            |
| <b>64 MB SD/MMC</b>    | 2 min. 3 sec.            |
| <b>128 MB SD/MMC</b>   | 4 min. 7 sec.            |
| <b>256 MB SD/MMC</b>   | 8 min. 14 sec.           |
| <b>512 MB SD/MMC</b>   | 16 min. 28 sec.          |
| <b>1 GB SD/MMC</b>     | 32 min. 56 sec.          |

## Dock compatibility
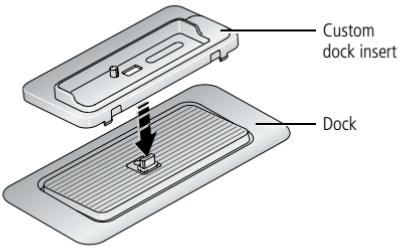
| Kodak EasyShare dock   | Docking configuration   |
|--|---|
| <ul style="list-style-type: none"> <li>■ printer dock plus series 3*</li> <li>■ series 3 printer docks and camera docks</li> <li>■ G series printer docks</li> </ul>   |  |
| <ul style="list-style-type: none"> <li>■ printer dock</li> <li>■ printer dock plus</li> <li>■ printer dock 6000</li> <li>■ camera dock 6000</li> <li>■ printer dock 4000</li> <li>■ camera dock II</li> <li>■ LS420, LS443, LS755 camera dock</li> </ul> | Not compatible  |

NOTE: Your camera is also compatible with the Kodak EasyShare photo printer 500\*, a non-docking, Wi-Fi enabled printer.

\*Where available.

For the latest information on dock compatibility, visit  
[www.kodak.com/go/dockcompatibility](http://www.kodak.com/go/dockcompatibility).

## Power-saving features

| No action for                       | The camera             | To turn the camera back on            |
|-------------------------------------|------------------------|---------------------------------------|
| 10, 20, 30, 60 seconds (selectable) | Screen dims.           | Press any button or touch the screen. |
| 8 minutes                           | Enters auto power off. | Press the On/Off button.              |

## Wireless channels

This product operates on the legal channel for your region. You are not able to manually select the channel. Wi-Fi networks operate in the ISM (Industrial, Scientific, and Medical) radio frequency band. The ISM band is divided into channels, each occupying 5MHz of frequency band. To join a wireless network, a node must set its channel to that of the wireless router (or - in a device-to-device network - to that of the first node).

Nearby networks that operate on the same channel will interfere with one another, resulting in lower network speed or connection loss.



### CAUTION:

**The Wi-Fi card for this device transmits at 15 dBm. In France, the power level is limited to 10 dBm in outdoor environments, per regulations. When in France, use the wireless functions of this product indoors only.**

## Important safety instructions

### Using this product

- Read and follow these instructions before using Kodak products. Always follow basic safety procedures.
- Use only a USB-certified computer. Contact your computer manufacturer if you have questions.
- The use of an accessory attachment that is not recommended by Kodak, such as an AC adapter, may cause fire, electric shock, or injury.
- If using this product in an airplane, observe all instructions of the airline.



#### CAUTION:

**Do not disassemble this product; there are no user-serviceable parts inside. Refer servicing to qualified service personnel. Do not expose this product to liquid, moisture, or extreme temperatures. Kodak AC adapters and battery chargers are intended for indoor use only. The use of controls, adjustments, or procedures other than those specified herein may result in exposure to shock and/or electrical or mechanical hazards. If the LCD breaks, do not touch the glass or liquid. Contact Kodak Support.**

## Battery safety and handling



### CAUTION:


**When removing batteries, allow them to cool first; batteries may be hot.**

- Use only batteries approved for this product to avoid risk of explosion.
- Read and follow all warnings and instructions supplied by the battery manufacturer.
- Keep batteries out of the reach of children.
- Do not allow batteries to touch metal objects, including coins. Otherwise, a battery may short circuit, discharge energy, become hot, or leak.
- Do not disassemble, install backward, or expose batteries to liquid, moisture, fire, or extreme temperature.
- Replace all batteries of a set at the same time. Do not mix new batteries with used ones. Do not mix rechargeable and non-rechargeable batteries. Do not mix lithium, Ni-MH, and Ni-Cd batteries together. Do not mix batteries of different chemistry types, grades, or brands. Failure to observe this precaution may cause leakage.
- Remove batteries when the product is stored for an extended period of time. In the unlikely event that battery fluid leaks inside the product, contact your local Kodak Customer Service representative.
- In the unlikely event that battery fluid leaks onto your skin, wash immediately with water and contact your local health provider. For additional health-related information, contact your local Kodak Customer Service representative.
- Dispose of batteries according to local and national regulations.
- Do not charge non-rechargeable batteries.

For more information on batteries, see

[www.kodak.com/global/en/service/batteries/batteryUsage.jhtml](http://www.kodak.com/global/en/service/batteries/batteryUsage.jhtml)

## Battery life

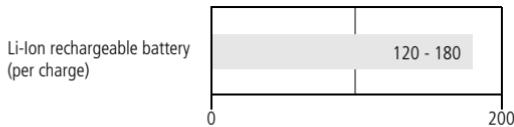

Battery life per CIPA testing method. (Approx. number of pictures in Auto mode, using 128 MB SD card.) Actual life may vary based on usage.

Use only a Kodak Li-Ion rechargeable digital camera battery KLIC-5000. Not all manufacturers' 3.7V Li-Ion rechargeable batteries are compatible with the camera. Damage caused by unauthorized accessories is not covered under warranty.

### Extending battery life

- Reduce LCD dimmer setting.
- Limit excessive use of the flash.
- Limit excessive use of Wi-Fi functions.
- Dirt on the battery contacts can affect battery life. Wipe the contacts with a clean, dry cloth before loading batteries in the camera.
- Battery performance is reduced at temperatures below 41° F (5° C). When using your camera in cold weather, carry spare batteries and keep them warm. Do not discard cold batteries that do not work; when they return to room temperature, they may be usable.

- Visit [www.kodak.com/go/easyshare-one6mpaccessories](http://www.kodak.com/go/easyshare-one6mpaccessories) for:

**Kodak 5-volt AC adapter**—powers your camera.

**Kodak EasyShare camera dock (series 3 models and newer)**—powers your camera, transfers pictures and videos to your computer, and charges the Li-Ion battery included with your camera.

**Kodak EasyShare printer dock (series 3 models and newer)**—powers your camera, makes 4 x 6 in. (10 x 15 cm) prints with or without a computer, transfers pictures and videos to your computer, and charges the included Li-Ion battery. Wi-Fi enabled models let you perform direct wireless printing.

**Kodak EasyShare photo printer**—makes 4 x 6 in. (10 x 15 cm) prints with or without a computer. Wi-Fi enabled models let you perform direct wireless printing.

**IMPORTANT:** *Do not use the AC adapter included with the Kodak EasyShare camera dock, printer dock, or photo printer to power your camera.*

## Upgrading your software and firmware

Download the latest versions of the software included on the Kodak EasyShare software CD and the camera firmware (the software that runs on the camera). See [www.kodak.com/go/easyshare-one6mpdownloads](http://www.kodak.com/go/easyshare-one6mpdownloads).

## Additional care and maintenance

- If the camera has been subjected to inclement weather or you suspect water has gotten inside the camera, turn off the camera and remove the batteries, memory card, and Wi-Fi card. Allow all components to air-dry for at least 24 hours before using the camera again.
- Blow gently on the lens or screen to remove dust and dirt. Wipe gently with a soft, lint-free cloth or an untreated lens-cleaning tissue. Do not use cleaning solutions unless designed specifically for camera lenses. Do not allow chemicals, such as suntan lotion, to contact painted surfaces.

- Service agreements may be available in your country. Contact a dealer of Kodak products for more information.
- For digital camera disposal or recycling information, contact your local authorities. In the US, visit the Electronics Industry Alliance Web site at [www.eiae.org](http://www.eiae.org) or the Kodak Web site at [www.kodak.com/go/easyshare-one6mpsupport](http://www.kodak.com/go/easyshare-one6mpsupport).

## Warranty

### Limited warranty

Kodak warrants the Kodak EasyShare-One zoom digital camera to be free from malfunctions and defects in both materials and workmanship for one year from the date of purchase.

Kodak warrants Kodak EasyShare-One zoom digital camera accessories (excluding batteries) to be free from malfunctions and defects in both materials and workmanship for one year from the date of purchase.

Retain the original dated sales receipt. Proof of the date of purchase will be required with any request for warranty repair.

### Limited warranty coverage

**This limited warranty will be honored only within the geographical location that Kodak EasyShare digital cameras and accessories were purchased.**

Kodak will REPAIR or REPLACE Kodak EasyShare digital cameras and accessories if they fail to function properly during the warranty period, subject to any conditions and/or limitations stated herein. Such repair service will include all labor as well as any necessary adjustments and/or replacement parts. Such repair or replacement is the sole remedy under this warranty.

If replacement parts are used in making repairs, these parts may be remanufactured, or may contain remanufactured materials. If it is necessary to replace the entire product, it may be replaced with a remanufactured product.

## Limitations

Request for Warranty service will not be accepted without proof of date of purchase, such as a copy of the original dated Kodak EasyShare digital camera or accessory sales receipt. (Always keep the original for your records.)

This warranty does not apply to the battery(s) used in digital cameras or accessories. This warranty does not cover circumstances beyond Kodak's control, nor problems caused by failure to follow the operating instructions in the Kodak EasyShare digital cameras and accessories user's guides.

**This warranty does not apply when failure is due to shipping damage, accident, alteration, modification, unauthorized service, misuse, abuse, use with incompatible accessories or attachments, failure to follow Kodak's operation, maintenance or repacking instructions, failure to use items supplied by Kodak (such as adapters and cables), or claims made after the duration of this warranty.**

Kodak makes no other express or implied warranty for this product. In the event that the exclusion of any implied warranty is ineffective under the law, the duration of the implied warranty will be one year from the purchase date.

The option of replacement is Kodak's only obligation. Kodak will not be responsible for any special, consequential or incidental damages resulting from the sale, purchase, or use of this product, regardless of the cause. Liability for any special, consequential or incidental damages (including but not limited to loss of revenue or profit, downtime costs, loss of the use of the equipment, cost of substitute equipment, facilities or services, or claims of your customers for such damages resulting from the purchase, use or failure of the product), regardless of cause or for breach of any written or implied warranty is expressly disclaimed and excluded herefrom.

## **Your rights**

Some states or jurisdictions do not allow exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. Some states or jurisdictions do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

This warranty gives you specific rights, and you may have other rights which vary from state to state or by jurisdiction.

## **Outside the United States and Canada**

In countries other than the United States and Canada, the terms and conditions of this warranty may be different. Unless specific Kodak warranty is communicated to the purchaser in writing by a Kodak company, no warranty or liability exists beyond any minimum requirements imposed by law, even though defect, damage, or loss may be by negligence or other act.

## **Regulatory compliance**

### **FCC compliance and advisory**



Kodak EasyShare-One zoom digital camera  
Kodak Wi-Fi<sup>®</sup> card

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed or used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: 1) reorient or relocate the receiving antenna; 2) increase the separation between the equipment and the receiver; 3) connect the equipment to an outlet on a circuit different from that to which the receiver is connected; 4) consult the dealer or an experienced radio/TV technician for additional suggestions.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Where shielded interface cables have been provided with the product or specified additional components or accessories elsewhere defined to be used with the installation of the product, they must be used in order to ensure compliance with FCC regulation.

**CAUTION:**

**When using the Wi-Fi card with this product: this equipment should be installed and operated with a minimum distance of 7.9 inches (20 cm) for 2.4 GHz operations between the radiator and your body. This transmitter must not be collocated or operate in conjunction with any other antenna or transmitter.**

### SAR statement (when using with Wi-Fi card)

The available scientific evidence does not show that any health problems are associated with using low power wireless devices. There is no proof, however, that these low power wireless devices are absolutely safe. Low power wireless devices emit low levels of radio frequency energy (RF) in the microwave range while being used. Whereas high levels of RF can produce health effects (by heating tissue), exposure to low-level RF that does not produce heating effects causes no known adverse health effects. Many studies of low-level RF exposures have not found any biological effects. Some studies have suggested that some biological effects might occur, but such findings have not been confirmed by additional research. Kodak Wi-Fi® card (3F8508) has been tested and found to comply with FCC radiation exposure limits set forth for an uncontrolled equipment and meets the FCC radio frequency (RF) Exposure Guidelines in Supplement C to OET65. The maximum SAR levels tested for Kodak Wi-Fi® card (3F8508) have been shown to be 0.616 W/kg at Body.

### FCC and Industry Canada

This device complies with Industry Canada RSS-210 and FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### Canadian DOC statement

**DOC Class B Compliance**—This Class B digital apparatus complies with Canadian ICES-003.

**Observation des normes-Class B**—Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

### CE

Hereby, Eastman Kodak Company declares that this Kodak Wi-Fi® card is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

## Waste Electrical and Electronic Equipment labeling



In the European Union, do not discard the product as unsorted municipal waste. Contact your local authorities or go to [www.kodak.com/go/recycle](http://www.kodak.com/go/recycle) for recycling program information.

## Korean Class B ITE

이 기기는 가정용으로 전자파적합등록을 한 기기로서 주거지역에서는 물론 모든 지역에서 사용할 수 있습니다.

English translation:

As this equipment has obtained EMC registration for household use, it can be used in any area including residential areas.

## VCCI Class B ITE

この装置は、情報処理装置等電波障害自主規制協議会（VCCI）の基準に基づくクラスB情報技術装置です。この装置は、家庭環境で使用することを目的としていますが、この装置がラジオやテレビジョン受信機に近接して使用されると、受信障害を引き起こすことがあります。

取扱説明書に従って正しい取り扱いをして下さい。

English translation:

This is a Class B product based on the standard of the Voluntary Control Council for Interference from Information Technology Equipment (VCCI). If this is used near a radio or television receiver in a domestic environment, it may cause radio interference. Install and use the equipment according to the instruction manual.

## MPEG-4

Use of this product in any manner that complies with the MPEG-4 visual standard is prohibited, except for use by a consumer engaging in personal and non-commercial activities.

---

# Index

## Numerics

4-way controller, ii, 5

## A

A/V cable

connection to television, 71

connector on camera, i

about, camera information, 38

AC adapter

DC-in connector, i

specifications, 93

accessories

buying, 88

ad hoc network, overview, 43

address book

creating, 64

group lists, 64

synchronizing, 57

AF framing brackets, 12

albums

adding pictures & videos to, 20

creating, 20, 21

deleting, 27

editing, 21

emailing, wireless on

EASYSHARE Gallery, 69

pre-assigning pictures & videos

to, 34

removing pictures & videos from, 21

renaming, 21

synchronizing, 57

viewing pictures & videos in, 17

auto

enhancement, 26

flash, 16

focus, continuous AF, 36

focus, video AF, 37

power off, 4, 98

scene mode, 29

touchscreen dimming, 4, 37, 98

## B

back button, ii, 5

backlight scene mode, 29

battery

charging, 2

expected life, 101

extending life, 101

loading, 3

release switch, ii

removing, 3

safety, 100

slot, ii, 3

beach scene mode, 29

black & white pictures, 35

brackets, framing, 12

burst, 30

button

4-way controller, ii, 5

back, ii, 5

capture/view switch, ii, 12, 13,

17, 18

delete, ii, 13, 27

flash, i, 16

info, ii, 5, 19, 21, 25  
menu, ii  
OK, ii  
on/off, i, 4  
share, ii, 13, 62  
shutter, i, 12, 13  
zoom, ii, 15, 19, 25

## C

calendar (viewing by date), 17  
calibrating touchscreen, 8, 37  
camera screen. See touchscreen  
Canadian DOC statement, 107  
captions  
    adding to pictures & videos, 25  
    editing, 25  
capture specifications, 93  
capture/view switch, ii, 12, 13  
card  
    SD/MMC, inserting, 11  
    slot, SD/MMC, ii, 11  
    slot, Wi-Fi, i, 44  
    storage capacities, SD/MMC, 95  
    Wi-Fi, inserting, 44  
card print order, 77  
care & maintenance, camera, 102  
CCD specifications, 91  
CE, 107  
channels, wireless regulations, 98  
charging battery, 2  
children scene mode, 29  
Class B ITE, 108  
cleaning  
    lens, 102  
    touchscreen, 102

[www.kodak.com/go/support](http://www.kodak.com/go/support)

clock, setting, 9, 37  
close-up scene mode, 29  
closing touchscreen display, 4  
color mode, 35  
computer  
    communication specifications, 94  
    connecting to, 60  
    emailing pictures from, 71  
    installing software on, 58  
    printing pictures from, 72  
    uploading to EASYSHARE Gallery  
        from, 73  
    USB transfer to, 60  
    viewing pictures on EASYSHARE  
        Gallery with, 73  
    wireless transfer to, 61  
connect modes, 47  
connecting  
    A/V cable to television, 71  
    to hotspot, 49  
    to wireless network, 45  
    USB cable to computer, 60  
connector  
    A/V out, i, 71  
    DC-in, i  
    dock, ii  
    USB, i  
continuous AF, 36  
copying pictures & videos, 26  
cover, lens, i  
cropping pictures, 25  
customer support, 89

**D**

date & time

    date stamp, 35

    setting, 9, 37

    synchronizing, 57

DC-in connector for AC adapter, i

delete button, ii, 13, 27

deleting

    albums, 27

    pictures & videos, 27

deleting pictures & videos

    during quickview, 13

    from albums, 21

    from drawer, 24

device settings, 37

device-to-device network, overview, 43

digital zoom, 15

display. See touchscreen

disposal, recycling, 103

dock connector, ii

dock See printer dock

DPOF (print order), creating, 77

drawer

    opening, 24

    placing pictures & videos in, 23

    removing pictures & videos from, 24

    viewing pictures & videos in, 24

drawer, selecting multiple pictures &

    videos with, 23

**E**

EASYSHARE Gallery

    setting account information on

        camera, 10

setting domain name, 66

uploading pictures from

    computer, 73

viewing with computer, 73

wireless uploading, 67

wireless viewing, 17, 68

EasyShare software See software

editing

    albums, 21

    captions, 25

    cropping pictures, 25

emailing

    EASYSHARE Gallery albums, 69

    from computer, 71

    from outbox, 74, 75

    wireless, 63

exposure

    compensation, 31

    metering, 36

    specifications, 92

**F**

favorites, tagging, 22

FCC

    and Industry Canada, 107

    compliance and advisory, 105

fill flash, 16

fireworks scene mode, 29

firmware, upgrading, 102

first burst, 30

flash, i

    auto, 16

    button, i, 16

    fill, 16

range, 16  
red-eye, 16, 35  
specifications, 93  
flower scene mode, 29  
focus  
    automatic, 12  
    continuous AF, 36  
    video AF, 37  
focus zone, 36  
format  
    card, 38  
    internal memory, 38  
framing brackets, 12  
friends' albums, viewing, 17, 68

**G**

glossary, wireless, 52  
groups, creating lists, 64

**H**

heart icon. See favorites  
help  
    troubleshooting, 78  
    web links, 88  
hotspot, connecting to, 49

**I**

image sensor, 91  
info button, ii, 5, 19, 21, 25  
information  
    about camera, 38  
    button. See info button  
infrastructure network, overview, 42

installing  
    battery, 3  
    SD/MMC card, 11  
software, 58  
Wi-Fi card, 44  
internal memory  
    copying to, 26  
    storage capacity, 95  
    viewing pictures in, 17  
internet requirements for wireless  
    features, 43  
ISO, 35

**K**

keyboard, touch, 6  
KODAK EASYSHARE Gallery  
    See EASYSHARE Gallery  
Kodak EasyShare software See software  
Kodak Perfect Touch technology, 26  
Kodak web sites, 88  
Kodak Wi-Fi card. See wireless

**L**

landscape scene mode, 29  
language, setting, 7, 37  
last burst, 30  
LCD (liquid crystal display).  
    See touchscreen  
LCD backlight timer, 37  
lens, i  
    cleaning, 102  
    specifications, 91

light  
  battery charger, 2  
on/off, i  
self-timer, i  
  wireless network status, i, 51  
light sensor, i  
loading  
  battery, 3  
  SD/MMC card, 11  
  software, 58  
  Wi-Fi card, 44

**M**

Mac OS, installing software, 58  
magnifying pictures, 19  
maintenance, camera, 102  
memory  
  formatting, 38  
  internal, copying to, 26  
  storage capacities, 95  
memory card See SD/MMC card  
menu  
  button, ii  
  share, 62  
  view, 17  
microphone, i  
MMC card See SD/MMC card  
MPEG-4, 108  
museum/polite scene mode, 29

**N**

navigation, 5  
network. See wireless  
night landscape scene mode, 29

night portrait scene mode, 29  
NTSC, video setting, 38

**O**

OK button, ii  
on/off button, i, 4  
opening  
  battery/card door, 3, 11  
  drawer, 24  
  touchscreen display, 4  
optical zoom, 15  
orientation sensor, 38  
outbox  
  card print order, 77  
  emailing from, 74  
  printing pictures from, 76  
  removing emails from, 75  
  removing pictures from print  
    order, 76  
  viewing pictures in, 17  
  viewing print order, 76  
  viewing/changing emails, 75

**P**

PAL, video setting, 38  
party scene mode, 29  
pausing video, 18  
people, creating address book for, 64  
picture quality, troubleshooting, 80  
picture size, 34, 91  
pictures  
  adding captions to, 25  
  adding to albums, 20  
  copying, 26

cropping, 25  
deleting, 27  
emailing from computer, 71  
emailing, wireless, 63  
enhancing, 26  
locating, 17, 18  
magnifying, 19  
organizing, 20  
printing from computer, 72  
printing from SD/MMC card, 72  
printing via dock connection, 72  
removing from albums, 21  
selecting, 18  
selecting multiple, 23  
sharing, 62  
storage capacities, 95  
tagging as favorites, 22  
tagging during quickview, 13  
taking See picture-taking  
uploading to EASYSHARE Gallery  
    from computer, 73  
viewing, 13, 17  
viewing information, 19  
viewing on EASYSHARE Gallery from  
    computer, 73  
viewing on television, 71  
wireless printing of, 65, 72  
wireless uploading to  
    EASYSHARE Gallery, 67  
wireless viewing on  
    EASYSHARE Gallery, 68  
picture-taking, 35  
    burst, 30  
    capture icons, 14

capture settings, 34  
exposure compensation, 31  
flash, 16  
overhead shots, 33  
pre-assigning to an album, 34  
scene modes, 28  
self-timer, 32  
tagging during quickview, 13  
videos, 13  
zoom, 15  
portrait scene mode, 29  
power  
    auto off, 4, 98  
    button, i, 4  
    specifications, 93  
    turning camera on & off, 4  
preferences, setting, 39  
printer dock  
    dock compatibility, 97  
    docking & printing, 72  
printing  
    creating a print order, 77  
    from computer, 72  
    from SD/MMC card, 72  
    pictures from outbox, 76  
    quick print, 72  
    removing pictures from outbox, 76  
    tagged pictures, 72  
    to Wi-Fi enabled  
        EasyShare printer, 65  
troubleshooting, 87  
via dock connection, 72  
wireless, 87

**Q**

quick print, 72  
quickview, 13

**R**

range, flash, 16  
recent pictures & videos, viewing, 17  
recycling, disposal, 103  
red-eye flash, 16, 35  
regulatory information  
    Canadian DOC statement, 107  
    CE, 107  
    Class B ITE, 108  
    FCC and Industry Canada, 107  
    FCC compliance and advisory, 105  
    MPEG-4, 108  
    SAR statement, 107  
    VCCI Class B ITE, 108  
    Waste Electrical and Electronic  
        Equipment labeling, 108  
    wireless channels, 98  
resolution (picture size), 34, 91  
resolution (picture size) setting, 95

**S**

safety  
    battery, 100  
    product, 99  
SAR statement, 107  
scene modes, 28  
screen, camera. See touchscreen  
SD/MMC card  
    copying to, 26  
    creating print order on, 77

inserting, 11  
printing from, 72  
removing, 11  
slot, ii, 11  
viewing pictures on, 17  
selecting  
    multiple pictures & videos, 23  
    pictures & videos, 18  
self-portrait scene mode, 29  
self-timer, 32  
    light, i  
sensor, light, i  
sepia pictures, 35  
sepia, black & white pictures, 35  
service and support telephone  
    numbers, 89  
setting  
    burst, 30  
    camera sounds volume, 38  
    capture options, 34  
    color mode, 35  
    continuous AF, 36  
    date & time, 9, 37  
    date stamp, 35  
    device options, 37  
    EASYSHARE Gallery account  
        information, 10  
    EASYSHARE Gallery domain  
        name, 66  
    exposure compensation, 31  
    exposure metering, 36  
    flash, 16  
    focus zone, 36  
    ISO, 35

- 
- language, 7, 37
  - LCD backlight timer, 37
  - orientation sensor, 38
  - picture size, 34
  - preferences, 39
  - red-eye option, 35
  - scene modes, 28
  - self-timer, 32
  - sharpness, 36
  - slide show interval, 37
  - sound theme, 38
  - sync & transfer options, 59
  - video AF, 37
  - video out, 38
  - video playback volume, 18
  - video zoom, 37
  - white balance, 35
  - wireless network profile, 47
  - setup options
    - capture, 34
    - device, 37
    - groups, 64
    - people, 64
    - preferences, 39
    - wireless, 47, 49
  - share
    - button, ii, 13, 62
    - menu, 62
  - sharing pictures & videos, 62
    - emailing EASYSHARE Gallery
      - albums, 69
      - emailing from computer, 71
      - printing from computer, 72
  - printing from SD/MMC card, 72
  - printing via dock connection, 72
  - uploading to EASYSHARE Gallery
    - from computer, 73
  - viewing EASYSHARE Gallery with camera, 68
  - viewing EASYSHARE Gallery with computer, 73
  - viewing on television, 71
  - wireless emailing, 63
  - wireless printing, 65, 72
  - wireless uploading to EASYSHARE Gallery, 67
  - sharpness, 36
  - shutter
    - burst, 30
    - button, i, 12, 13, 30, 32
    - self-timer, 32
  - sleep mode, 98
  - slide show
    - interval, 37
    - of images on camera, 70
    - of images on EASYSHARE Gallery, 69
  - slot
    - battery, ii, 3
    - SD/MMC card, ii, 11
    - Wi-Fi card, i, 44
  - snow scene mode, 29
  - socket, tripod, ii
  - software
    - installing, 58
    - synchronizing with camera, 57, 60
    - upgrading, 102

- sound  
  themes, 38  
  volume, camera, 38  
  volume, video, 18
- speaker, i
- specifications  
  battery, 101  
  capture, 93  
  CCD, 91  
  computer communication, 94  
  exposure, 92  
  flash, 93  
  lens, 91  
  other features, 94  
  power, 93  
  touchscreen, 91  
  view, 93
- sports scene mode, 29
- storage  
  capacities, 95  
  copying pictures & videos, 26  
  viewing by location on camera, 17
- strap See wrist strap
- stylus, for touchscreen, ii, 5
- support, technical, 89
- switch  
  battery release, ii  
  capture/view, ii, 12, 13, 17, 18
- sync & transfer settings, 59
- synchronizing with software, 57  
  troubleshooting, 86  
  via USB, 60
- T
- tagging  
  as favorite, 22  
  for email, 13  
  for print, 13
- telephone support, 89
- telephoto  
  flash range, 16  
  zoom, 15
- television, viewing pictures & videos  
  on, 71
- text scene mode, 29
- time & date See date & time
- timer, self, 32
- touch keyboard, using, 6
- touchscreen, ii, 4  
  auto dimming, 4, 37  
  calibrating, 8, 37  
  cleaning, 102  
  rotating display, 4, 33  
  specifications, 91  
  touch keyboard, 6  
  using, 5, 6
- transferring pictures & videos, 57
- troubleshooting, 86  
  via USB, 60  
  wireless, 61
- tripod socket, ii
- troubleshooting  
  camera, 78  
  picture quality, 80  
  printing, 87
- synchronization & transfer, 86
- wireless network connection, 82

**U**

upgrading software, firmware, 102  
uploading to EASYSHARE Gallery  
    from computer, 73  
    wireless, 67  
USB (universal serial bus) cable  
    connecting, 60  
    connector on camera, i, 60

**V**

VCCI Class B ITE, 108  
video AF, 37  
video out, 38  
video zoom, 37  
videos  
    adding captions to, 25  
    adding to albums, 20  
    copying, 26  
    deleting, 27  
    locating, 17, 18  
    organizing, 20  
    playback volume, 18  
    playing, 13, 18  
    recording, 13  
    removing from albums, 21  
    selecting, 18  
    selecting multiple, 23  
    sharing, 62  
    storage capacities, 96  
    tagging as favorites, 22  
    tagging during quickview, 13  
    viewing information, 19  
    viewing on television, 71

**v**

view  
    menu, 17  
    specifications, 93  
    switch, ii, 17, 18  
viewing pictures & videos  
    after taking, 17  
    as you take them, 13  
    by album, 17  
    by date, 17  
    by storage location, 17  
    captions, 25  
    full-screen, 18  
    in drawer, 24  
    in outbox, 17  
    magnifying pictures, 19  
    on EASYSHARE Gallery, 17, 68, 73  
    on television, 71  
recent, 17  
scrolling, 18  
slide show of images on camera, 70  
slide show of images on  
    EASYSHARE Gallery, 69  
viewing print order, 76  
volume  
    camera sounds, 38  
    video playback, 18

**W**

warranty, 103  
Waste Electrical and Electronic  
    Equipment labeling, 108  
web links, Kodak, 88  
white balance, 35

wide angle  
    flash range, 16  
    zoom, 15  
Wi-Fi See wireless  
Windows OS, installing software, 58  
wireless  
    emailing, 63, 69  
    features on camera, overview, 41  
    glossary of terms, 52  
    hotspots, 49  
    internet requirements for camera, 43  
    network profile setup, 47  
    network status light, i, 51  
    network, choosing, 48  
    network, connecting to, 45  
    network, device-to-device  
        (ad hoc), 43  
    network, infrastructure, 42  
    network, overview, 40  
    network, troubleshooting, 82  
    network, types, 42  
printing, 65, 87  
quick print, 72  
status icon, key to, 51  
uploading to EASYSHARE Gallery, 67  
using camera with Wi-Fi network, 40  
viewing of  
    EASYSHARE Gallery, 17, 68  
Wi-Fi card slot, i, 44  
Wi-Fi card, deploying, 44  
Wi-Fi card, inserting, 44  
Wi-Fi card, removing, 44  
wrist strap  
    attaching, 2  
    mount, ii

**Z**

zoom  
    button, ii, 15, 19, 25  
    digital, 15  
    magnify picture, 19  
    optical, 15  
    video, 37