


# 1 Installing the software


**IMPORTANT:** *Before connecting any cables, install the software that was included with your camera. Follow the on-screen instructions.*

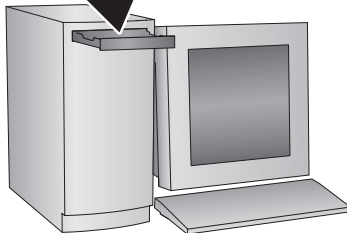


After installing the software, return to this Getting Started Guide.




## 2 Charging the KLIC-7005 battery

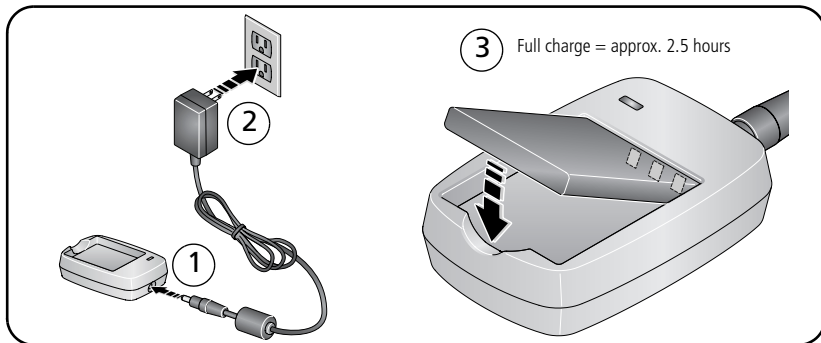


## 3 Loading the KLIC-7005 battery

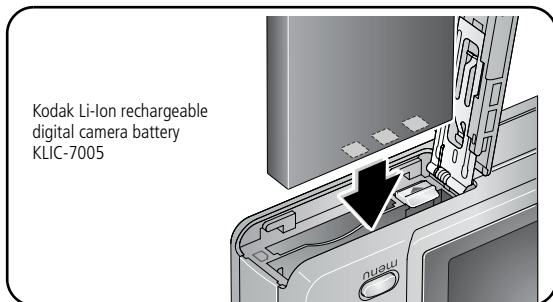

## 4 Turning on the camera

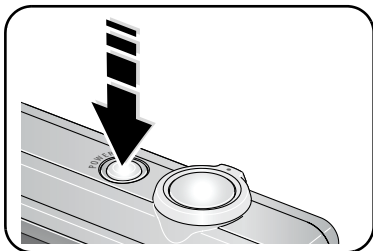

## 5 Setting the language, date/time

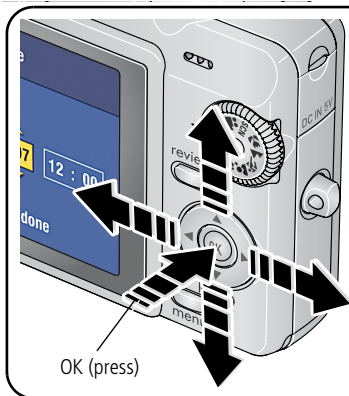

### Language:


- 1 ▲/▼ to change.
- 2 **OK** to accept.

### Date/Time:

- 1 At the prompt, press **OK**.
- 2 ▲/▼ to change.  
◀/▶ for previous/next field.  
**OK** to accept.

## 6 Taking a picture/video


### Pictures

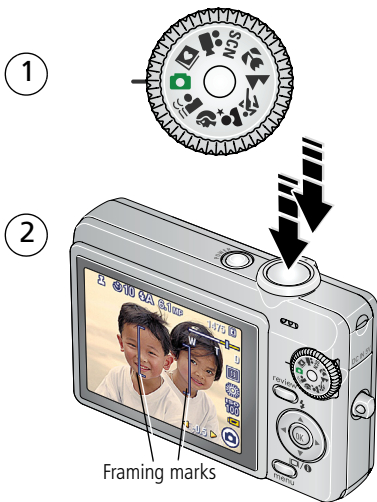

Press the Shutter button halfway to focus and set exposure.

When the framing marks turn green, press the Shutter button completely down.

### Videos

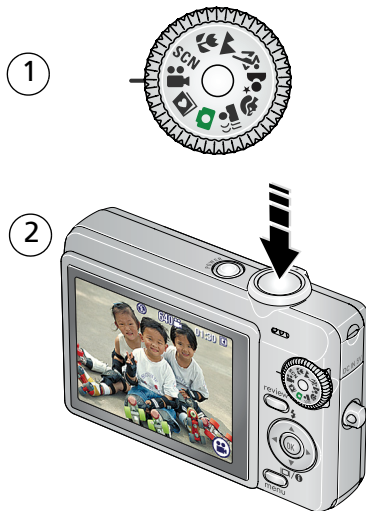

Press the Shutter button completely down and release. To stop recording, press the Shutter button again.

## 7 Reviewing pictures/videos



- 1 Press Review. (Press again to exit.)
- 2 ◀/▶ for previous/next picture/video


### Videos:

**OK** Play/pause.

▲/▼ Adjust the volume.

## 8 Transferring pictures/videos

### USB cable

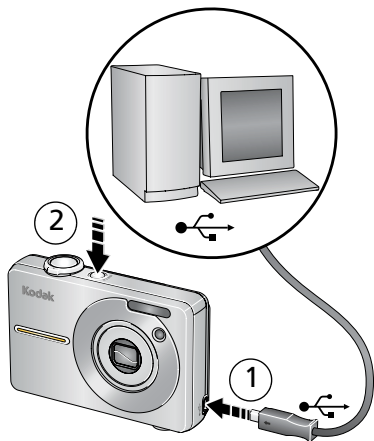

### Kodak EasyShare printer dock or camera dock

(May be sold separately.)

For dock compatibility, visit  
[www.kodak.com/go/dockcompatibility](http://www.kodak.com/go/dockcompatibility).

To purchase accessories, visit  
[www.kodak.com/go/c763accessories](http://www.kodak.com/go/c763accessories).

To use an EasyShare dock, see its  
Getting Started Guide.

---

## 9 Keep learning about your camera!

---

### **Congratulations!**

You have:

- set up your camera
- taken pictures
- transferred pictures to your computer

### **Keep learning!**


Finish reading this book, so you can take and share your best pictures!

**Visit [www.kodak.com/go/c763support](http://www.kodak.com/go/c763support) and [www.kodak.com/go/easysharecenter](http://www.kodak.com/go/easysharecenter) for:**

- the extended user's guide
- interactive troubleshooting and repairs
- interactive tutorials
- FAQs
- downloads
- accessories
- printing information
- product registration



# Front view

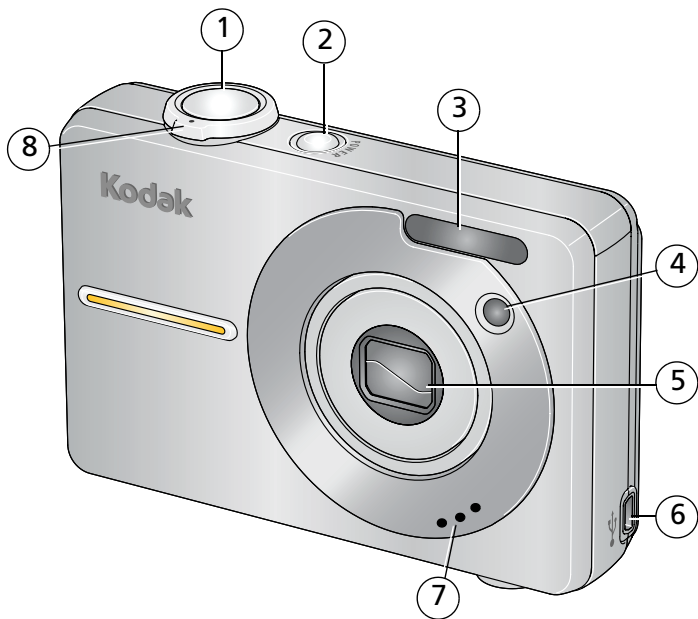

1 Shutter button

2 On/Off button

3 Flash

4 Self-timer/Video light

5 Lens


6 USB, A/V Out



7 Microphone

8 Zoom lever

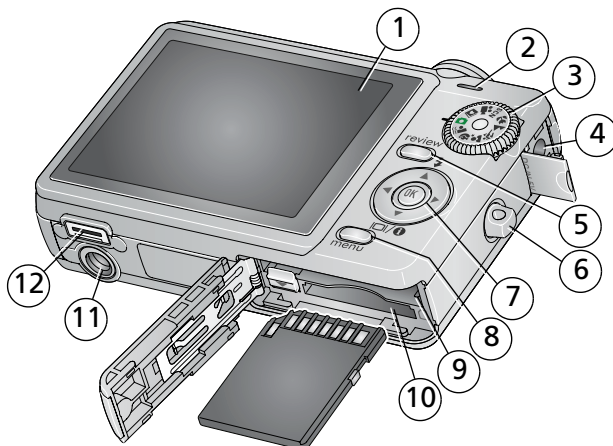

# Back view




- |   |   |    |   |
|---|---|----|---|
| 1 | LCD   | 7  |  |
| 2 | Speaker   |    | OK button   |
| 3 | Mode dial   | 8  | Menu button   |
| 4 | DC-In (5V)  for AC adapter | 9  | Slot for optional SD or MMC card  |
| 5 | Review button   | 10 | Battery compartment   |
| 6 | Strap post  | 11 | Tripod socket   |
|   |   | 12 | Dock connector  |

# 1

## Doing more with your camera

### Using the zoom lever

Use optical zoom to get up to 3X closer to your subject.

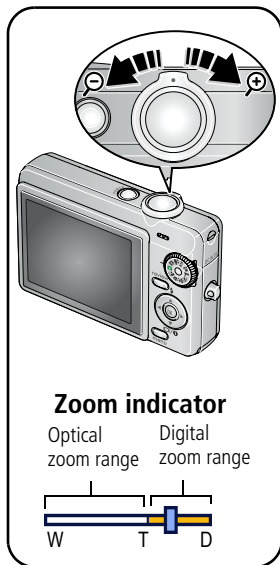

- 1 Press the Zoom lever to zoom in or out.


*The zoom indicator shows zoom status.*





- 2 Take the picture/video.

You can use digital zoom to get up to 15X magnification. Press the Zoom lever to the optical zoom limit (3X). Release the lever, then press it again.

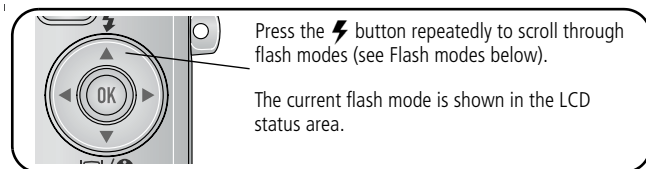








**NOTE:** You cannot use digital zoom for video recording. You may notice decreased image quality when using digital zoom. The blue slider on the zoom indicator pauses and turns red when the picture quality reaches the limit for an acceptable 4 x 6-in. (10 x 15 cm) print.

## Using the flash button



Flash modes	Flash fires	
 <b>Auto Flash</b>	When the lighting conditions require it.	
 <b>Fill</b>	Every time you take a picture, regardless of the lighting conditions. Use when the subject is in shadow or is “backlit” (when the light is behind the subject). In low light, hold the camera steady or use a tripod.	
 <b>Red-eye</b>	If the Red-eye Pre-flash feature is turned off: <ul style="list-style-type: none"> <li>■ The flash fires once.</li> <li>■ The camera then automatically corrects red-eye in the picture.</li> </ul>	If the Red-eye Pre-flash feature is turned on: <ul style="list-style-type: none"> <li>■ The flash fires once so the eyes become accustomed to the flash, then fires again when the picture is taken.</li> </ul>
 <b>Off</b>	Never	

## Using the mode dial


Use this mode	For
 <b>Auto</b>	General picture taking—a balance of image quality and ease of use.
 <b>Digital Image Stabilization</b>	Reducing blur caused by camera shake or subject motion.
 <b>Portrait</b>	Full-frame portraits of people. Subject is sharp; background is indistinct.
 <b>Night Portrait</b>	Reduces red eye of people in night scenes or low-light conditions.
 <b>Sports</b>	Subjects that are in motion. Shutter speed is fast. The camera pre-settings are Multi-Pattern Exposure Metering, Multi-Zone Focus.
 <b>Landscape</b>	Far-away scenes. The camera uses infinity auto-focus. Auto-focus framing marks are not available in Landscape.
 <b>Close-up</b>	Close range. Use available light instead of flash if possible. The camera automatically sets the focus distance depending on the zoom position.
<b>SCN</b> <b>Scene</b>	Point-and-shoot simplicity when taking pictures under special conditions. (See <a href="#">page 13</a> .)
 <b>Video</b>	Capturing video with sound.
 <b>Favorites</b>	Viewing favorite pictures.

## Scene modes

- 1 Turn the Mode dial to Scene **SCN**.
  - 2 Press ◀/▶ to display Scene mode descriptions.
- NOTE: If the Scene mode description turns off, press OK.
- 3 Press OK to choose a Scene mode.

Use this SCN mode	For
<b>Children</b>	Action pictures of children in bright light.
<b>Party</b>	People indoors. Minimizes red eye.
<b>Beach</b>	Bright beach scenes.
<b>Snow</b>	Bright snow scenes.
<b>Fireworks</b>	Flash does not fire. Place the camera on a flat, steady surface or use a tripod.
<b>Self-portrait</b>	Pictures of yourself.
<b>Backlight</b>	Subjects that are in shadow or “backlit” (when light is behind the subject).


## Understanding the picture-taking icons

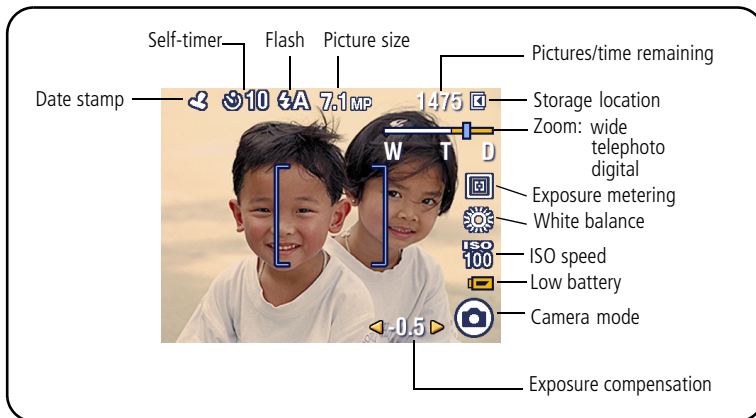

## 2


# Working with pictures/videos

## Using the review button

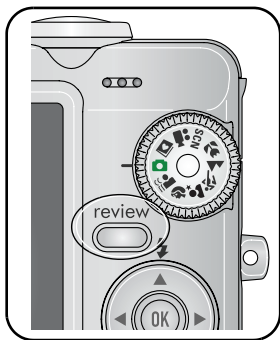


- 1 Press the Review button.
- 2 Press ◀/▶ for previous/next picture/video.

## Magnifying a picture

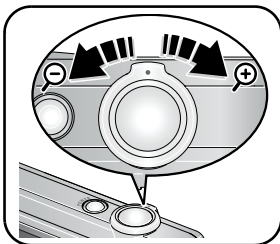

- 1 Press the Zoom lever to magnify 1X–8X.
- 2 Press ▲/▼ ◀/▶ to view other parts of a picture.
- 3 Press OK to return to 1X.

## Deleting pictures/videos

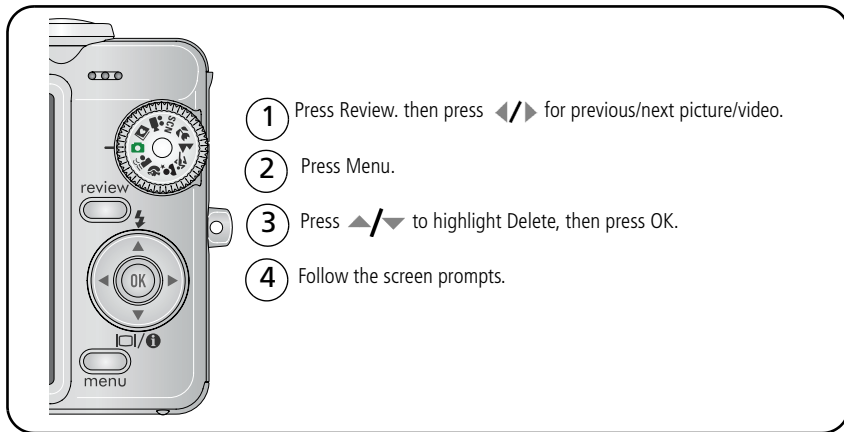

### Using the undo delete feature


If you accidentally delete a picture, you can use Undo Delete to retrieve it. This feature is only available immediately after you delete a picture.



## Storing pictures on an SD or MMC card

Your camera has internal memory. You can purchase an SD or MMC card to conveniently store more pictures/videos.

NOTE: When using the card for the first time, format it in this camera before taking pictures.

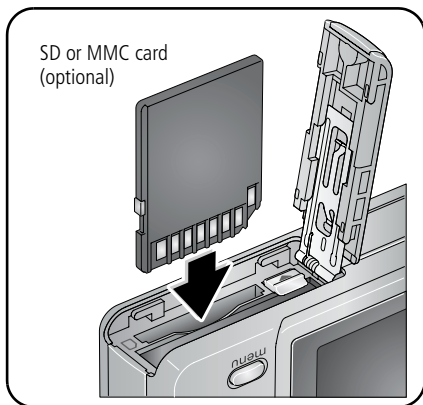

### CAUTION:

**A card can only be inserted one way; forcing it may cause damage. Inserting or removing a card while it is being accessed by the camera may damage the pictures, the card, or the camera.**

Purchase SD or MMC cards at a dealer of Kodak products or at [www.kodak.com/go/c763accessories](http://www.kodak.com/go/c763accessories).

## Running a slide show

Use the Slide Show to display your pictures/videos on the LCD. To save battery power, use an optional Kodak 5V AC adapter. (Visit [www.kodak.com/go/c763accessories](http://www.kodak.com/go/c763accessories).)

### Starting the slide show

- 1 Press the Review button, then press the Menu button.
- 2 Press **▲/▼** to highlight Slide Show, then press OK.
- 3 Press **▲/▼** to highlight Begin Show, then press OK.

*Each picture/video is displayed once.*

To interrupt the Slide Show, press OK.

### Changing the slide show display interval

The default interval setting displays each picture for 5 seconds. You can set the display interval from 3 to 60 seconds.

- 1 On the Slide Show menu, press **▲/▼** to highlight Interval, then press OK.
- 2 Select a display interval.

To scroll through the seconds quickly, press and hold **▲/▼**.

- 3 Press OK.

*The interval setting remains until you change it.*

## Cropping pictures



Picture



Cropped picture

- 1 Press Review.
- 2 ◀/▶ for previous/next.
- 3 Press Menu, choose Crop, then press OK.
- 4 Press the Zoom lever to zoom in, or ◀/▶ ▶/◀ to move the crop box.
- 5 Follow the screen prompts.

*The picture is copied, then cropped. The original picture is saved. A cropped picture cannot be cropped again on the camera.*

Press the Menu button to exit the menu.

# 3

## Solving camera problems

### Camera

Status	Solution
The camera does not work.	<ul style="list-style-type: none"><li>■ Turn on the camera.</li><li>■ Install new batteries or charge rechargeable batteries.</li><li>■ Turn camera off, then back on.</li></ul>

### Camera/computer communications

Status	Solution
The computer does not communicate with the camera.	<ul style="list-style-type: none"><li>■ Visit <a href="http://www.kodak.com/go/c763support">www.kodak.com/go/c763support</a>.</li><li>■ Turn on the camera.</li><li>■ Install new batteries or charge rechargeable batteries.</li><li>■ Connect cable to camera and computer port.</li><li>■ Install the software.</li><li>■ Disconnect the USB cable. Close all software applications. Re-install the software.</li><li>■ Disconnect camera from the computer. Close all software applications, reconnect camera.</li></ul>

## Important safety instructions



### CAUTION:

**Do not disassemble this product; there are no user-serviceable parts inside. Refer servicing to qualified service personnel. Kodak AC adapters and battery chargers are intended for indoor use only. The use of controls, adjustments, or procedures other than those specified herein may result in exposure to shock and/or electrical or mechanical hazards. If the LCD breaks, do not touch the glass or liquid. Contact Kodak customer support.**

- The use of an accessory that is not recommended by Kodak may cause fire, electric shock, or injury. For approved accessories, visit [www.kodak/go/accessories](http://www.kodak/go/accessories).
- Use only a USB-certified computer equipped with a current-limiting motherboard. Contact your computer manufacturer if you have questions.
- If using this product in an airplane, observe all instructions of the airline.
- When removing the battery, allow it to cool; it may be hot.
- Follow all warnings and instructions supplied by the battery manufacturer.
- Use only batteries approved for this product to avoid risk of explosion.
- Keep batteries out of the reach of children.
- Do not allow batteries to touch metal objects, including coins. Otherwise, a battery may short circuit, discharge energy, become hot, or leak.
- Do not disassemble, install backward, or expose batteries to liquid, moisture, fire, or extreme temperature.
- Remove the battery when the product is stored for an extended period of time. In the unlikely event that battery fluid leaks inside the product, contact Kodak customer support.
- In the unlikely event that battery fluid leaks onto your skin, wash immediately with water and contact your local health provider. For additional health-related information, contact your local Kodak customer support.
- Dispose of batteries according to local and national regulations. Visit [www.kodak.com/go/kes](http://www.kodak.com/go/kes).

- Do not charge non-rechargeable batteries.  
For more information on batteries, visit [www.kodak.com/go/batterytupes](http://www.kodak.com/go/batterytupes).
- Read and follow all warnings and instructions supplied by the battery manufacturer.

### Upgrading your software and firmware

Download the latest versions of the software included on the Kodak EasyShare software CD and the camera firmware (the software that runs on the camera). Visit [www.kodak.com/go/c763downloads](http://www.kodak.com/go/c763downloads).

### Care and maintenance

- If you suspect water has gotten inside the camera, remove the battery and card. Allow all components to air-dry for at least 24 hours before using the camera.
- Blow gently on the lens or LCD to remove dust and dirt. Wipe gently with a soft, lint-free cloth or an untreated lens-cleaning tissue. Do not use cleaning solutions unless designed specifically for camera lenses. Do not allow chemicals, such as suntan lotion, to contact painted surfaces.
- Service agreements may be available in your country. Contact a dealer of Kodak products for more information.
- For digital camera disposal or recycling information, contact your local authorities. In the US, visit the Electronics Industry Alliance Web site at [www.eiae.org](http://www.eiae.org) or [www.kodak.com/go/c763support](http://www.kodak.com/go/c763support).

### Limited warranty

Kodak warrants Kodak consumer electronic products and accessories ("Products"), excluding batteries, to be free from malfunctions and defects in both materials and workmanship for one year from the date of purchase. Retain the original dated sales receipt. Proof of the date of purchase will be required with any request for warranty repair.

### Limited warranty coverage

Warranty service is only available from within the country where the Products were originally purchased. You may be required to ship Products, at your expense, to the authorized service facility for the country where the Products were purchased. Kodak will repair or replace Products if they fail to function properly during the warranty period, subject to any conditions and/or limitations stated herein. Warranty service will include all labor as well as any necessary adjustments and/or replacement parts. If Kodak is unable to repair or replace a Product, Kodak will, at its option, refund the purchase price paid for the Product provided the Product has been returned to Kodak along with proof of the purchase price paid. Repair, replacement, or refund of the purchase

price are the sole remedies under the warranty. If replacement parts are used in making repairs, those parts may be remanufactured, or may contain remanufactured materials. If it is necessary to replace the entire Product, it may be replaced with a remanufactured Product. Remanufactured Products, parts and materials are warranted for the remaining warranty term of the original Product, or 90 days after the date of repair or replacement, whichever is longer.

### **Limitations**

This warranty does not cover circumstances beyond Kodak's control. This warranty does not apply when failure is due to shipping damage, accident, alteration, modification, unauthorized service, misuse, abuse, use with incompatible accessories or attachments (such as third party ink or ink tanks), failure to follow Kodak's operation, maintenance or repacking instructions, failure to use items supplied by Kodak (such as adapters and cables), or claims made after the duration of this warranty. Kodak makes no other express or implied warranty for this product, and disclaims the implied warranties of merchantability and fitness for a particular purpose. In the event that the exclusion of any implied warranty is ineffective under the law, the duration of the implied warranty will be one year from the purchase date or such longer period as required by law. The option of repair, replacement, or refund is Kodak's only obligation. Kodak will not be responsible for any special, consequential or incidental damages resulting from the sale, purchase, or use of this product regardless of the cause. Liability for any special, consequential or incidental damages (including but not limited to loss of revenue or profit, downtime costs, loss of the use of the equipment, cost of substitute equipment, facilities or services, or claims of your customers for such damages resulting from the purchase use or failure of the Product), regardless of cause or for breach of any written or implied warranty is expressly disclaimed.

### **Your rights**

Some states or jurisdictions do not allow exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. Some states or jurisdictions do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. This warranty gives you specific rights, and you may have other rights which vary from state to state or by jurisdiction.

### **Outside the United States and Canada**

In countries other than the United States and Canada, the terms and conditions of this warranty may be different. Unless a specific Kodak warranty is communicated to the purchaser in writing by a Kodak company, no warranty or liability exists beyond any minimum requirements imposed by law, even though defect, damage, or loss may be by negligence or other act.

### FCC compliance and advisory



Kodak EasyShare C763 zoom digital camera

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed or used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: 1) reorient or relocate the receiving antenna; 2) increase the separation between the equipment and the receiver; 3) connect the equipment to an outlet on a circuit different from that to which the receiver is connected; 4) consult the dealer or an experienced radio/TV technician for additional suggestions. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Where shielded interface cables have been provided with the product or specified additional components or accessories elsewhere defined to be used with the installation of the product, they must be used in order to ensure compliance with FCC regulation.

### Canadian DOC statement

**DOC Class B Compliance**—This Class B digital apparatus complies with Canadian ICES-003.

**Observation des normes-Classe B**—Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

### Waste Electrical and Electronic Equipment labeling



In the European Union, do not discard this product as unsorted municipal waste. Contact your local authorities or go to [www.kodak.com/go/recycle](http://www.kodak.com/go/recycle) for recycling program information.



## VCCI Class B ITE

この装置は、情報処理装置等電波障害自主規制協議会（VCCI）の基準に基づきクラスB情報技術装置です。この装置は、家庭環境で使用することを目的としていますが、この装置がラジオやテレビジョン受信機に近接して使用されると、電波障害を引き起こすことがあります。取扱説明書に従って正しい取り扱いをして下さい。

## Australian C-Tick



## Korean Class B ITE

이 기기는 가정용으로 전자파적합등록을 한 기기로서 주거지역에서는 물론 모든 지역에서 사용할 수 있습니다.

## China RoHS

## 环保使用期限 (EPUP)

在中国大陆，该值表示产品中存在的任何危险物质不得释放，以免危及人身健康、财产或环境的时间期限（以年计）。该值根据操作说明中所规定的产品正常使用而定。

有毒有害物质或元素名称及含量标识表

部件名称	有毒有害物质或元素					
	铅	汞	镉	六价铬	多溴联苯	多溴二苯醚
数码相机电路板元件	×	○	○	○	○	○
电池电路板元件	×	○	○	○	○	○
电池充电器电路板元件	×	○	○	○	○	○
交流变压器电路板元件	×	○	○	○	○	○

○：表示该有毒有害物质在该部件所有均质材料中的含量均在SJ/T 11363-2006规定的限量要求以下。  
 ×：表示该有毒有害物质至少在该部件的某一均质材料中的含量超出SJ/T 11363-2006规定的限量要求。



USB 数据线



锂电池

**Russian GOST-R**



Eastman Kodak Company  
Rochester, NY 14650

Фотокамера изготовлена в Китае; остальные элементы -  
в соответствии с маркировкой.

## Kodak

Eastman Kodak Company  
Rochester, New York 14650

© Eastman Kodak Company, 2007

Kodak and EasyShare are trademarks of Eastman Kodak Company.

4J6158\_en