



1 Installing the software



Before connecting any cables, install the software that was included with your camera. Follow the on-screen instructions.

After installing the software, return to this Getting Started Guide.

2 Loading the KLIC-7006 battery

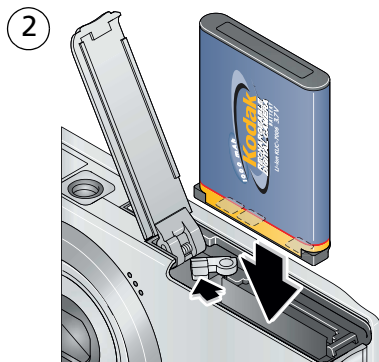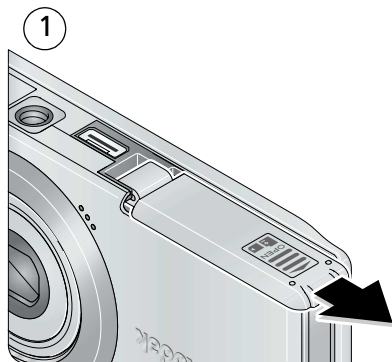

3 Charging the battery


1 Ensure that your camera is running firmware version 1.02 or higher.

Press the Menu button. Press **▶** to highlight the Setup tab. Press **▼** to highlight About, then press the OK button.

2 If your camera is running a lower version, download and install version 1.02 or higher from www.kodak.com/go/m883support.

3 When your camera is up to date, charge the battery:

Turn **ON** the camera,
then connect the USB cable.

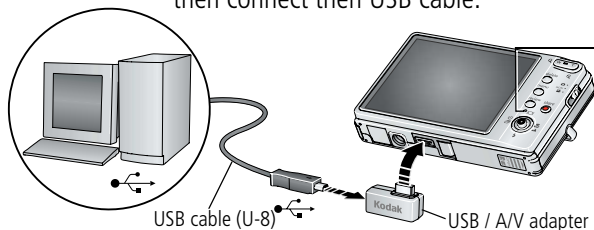

Battery charging light
blinks during charging,
and turns off when
charging is complete
(approx. 3 hours).

Note: If the battery is exhausted and you are unable to turn on the camera, charging may take up to 10 hours.

NOTE: If the battery charging light does not turn on, ensure:

- The USB cable is connected to a powered USB port
- The computer is turned on, and not in sleep mode


For more USB charging information, visit www.kodak.com/go/USBcharging.

Charging the battery using other accessories

To purchase optional accessories, visit www.kodak.com/go/m883accessories.

Kodak USB AC adapter

Turn **OFF** the camera first.

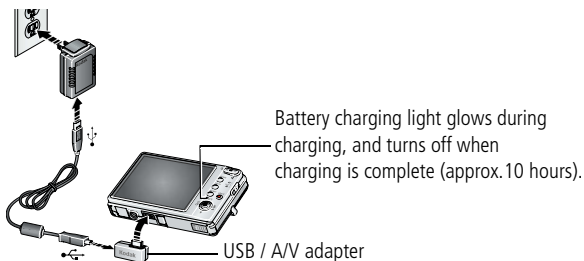

Kodak 5V AC adapter

Turn **OFF** the camera first.



 
Kodak EasyShare photo frame dock 2

Turn **OFF** the camera first.




Kodak EasyShare camera or printer dock


Turn **OFF** the camera first.




Kodak Li-Ion universal battery charger K7600-C

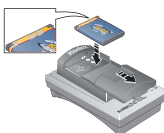

4 Turning on the camera

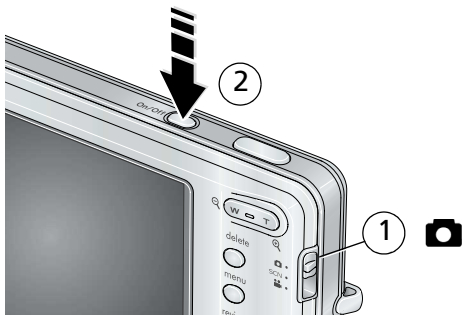

5 Setting the language and date/time

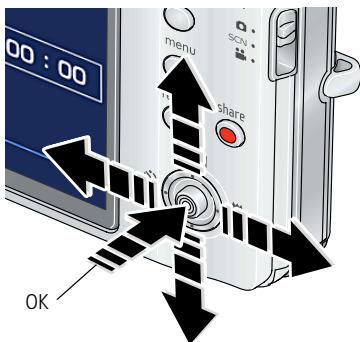

Language:


- 1 ▲/▼ to change.
- 2 OK to accept.

Date/Time:

- 1 At the prompt, press OK.
- 2 ▲/▼ to change.
◀/▶ for previous/next field.
OK to accept.

6 Taking a picture/video


Pictures

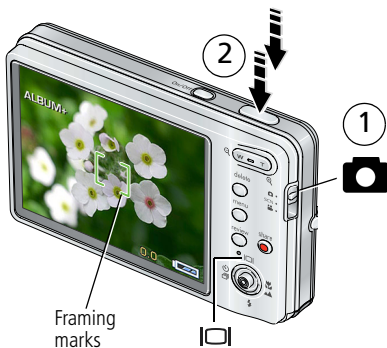


1 Slide the Mode switch to .

2 Press the Shutter button **halfway** to focus and set exposure.

When the framing marks turn green, press the Shutter button **completely down**.

You can repeatedly press Display  Display to turn on/off status icons, histogram, and framing grid.

Videos

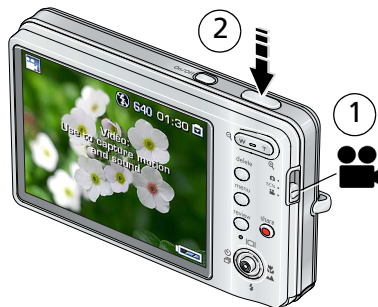

1 Slide the Mode switch to .

2 Press the Shutter button **completely down**, then release it.

To stop recording, press and release the Shutter button again.

7 Reviewing pictures/videos



- 1 Press Review.
(Press again to exit.)
- 2 ◀/▶ for previous/next.


Videos:

- ▶ Play. (Press OK to pause/unpause.)
- ▶/◀ During playback to adjust the volume.
- ▶ During playback to play at 2X speed; press again for 4X.
- ◀ During playback to reverse at 2X speed; press again for 4X.
- ◀/▶ Press and hold for 4 seconds to jump to a bookmark.

8 Transferring pictures/videos

USB cable (U-8)


(included)

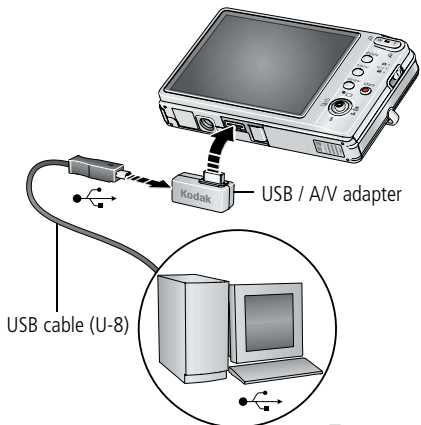

USB cable (U-8)

Kodak EasyShare photo frame dock 2, camera dock, or printer dock

(may be sold separately)

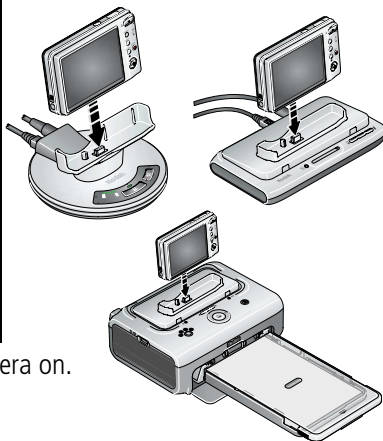

Turn camera on.

For package contents, see your product package.

To use a dock, see its Getting Started Guide.

For dock compatibility, visit www.kodak.com/go/dockcompatibility.

To purchase accessories, visit www.kodak.com/go/m883accessories.

www.kodak.com/go/m883support

9 Keep learning about your camera!

Congratulations!

You have:

- set up your camera
- taken pictures
- transferred pictures to your computer

Keep learning!

Finish reading this book, so you can take and share your best pictures!

To better understand each menu option, use camera Help.


(Highlight a menu choice, then press the Zoom telephoto T button.)

Visit www.kodak.com/go/m883support:

- the user's guide
- interactive troubleshooting and repairs
- interactive tutorials
- FAQs
- downloads
- accessories
- printing information
- product registration




Front View

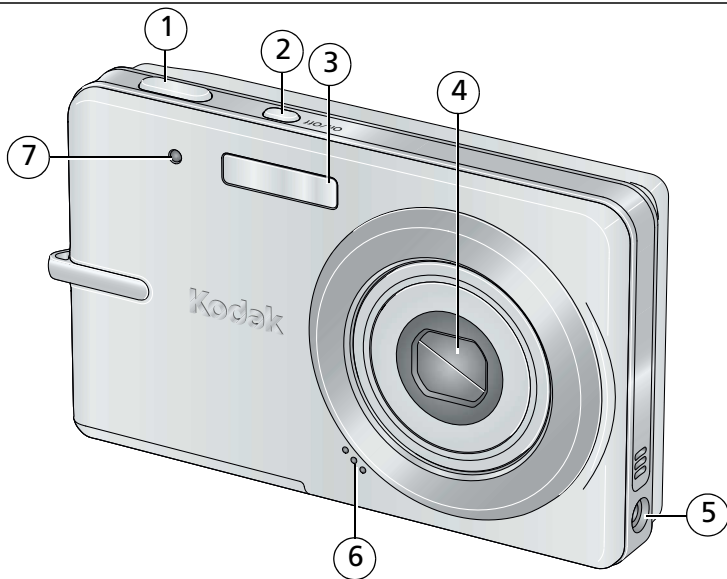

- | | | | |
|---|----------------|---|------------------|
| 1 | Shutter button | 5 | DC-In (5V) |
| 2 | On/Off button | 6 | Microphone |
| 3 | Flash | 7 | Self-timer light |
| 4 | Lens | | |

Back View

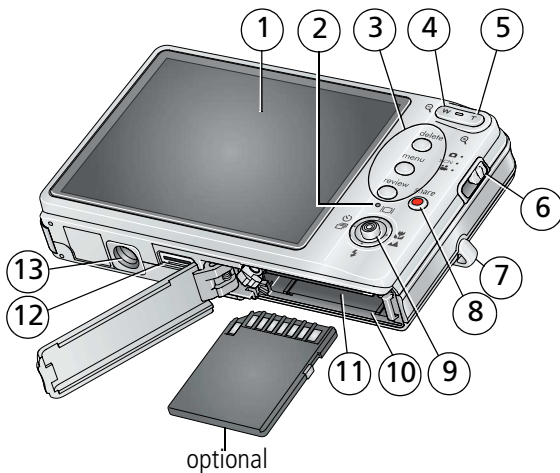


- | | | | |
|---|------------------------------|----|-----------------------------------|
| 1 | LCD | 9 | ▲, Display button |
| 2 | Battery charging/Video light | | ▼, Flash button |
| 3 | Delete, Menu, Review buttons | | ◀, Self-timer, Burst button |
| 4 | Wide angle button | | ▶, Macro, Landscape button |
| 5 | Telephoto/Help button | | OK button |
| 6 | Mode switch | 10 | Battery slot |
| 7 | Strap post | 11 | Slot for optional SD or MMC card |
| 8 | Share button | 12 | USB/charging port, dock connector |
| | | 13 | Tripod socket |

1

Doing more with your camera


Using the 3X optical zoom

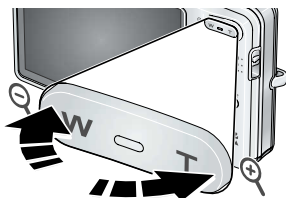

- 1 Use the LCD to frame your subject.
- 2 To zoom in, press Telephoto (T).
To zoom out, press Wide Angle (W).

The zoom indicator shows the zoom status.

- 3 Take the picture or video.

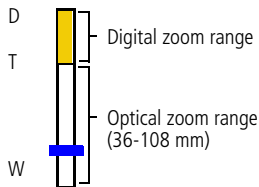






Using digital zoom

Use digital zoom in any picture-taking mode to get up to 5X magnification beyond optical zoom. Press Telephoto (T) until the slider is at the top of the optical zoom range. Release (T), then press it again.


NOTE: You may notice decreased image quality when using digital zoom. The slider pauses and turns red when the picture quality reaches the limit for an acceptable 4 x 6-in. (10 x 15 cm) print.

Using the self-timer

In this mode	A picture is taken after..
	A 10-second delay (so you have time to get into the scene).
	A 2-second delay (for a steady, auto-shutter release on a tripod).
	A 10-second delay. A second picture is taken 8 seconds later.
 <p>Press  until the desired self-timer icon appears in the LCD status area.</p>	

- 1 Choose the desired self-timer mode, then compose the scene.
- 2 Press the Shutter button **halfway**, then **completely down**.

The camera takes the picture/pictures after the delay.

Use the same procedure to take a video, but slide the mode switch to Video  and press the Shutter button completely down.

NOTE: Only the 2- and 10-second options are available in video mode. The video stops when no storage space remains.

Using the flash



Press the flash button repeatedly to scroll through flash modes.










The current flash mode is shown in the LCD status area.

Flash modes	Flash fires
Auto	When the lighting conditions require it.
Fill	Every time you take a picture, regardless of the lighting conditions. Use when the subject is in shadow or is "backlit" (when light is behind the subject). In low light, hold the camera steady or use a tripod.
Red Eye	In Red Eye flash, you can reduce red eye by using a preflash or by using automatic red eye reduction. To make the camera: <ul style="list-style-type: none"> ■ Preflash, turn the Red Eye Preflash on. (The first flash shrinks the eye pupil to reduce the chance of red eye.) ■ Flash once and automatically remove red eye, turn the Red Eye Preflash off.
Off	Never


Using different modes

Choose the mode that best suits your subjects and surroundings.

Use this mode	For
 Auto	General picture taking—offers an excellent balance of image quality and ease of use.
SCN Scene	Point-and-shoot simplicity when taking pictures under special conditions.
 Video	Capturing video with sound. (See page 5 .)
	Slide the Mode switch to choose a mode.

Use this mode	For
 Landscape	Far-away scenes. The camera uses infinity auto-focus. Auto-focus framing marks are not available in Landscape.
 Macro	Close range. The camera automatically sets the focus distance depending on the zoom position. Use available light instead of flash, if possible.
	Press  until the Macro or Landscape icon appears in the LCD status area.


Understanding the picture-taking icons

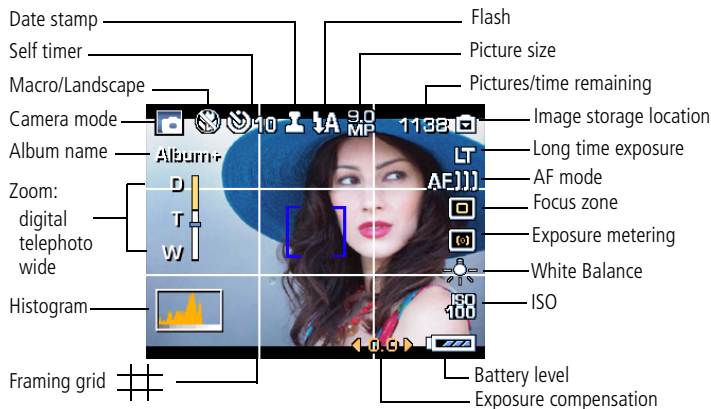

2

Working with pictures/videos

Magnifying a picture

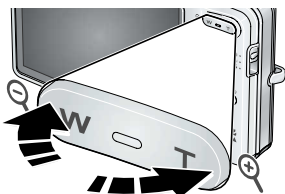

- 1 Press the Review button, then press T to magnify.
- 2 Press $\blacktriangleleft/\blacktriangleright$ $\blacktriangleleft/\blacktriangleright$ to view other parts of a picture.
- 3 Press OK to return to 1X.

Deleting pictures/videos

- 1 Press the Review button.
- 2 Press $\blacktriangleleft/\blacktriangleright$ for previous/next picture/video.
- 3 Press the Delete button.
- 4 Follow the screen prompts.

Using the undo delete feature

If you accidentally delete a picture, you may be able to use Undo Delete to retrieve it. This feature is only available immediately after you delete a single picture.

Using Kodak Perfect Touch technology

Kodak Perfect Touch technology helps ensure better, brighter pictures.

- 1 Press the Review button.
- 2 Press ◀/▶ for previous/next picture.
- 3 Press the Menu button, then ◀/▶ to highlight the Edit tab. Highlight Perfect Touch tech, then press the OK button.

The enhancement is previewed in a split screen. Press ◀/▶ to view other parts of the picture.

- 4 Press the OK button. Follow the screen prompts to replace the original picture or to save the enhanced picture as a new one.


Enhanced pictures cannot be enhanced again on the camera. Kodak Perfect Touch technology can only be used with pictures, not video.

- Press the Menu button to exit the menu.

Editing videos

Making a picture from a video


You can choose a single frame from a video, then make a picture suitable for a 4 x 6-inch (10 x 15 cm) print.

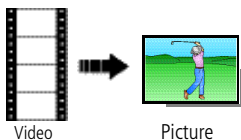

- 1 Press the Review button, then ◀/▶ to find a video.
- 2 Press the Menu button, then ◀/▶ to highlight the Edit tab. Highlight Make Picture, then press the OK button.
- 3 Follow the screen prompts.
A picture is created. (The original video is saved.)
 - Press the Menu button to exit the menu.

Making a video action print

From a video, you can make a 4-, 9-, or 16-up picture, suitable for a 4 x 6-inch (10 x 15 cm) print.

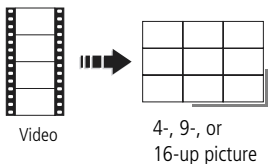

- 1 Press the Review button, then ◀/▶ to find a video.
- 2 Press the Menu button, then ◀/▶ to highlight the Edit tab. Highlight Action Print, then press the OK button.
- 3 Highlight an option, then press the OK button.

Auto: The camera includes the first and last frames, then 2, 7, or 14 equally spaced frames.

Manual: You choose the first and last frames; the camera chooses 2, 7, or 14 equally spaced frames.

Full Manual: You choose 4, 9, or 16 frames.


Use Bookmarks: Bookmarked frames are used.

A 4-, 9-, or 16-up picture is created. If you have less than 4 or 9 bookmarks, equally-spaced video frames are used.

- Press the Menu button to exit the menu.

Selecting multiple pictures/videos


Use the multi-select feature when you have two or more pictures/videos to print, transfer, delete, etc. (Multi-select is used most effectively in Multi-Up mode.)

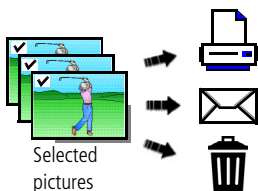

- 1 Press the Review button, then ◀/▶ to find a picture/video.
- 2 Press the OK button to select pictures/videos.

A check mark appears on the picture. You can now print, transfer, delete, etc. the selected pictures. You can press OK a second time to remove a check mark.

Viewing as thumbnails (multi-up)

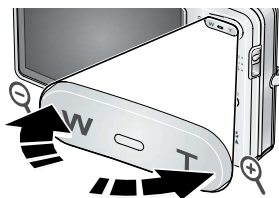

- 1 Press the Review button.
 - 2 Press W to change from single-picture view to multi-up thumbnails.
 - 3 Press T to return to single-picture view.
- Press the Review button to exit Review.

3

Solving camera problems

Camera problems

Status	Solution
Camera does not turn on	<ul style="list-style-type: none">■ Make sure the battery is charged and installed correctly (see page 1).■ Turn the camera off, then on again.
Camera does not turn off	
Camera buttons and controls do not function	
The battery does not charge using USB charging	<ul style="list-style-type: none">■ See page 2 or visit www.kodak.com/go/USBcharging.
Pictures remaining number does not decrease after taking a picture	<ul style="list-style-type: none">■ Continue taking pictures. The camera is operating normally. (The camera estimates the number of pictures remaining after each picture is taken, based on picture size and content.)
Flash does not fire	<ul style="list-style-type: none">■ Check the flash setting, and change as needed (see page 13). <p>NOTE: The flash does not fire in all modes.</p>
Battery life is short	<ul style="list-style-type: none">■ Make sure the correct battery type is installed (see page 1).■ Wipe the contacts with a clean, dry cloth before inserting a battery in the camera.■ Insert a new or charged battery (see page 1).

4 Appendix



CAUTION:

Do not disassemble this product; there are no user-serviceable parts inside. Refer servicing to qualified service personnel. Kodak AC adapters and battery chargers are intended for indoor use only. The use of controls, adjustments, or procedures other than those specified herein may result in exposure to shock and/or electrical or mechanical hazards. If the LCD breaks, do not touch the glass or liquid. Contact Kodak customer support.

- The use of an accessory that is not recommended by Kodak may cause fire, electric shock, or injury. For approved accessories, visit www.kodak.com/go/accessories.
- Use only a USB-certified computer equipped with a current-limiting motherboard. Contact your computer manufacturer if you have questions.
- If using this product in an airplane, observe all instructions of the airline.
- When removing the battery, allow it to cool; it may be hot.
- Follow all warnings and instructions supplied by the battery manufacturer.
- Use only batteries approved for this product to avoid risk of explosion.
- Keep batteries out of the reach of children.
- Do not allow batteries to touch metal objects, including coins. Otherwise, a battery may short circuit, discharge energy, become hot, or leak.
- Do not disassemble, install backward, or expose batteries to liquid, moisture, fire, or extreme temperature.
- Remove the battery when the product is stored for an extended period of time. In the unlikely event that battery fluid leaks inside the product, contact Kodak customer support.
- In the unlikely event that battery fluid leaks onto your skin, wash immediately with water and contact your local health provider. For additional health-related information, contact your local Kodak customer support.
- Dispose of batteries according to local and national regulations. Visit www.kodak.com/go/kes.
- Do not charge non-rechargeable batteries. Visit www.kodak.com/go/batterytypes.

Limited warranty coverage

Kodak warrants Kodak consumer electronic products and accessories (“Products”), excluding batteries, to be free from malfunctions and defects in both materials and workmanship for one year from the date of purchase. Retain the original dated sales receipt. Proof of the date of purchase will be required with any request for warranty repair. Warranty service is only available from within the country where the Products were originally purchased. You may be required to ship Products, at your expense, to the authorized service facility for the country where the Products were purchased. Kodak will repair or replace Products if they fail to function properly during the warranty period, subject to any conditions and/or limitations stated herein. Warranty service will include all labor as well as any necessary adjustments and/or replacement parts. If Kodak is unable to repair or replace a Product, Kodak will, at its option, refund the purchase price paid for the Product provided the Product has been returned to Kodak along with proof of the purchase price paid. Repair, replacement, or refund of the purchase price are the sole remedies under the warranty. If replacement parts are used in making repairs, those parts may be remanufactured, or may contain remanufactured materials. If it is necessary to replace the entire Product, it may be replaced with a remanufactured Product. Remanufactured Products, parts and materials are warranted for the remaining warranty term of the original Product, or 90 days after the date of repair or replacement, whichever is longer.

Limitations

This warranty does not cover circumstances beyond Kodak’s control. This warranty does not apply when failure is due to shipping damage, accident, alteration, modification, unauthorized service, misuse, abuse, use with incompatible accessories or attachments (such as third party ink or ink tanks), failure to follow Kodak’s operation, maintenance or repacking instructions, failure to use items supplied by Kodak (such as adapters and cables), or claims made after the duration of this warranty. Kodak makes no other express or implied warranty for this product, and disclaims the implied warranties of merchantability and fitness for a particular purpose. In the event that the exclusion of any implied warranty is ineffective under the law, the duration of the implied warranty will be one year from the purchase date or such longer period as required by law. The option of repair, replacement, or refund is Kodak’s only obligation. Kodak will not be responsible for any special, consequential or incidental damages resulting from the sale, purchase, or use of this product regardless of the cause. Liability for any special, consequential or incidental damages (including but not limited to loss of revenue or profit, downtime costs, loss of the use of the equipment, cost of substitute equipment, facilities or services, or claims of your customers for such damages resulting from the purchase, use, or failure of the Product), regardless of cause or for breach of any written or implied warranty is expressly disclaimed.

Your rights

Some states or jurisdictions do not allow exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. Some states or jurisdictions do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. This warranty gives you specific rights, and you may have other rights which vary from state to state or by jurisdiction.

Outside the United States and Canada

In countries other than the United States and Canada, the terms and conditions of this warranty may be different. Unless a specific Kodak warranty is communicated to the purchaser in writing by a Kodak company, no warranty or liability exists beyond any minimum requirements imposed by law, even though defect, damage, or loss may be by negligence or other act.

Upgrading your software and firmware

Download the latest versions of the software included on the Kodak EasyShare software CD and the camera firmware (the software that runs on the camera). Visit www.kodak.com/go/m883downloads.

FCC compliance and advisory



Kodak EasyShare M883 zoom digital camera

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed or used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: 1) reorient or relocate the receiving antenna; 2) increase the separation between the equipment and the receiver; 3) connect the equipment to an outlet on a circuit different from that to which the receiver is connected; 4) consult the dealer or an experienced radio/TV technician for additional suggestions. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Where shielded interface cables have been provided with the product or specified additional components or accessories elsewhere defined to be used with the installation of the product, they must be used in order to ensure compliance with FCC regulation.

Canadian DOC statement

DOC Class B Compliance—This Class B digital apparatus complies with Canadian ICES-003.

Observation des normes-Classe B—Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Waste Electrical and Electronic Equipment labeling



In Europe: For human/environmental protection, it is your responsibility to dispose of this equipment at a collection facility established for this purpose (separate from municipal waste). For more information, contact your retailer, collection facility, or appropriate local authorities; or visit www.kodak.com/go/recycle. (Product weight: 105 g.)

VCCI Class B ITE

この装置は、情報処理装置等電波障害自主規制協議会（VCCI）の基準に基づくクラスB情報技術装置です。この装置は、家庭環境で使用することを目的としていますが、この装置がラジオやテレビジョン受信機に近接して使用されると、受信障害を引き起こすことがあります。
取扱説明書に従って正しい取り扱いをして下さい。

Australian C-Tick



N137

Korean Class B ITE

이 기기는 가정용으로 전자파적합등록을 한 기기로서 주거지역에서는 물론 모든 지역에서 사용할 수 있습니다.

China RoHS

环保使用期限 (EPUP)

在中国大陆, 该值表示产品中存在的任何危险物质不得释放, 以免危及人身健康、财产或环境的时间期限(以年计)。该值根据操作说明中所规定的产品正常使用而定。

有毒有害物质或元素名称及含量标识表

部件名称	有毒有害物质或元素					
	铅	汞	镉	六价铬	多溴联苯	多溴二苯醚
数码相机电路板元件	×	○	○	○	○	○
锂电池	×	○	○	○	○	○
USB A/V 连接器	×	○	○	○	○	○
交流变压器	×	○	○	○	○	○

○: 表示该有毒有害物质在该部件所有均质材料中的含量均在SJ/T 11363-2006规定的限量要求以下。
 ×: 表示该有毒有害物质至少在该部件的某一均质材料中的含量超出SJ/T 11363-2006规定的限量要求。



USB 数据线

Kodak

Eastman Kodak Company

Rochester, New York 14650

© Eastman Kodak Company, 2007

Kodak, EasyShare, and Perfect Touch are trademarks of Eastman Kodak Company.

4J6239_en