

Loading and Saving Paper Aims

PaperAims is a function that lets operators of the RP 30/SRP 30 Laser Printers:

- load paper calibration aim values into the printer database
- save paper calibration aim files from external storage media to the Printer-PC hard drive

Select **Load** PaperAims if you are installing a paper that requires different paper calibration aim values than the previously installed paper.


Select **Save** PaperAims to copy a paper calibration aim file from external storage media to the Printer-PC hard drive. **Save** will not load paper calibration aim values into the printer database.

Loading a PaperAims File

The default paper calibration aim values contained in the file named Default_PaperAim_V1.pap are designed for use with current Kodak paper types. Different PaperAim files may be required for new paper types as they are introduced.


IMPORTANT: *Because you cannot query the printer database as to which calibration aim values are currently loaded, it is important to note the name of the paper calibration aim file.*

1. Note the name of the paper calibration aim file.
2. Insert the storage medium containing the PaperAims file into the appropriate Printer-PC drive.
3. Press and hold the **LEFT ALT** key then press the **F1** key. The PaperAims window opens.

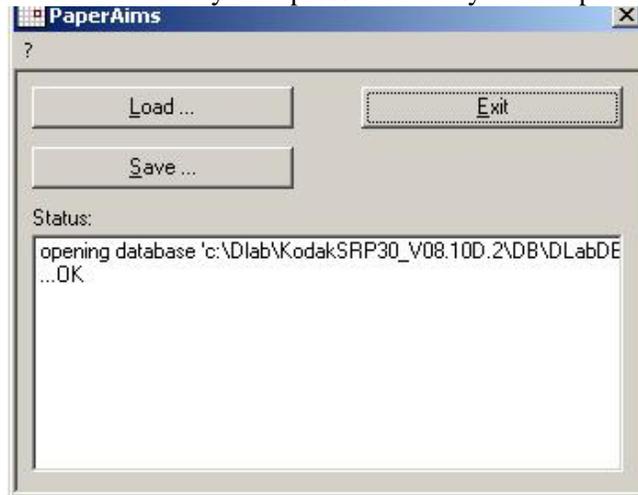

4. Select **Load** and browse to the appropriate Printer-PC drive as needed.


(S)RP 30: Loading and Saving PaperAims

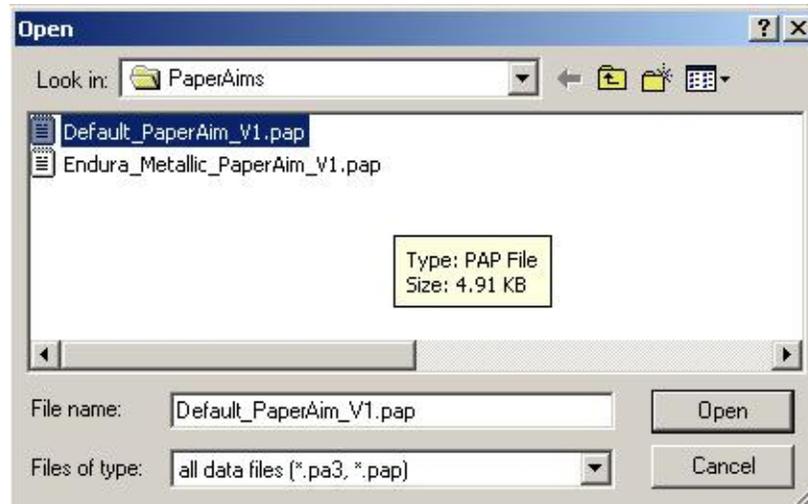

5. Highlight the desired PaperAims file, with a .pap or .pa3 file extension.
6. Select Open to load the paper calibration aim values into the printer database. If the selected paper calibration aim file is on external storage media, such as a floppy or Zip disk, the selected file is also copied to the default location d:\Data\PaperAims on the Printer-PC hard drive. If a file of the same name already exists at the default location, the values will be loaded into the printer database, but the operator is given the option to overwrite the file.

New PaperAims are automatically sent to printer after loading (via restart)

- Assures that new desired aims will become effective immediately

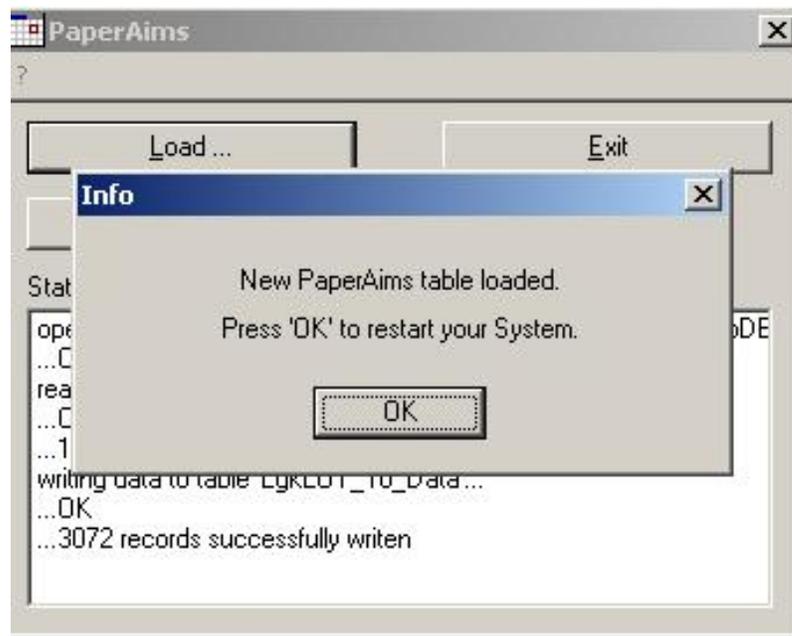

7. Press OK to restart printer.


(S)RP 30: Loading and Saving PaperAims

Saving a PaperAims File


Select **Save** PaperAims to copy a paper calibration aim file from external storage media to the Printer-PC hard drive. **Save** will not load paper calibration aim values into the printer database.

1. Insert the storage medium containing the PaperAims file into the appropriate Printer-PC drive.
2. Press and hold the **LEFT ALT** key then press the **F1** key.

The PaperAims window opens.

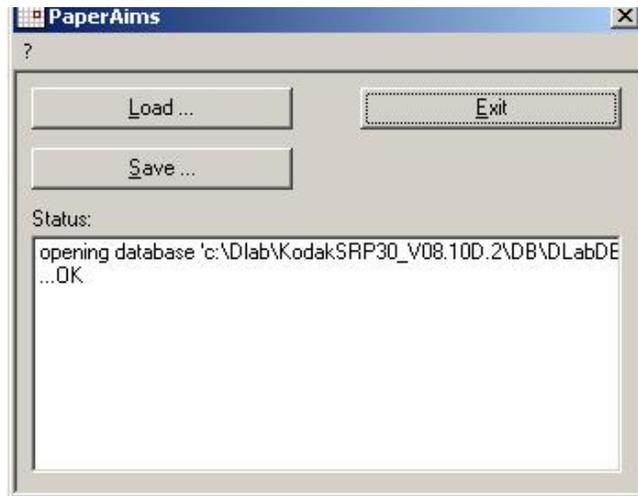

3. Select **Save**.

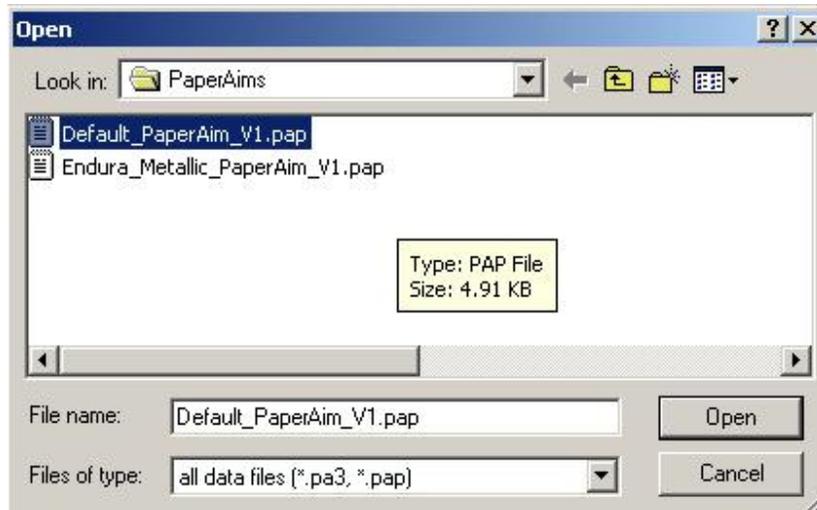

4. Browse to the appropriate Printer-PC drive.
5. Highlight the desired PaperAims file, with a .pap or .pa3 file extension.
6. Select **Open** to copy the file to the PaperAims folder on the hard drive.
7. Select **Exit** to close the PaperAims function.