



TECHNICAL INFORMATION BULLETIN

E-mailing Pictures from KODAK Picture CD Version 4, Issue 2

Created February 05, 2003.

To Send Pictures to Friends and Family

Launch KODAK Picture CD on a WINDOWS system:

1. Insert KODAK Picture CD into your CD-ROM drive.

The CD automatically launches.

Note: You can turn off the opening slideshow so it won't display every time you insert the Picture CD. Clear the **Show opening slideshow** check box. You can reactivate this feature in the **Preferences** option under the drop-down navigation menu.

Launch KODAK Picture CD on a MACINTOSH system:

1. Insert KODAK Picture CD into the CD-ROM drive.
2. Double-click the **KODAKCD** icon.
3. Double-click the **STARTMAC** icon.

Your pictures display sequentially in a slideshow.

 
Note: You can turn off the opening slideshow so it won't display every time you insert the Picture CD. Clear the **Show opening slideshow** check box. You can reactivate this feature in the **Preferences** option under the drop-down navigation menu.

4. Click **Start KODAK Picture CD** to end the slideshow and install the application. If this is your first time running this software version, follow the on-screen installation instructions.

After successful installation, the KODAK Picture CD application launches.

To E-mail Pictures:

1. Click **Contents>email**.
2. Connect to your Internet Service Provider (ISP).
If you have trouble connecting to your ISP when sending pictures, exit KODAK Picture CD 4.2, connect to the ISP, and re-launch KODAK Picture CD 4.2.
3. Click the picture you want to send.
4. Complete the **From**, **To**, **Subject**, and **Message** fields.

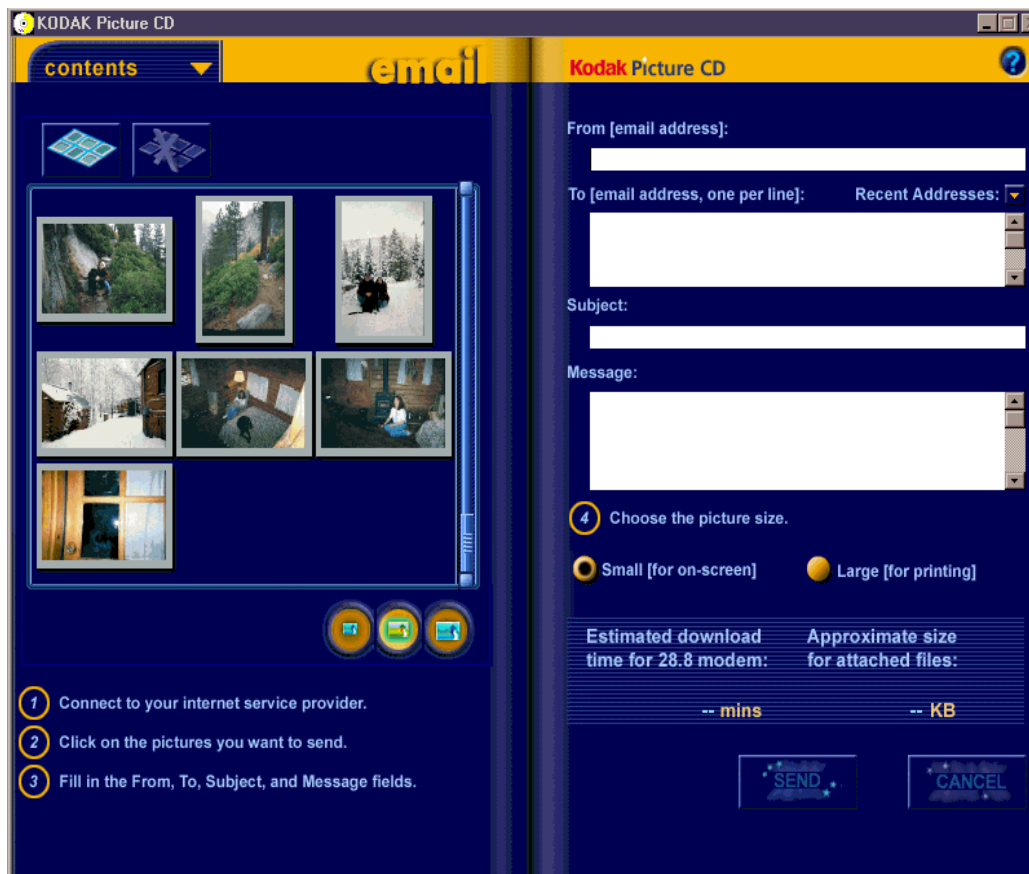

5. Choose the picture size: **Small** (default) for on-screen viewing, or **Large** for printing.

Send Pictures Using Your E-mail Provider

1. Launch your KODAK Picture CD (see above).
2. From within your e-mail, select **File>Attach** or click the **paper clip** icon.
A "Browse" button or a "Create Attachment" window appears.
3. Double-click the **Pictures** folder.
All JPEG (.jpg) picture files appear.
4. Click the picture that you want to send.
5. Click **Attach** or **Create** (whichever is offered) to add the picture to your e-mail.
6. Send your e-mail as you normally would.

Troubleshooting ISP Connection Problems

If you have trouble connecting to your ISP (Internet Service Provider) when sending pictures:

1. Exit KODAK Picture CD 4.2.
2. Connect to the ISP.
3. Re-launch KODAK Picture CD.

If you are disconnected from your ISP while sending pictures, exit KODAK Picture CD 4.2, connect to the ISP, and re-launch KODAK Picture CD 4.2. (See launch instructions above.)


Note: AOL (America Online) users sometimes have problems receiving e-mail. If your mail isn't received within eight hours, recreate the e-mail with the attachment and resend it.

To E-mail More Than One Picture at a Time

The number of pictures you can send depends on the total file size of all of the pictures. Some Internet Service Providers (ISPs) limit the size of e-mail attachments. If you are having trouble sending high-resolution pictures (the **Large** size indicated for printing) try sending low-resolution pictures or fewer high-resolution pictures.

To reduce the size of the picture that you want to send, using your own e-mail application:

 1. Go to the **Save As** section on the Picture CD.
2. Highlight the **Small** or **Medium** picture size.

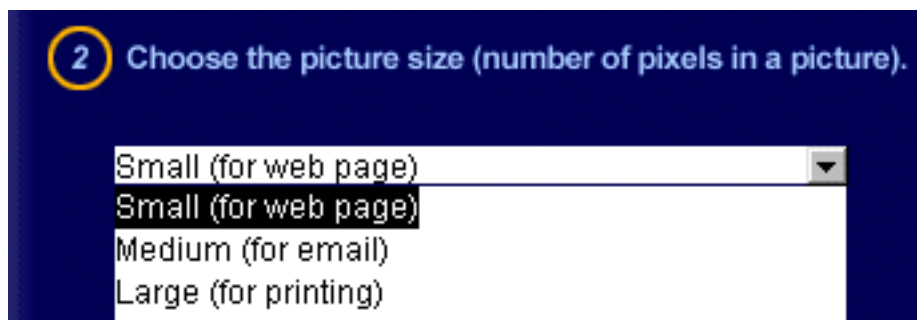

3. Click **Save** to select the picture destination and to name the file.
The changed picture is now stored in the computer location that you chose.
4. Make a note of where you stored the picture.
5. Attach the picture to your e-mail.

Kodak is a trademark of Eastman Kodak Company