


# **Super 8 Camera**

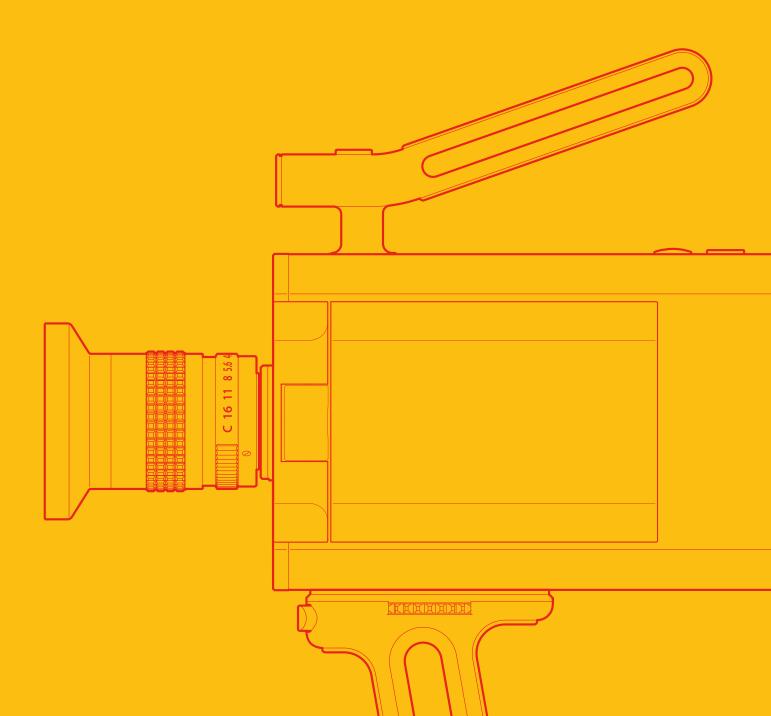

## **Safety and Battery Handling**

#### English

#### **Save These Important Safety Instructions**

- Read and follow these instructions before using Kodak products. Always follow basic safety procedures.
- The use of an accessory attachment that is not recommended by Kodak, such as an AC adapter, may cause fire, electric shock, or injury.
- If using this product in an airplane, observe all instructions of the airline.

## **CAUTION:** Do not disassemble this product; there are no user-serviceable parts inside. Refer servicing to qualified service personnel.

WARNING: Do not expose this product to liquid, moisture, or extreme temperatures. Kodak AC adapters and battery chargers are intended for indoor use only. Other instructions and restrictions may accompany the battery charger and should be read and followed before use. The use of controls, adjustments, or procedures other than those specified herein may result in exposure to shock and/or electrical or mechanical hazards.

#### **Battery Safety and Handling**



- Use only approved batteries for this product to avoid risk of explosion or fire.
- Keep batteries out of the reach of children.

Do not disassemble, install backward, or expose batteries to liquid, moisture, fire, or extreme temperature.

- Remove battery when the product is stored for an extended period of time. In the unlikely event that battery fluid leaks inside the product, contact your local Kodak Customer Service representative.
- In the unlikely event that battery fluid leaks onto your skin, wash immediately with water and contact your local health provider. For additional health-related information, contact your local Kodak Customer Service representative.
- If the battery contacts touch metal objects, the battery may short-circuit, discharge energy, become hot, or leak.



 Please dispose of used electronic equipment (WEEE) and batteries at designated collection points for recycling. Kodak encourages customers to protect human health and the environment by taking advantage of any local WEEE and battery recycling programs. For more information, contact your local household waste disposal service.

## **CAUTION:** When removing batteries, allow them to cool first; batteries may be hot.

For more information, or to contact your local Kodak Customer Service representative, go to: www.kodak.com/go/super8

## Read and observe the following warnings and precautions to ensure correct and safe use of Li-ion batteries.

#### Danger!

- Do not immerse the battery in water or allow it to get wet.
- Do not use or store the battery near sources of heat such as a fire or heater.
- Do not use any chargers other than those recommended.
- Do not reverse the positive (+) and negative (-) terminals.
- Do not connect the battery directly to wall outlets or car cigarette-lighter sockets.
- Do not put the battery into a fire or apply direct heat to it.
- Do not short-circuit the battery by connecting wires or other metal objects to the positive (+) and negative (-) terminals.
- Do not pierce the battery casing with a nail or other sharp object, break it open with a hammer, or step on it.
- Do not strike, throw or subject the battery to severe physical shock.
- Do not directly solder the battery terminals.
- Do not attempt to disassemble or modify the battery in any way.
- Do not place the battery in a microwave oven or pressurized container.
- Do not use the battery in combination with primary batteries (such as dry-cell batteries) or batteries of different capacity, type or brand.
- Do not use the battery if it gives off an odor, generates heat, becomes discolored or deformed, or appears abnormal in any way. If the battery is in use or being recharged, remove it from the device or charger immediately and discontinue use.

#### **Caution!**

- Do not use or store the battery where it is exposed to extreme heat, such as under a window of a car in direct sunlight in a hot day. Otherwise, the battery may be overheated. This can also reduce battery performance and/or shorten service life.
- If the battery leaks and electrolyte gets in your eyes, do not rub them. Instead, rinse them with clean running water and immediately seek medical attention. If left as is, electrolyte can cause eye injury.



### Warranty

#### **Limited Warranty**

THIS IS A LIMITED WARRANTY FOR KODAK SUPER 8 CAMERA ("Product"). THIS WARRANTY IS ONLY VALID WITHIN THE COUNTRY OF SALE OF THE PRODUCT. YOU MUST PRESENT THIS FORM TOGETHER WITH VALID PROOF OF PURCHASE AND PROOF OF PURCHASE DATE (BILL OF SALE) TO OBTAIN WARRANTY SERVICE.

This Eastman Kodak Company ("Kodak") Product is warranted by Kodak to be free from defects in material and workmanship for one (1) year from the date of purchase or usage of a maximum of 100,000 frames shot, whichever comes first.

During this warranty period if the Product is found to be defective in material or workmanship, Kodak or one of its authorized service facilities will at its sole option, either repair or replace this Product without charge, subject to the conditions, limitations and exclusions set forth herein. The option of repair or replacement is Kodak's only obligation.

- 1. This warranty extends to the original consumer purchaser only and is not assignable or transferable.
- 2. This warranty shall not apply to any Product which has been subjected to misuse, abuse, abnormal use, excessive use, negligence, alteration or accident, or has had its serial number altered or removed.
- 3. This warranty does not apply to any defects or damage directly or indirectly caused by or resulting from the use of unauthorized replacement parts, accessories, attachments; service performed by unauthorized personnel or an unauthorized repair center; failure to follow Kodak's operation, maintenance or repacking instructions; failure to use items supplied by Kodak (e.g., adapters, cables); circumstances beyond Kodak's control or claims made after the duration of this warranty.
- 4. This warranty does not apply to the batteries and software driver that accompanies this product, film or film processing.
- 5. Warranty Service is only available within the country where the Products were originally purchased. Customer may be required to ship Products, at customer's expense, to the authorized service facility within the country of purchase.
- 6. Warranty service will include labor, necessary adjustments and replacement parts. Replacement parts may be remanufactured or may contain remanufactured materials. If it is necessary to replace the entire Product, it may be replaced with a remanufactured Product in Kodak's sole discretion and at its option. Remanufactured Products, parts and materials are warranted for the remaining warranty term of the original Product or 60 days (up to 16,438 frames) after the date of repair or replacement, whichever is longer.

THIS WARRANTY IS MADE EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, AND ALL OTHER OBLIGATIONS OF EASTMAN KODAK COMPANY PROVIDED, HOWEVER, THAT IF THE DISCLAIMER OF IMPLIED WARRANTIES IS EFFECTIVE UNDER APPLICABLE LAW, THE DURATION OF ANY IMPLIED WARRANTIES ARISING BY OPERATION OF LAW SHALL BE LIMITED TO THE SHORTER OF ONE (1) YEAR FROM THE DATE OF PURCHASE OR 100,000 FRAMES SHOT OR SUCH LONGER PERIOD AS MAY BE REQUIRED BY APPLICABLE LAW.

KODAK HEREBY DISCLAIMS ANY AND ALL LIABILITY FOR SPECIAL, CONSEQUENTIAL AND INCIDENTAL DAMAGES ARISING OUT OF OR IN CONNECTION WITH THE SALE, PURCHASE OR USE OF THE PRODUCTS REGARDLESS OF THE CAUSE, ANY BREACH OF THIS WARRANTY OR ANY OTHER CLAIM WITH RESPECT TO THIS PRODUCT, INCLUDING BUT NOT LIMITED TO, CLAIMS OF NEGLIGENCE, STRICT LIABILITY IN TORT OR BREACH OF CONTRACT.

SOME STATES DO NOT ALLOW (A) LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS OR (B) THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS AND YOU MAY HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE OR BY JURISDICTION.

In order to obtain performance of the warranty obligations, the original purchaser must return the Product together with proof of purchase and proof of purchase date (bill of sale) either in person or addressed to Kodak's authorized repair center. Prior to shipping the camera for service, the camera owner will be required to communicate with a Kodak service representative who will troubleshoot and determine whether or not a repair is required. The service representative will provide instructions and direction upon such determination.

In returning this product for repair or replacement under this warranty, the original consumer purchaser must prepay all postage, shipping transportation, insurance and delivery costs, and the product must be delivered in packaging and shipping materials that afford an adequate degree of protection. Kodak will not be responsible for any loss or damage incurred in connection with the return of this product.

THIS WARRANTY WILL BE VALID ONLY WITH AUTHENTIC PRODUCTS SOLD BY KODAK AND SERVICED THROUGH AN AUTHORIZED REPAIR CENTER.



#### **FCC** Notice

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Do not make modifications to the equipment. If such changes modifications are made, you could be required to stop operating the equipment.

#### **Open Source Software Notice:**

The Kodak Super 8 Camera embedded software uses the GStreamer library, licensed under the LGPL and the QuickTime 5 library, licensed under the LGPL 2.1. It also uses WVGA, battery, and USB drivers distributed under terms of GPL v3. For more information, contact Eastman Kodak Company, Attn: General Counsel, 343 State Street, Rochester, NY 14650, 1-585-724-4000.

## Only for European Union and EEA (Norway, Iceland and Liechtenstein)



These symbols indicate that this product is not to be disposed of with your household waste, according to the WEEE Directive (2012/19/EU), the Battery Directive (2006/66/EC) and/or national legislation implementing those Directives.

If a chemical symbol is printed beneath the symbol shown above, in accordance with the Battery Directive, this indicates that a heavy metal (Hg = Mercury, Cd = Cadmium, Pb = Lead) is present in this battery or accumulator at a concentration above an applicable threshold specified in the Battery Directive.

This product should be handed over to a designated collection point, e.g., on an authorized one-for-one basis when you buy a new similar product or to an authorized collection site for recycling waste electrical and electronic equipment (EEE) and batteries and accumulators.

Improper handling of this type of waste could have a possible impact on the environment and human health due to potentially hazardous substances that are generally associated with EEE. Your cooperation in the correct disposal of this product will contribute to the effective usage of natural resources.

For more information about the recycling of this product, please contact your local city office, waste authority, approved scheme or your household waste disposal service or visit *http://www.kodak.com/go/recycle.* 

#### CAN ICES-3 (B)/NMB-3(B)

Eastman Kodak Company Rochester, NY USA 14650

#### **Copyright Warning**

Unauthorized recording of copyrighted materials may infringe on the rights of copyright owners and be contrary to copyright laws.





#### KODAK.COM/GO/SUPER8