

# **KODAK** 1.8x Magnifying LED Slide Viewer

User Manual



TO SEE THIS GUIDE IN FRENCH, ITALIAN,  
GERMAN, OR SPANISH, PLEASE VISIT

**WWW.KODAKPHOTOPLUS.COM**

OR USE THIS QR CODE:



Um diese Anleitung auf Französisch, Italienisch, Deutsch oder Spanisch zu lesen, besuchen Sie bitte [www.kodakphotoplus.com](http://www.kodakphotoplus.com) oder nutzen Sie diesen QR-Code. | Per visualizzare questa guida in francese, italiano, tedesco o spagnolo, si prega di visitare [www.kodakphotoplus.com](http://www.kodakphotoplus.com), oppure di usare questo codice QR. | Para ver esta guía en francés, italiano, alemán o español, por favor, visite [www.kodakphotoplus.com](http://www.kodakphotoplus.com) o use este código QR. | Pour consulter ce guide en anglais, en italien, en allemand ou en espagnol, veuillez aller sur le site [www.kodakphotoplus.com](http://www.kodakphotoplus.com) ou utiliser ce code QR.

# CONTENTS

|           |                         |     |
|-----------|-------------------------|-----|
| <b>EN</b> | 1. INTRODUCTION         | 3   |
|           | 2. SPECIFICATIONS       | 4   |
|           | 3. PACKAGE CONTENTS     | 5   |
|           | 4. SAFETY PRECAUTIONS   | 5-6 |
|           | 5. PRODUCT OVERVIEW     | 7   |
|           | 6. INSTALLING BATTERIES | 8   |
|           | 7. VIEWING A SLIDE      | 9   |
|           | 8. CARE & MAINTENANCE   | 10  |
|           | 9. CUSTOMER SERVICE     | 10  |
|           | 10. WARRANTY LINK       | 11  |

## 1. INTRODUCTION

Thank you for purchasing the KODAK 1.8x Magnifying LED Slide Viewer. This User Guide is intended to provide you with guidelines to ensure that operation of this product is safe and does not pose risk to the user. Any use that does not conform to the guidelines described in this User Guide may void the limited warranty.

Please read all directions carefully before using the product and retain this guide for reference. This product is intended for household use only. It is not intended for commercial use.

This product is covered by a limited one-year warranty. Coverage is subject to limits and exclusions. See warranty for details.

## 2. SPECIFICATIONS

- Product type: Slide viewer
- Dimensions: 2.4" x 6.1" x 0.9" (62 x 155 x 24 mm)
- Weight: 0.3 lbs. (132 g)
- Power source required: Yes (battery powered)
- Power source: 4 x 1.5 V AA batteries (not included)
- Light source: LED
- Magnification: 1.8x
- Compatible slides: 35mm slides
- Installation required: No
- Adult assembly required: No
- Additional tools required: No
- Country of origin: China
- Warranty included: Yes
- Warranty length: 1 year

### 3. PACKAGE CONTENTS

- KODAK 1.8x Magnifying LED Slide Viewer
- User guide

### 4. SAFETY PRECAUTIONS

 
WARNING! Please read all safety precautions and instructions carefully before using this product.

- Do not attempt to disassemble this device for any reason.
- Do not try to open the device's casing or attempt to modify it in any way. Doing so could create the risk of serious accident or injury and will void the product's limited warranty.
- Maintenance and repairs to this product should always be performed exclusively by authorized service providers. Do not attempt to repair this product on your own.
- Keep the unit away from all types of moisture, as this could damage the internal components and create the risk of fire and electrical shock.

- Never operate the unit with wet hands, as you could damage the product or cause serious injury to yourself.
- Never use the unit in the rain or snow.
- To avoid the risk of accidents, choking hazards, or damaging the unit, keep it and all included accessories out of the reach of children and/or animals.
- Batteries are not included. When inserting batteries, make sure that the positive and negative polarities match with the markings in the compartment.
- Do not mix old and new batteries together.

## 5. PRODUCT OVERVIEW




1. Lens cover
2. Power light
3. Power switch
4. Magnifying glass
5. LED backlight
6. Battery compartment
7. Neck lanyard

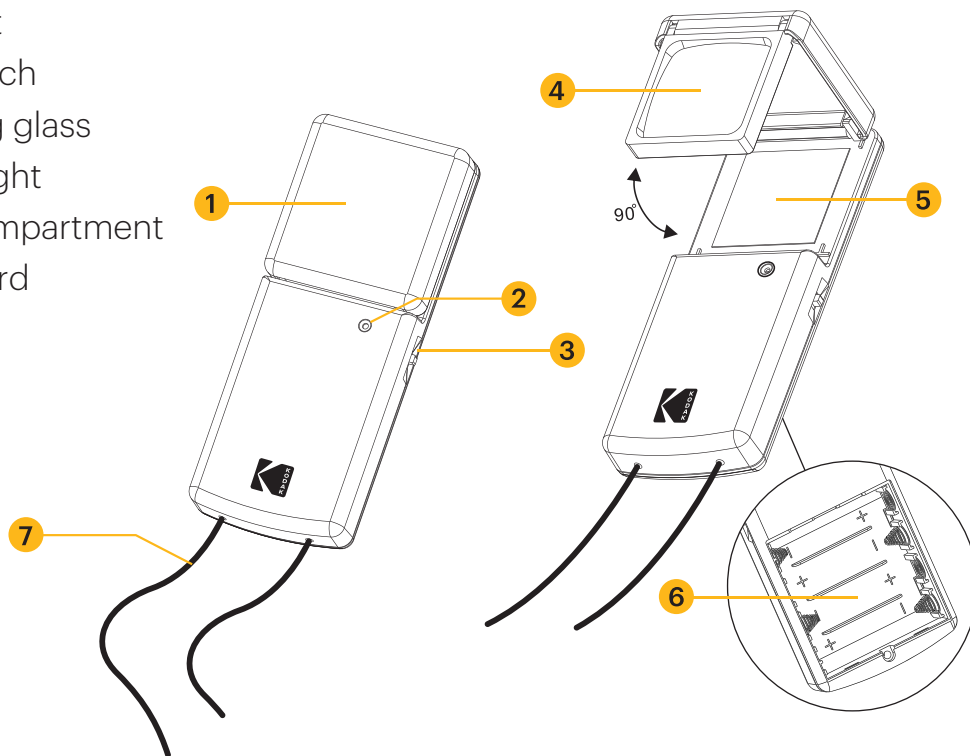




## 6. INSTALLING BATTERIES

   1. Remove the battery door from the bottom of the slide viewer.
2. Insert four (4) AA batteries (not included) into the battery compartment.
3. Close the compartment with the battery door.

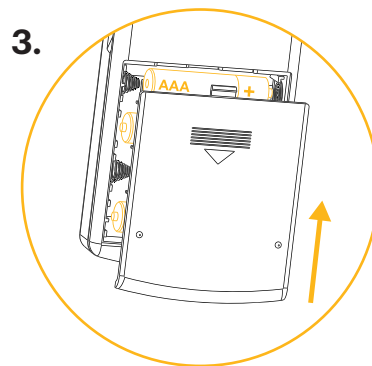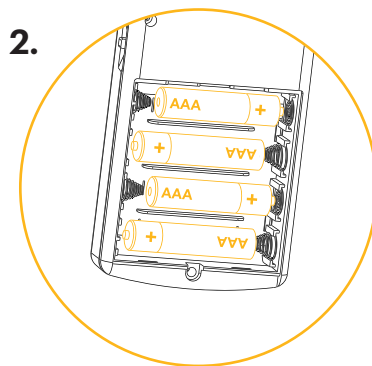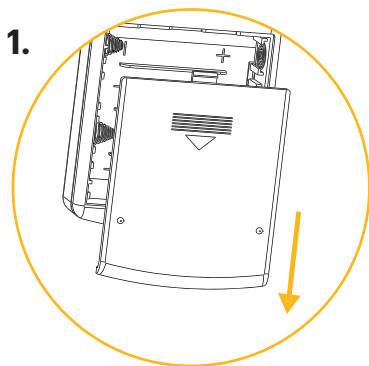

## 7. VIEWING A SLIDE

 1. Fold out the lens cover to position the magnifying lens over the backlight.
2. Move the power switch to the ON position to turn on the backlight.
3. To view a slide, place it over the backlight and under the magnifying lens.
4. When you are finished using the unit, fold up the magnifying lens and turn off the device.

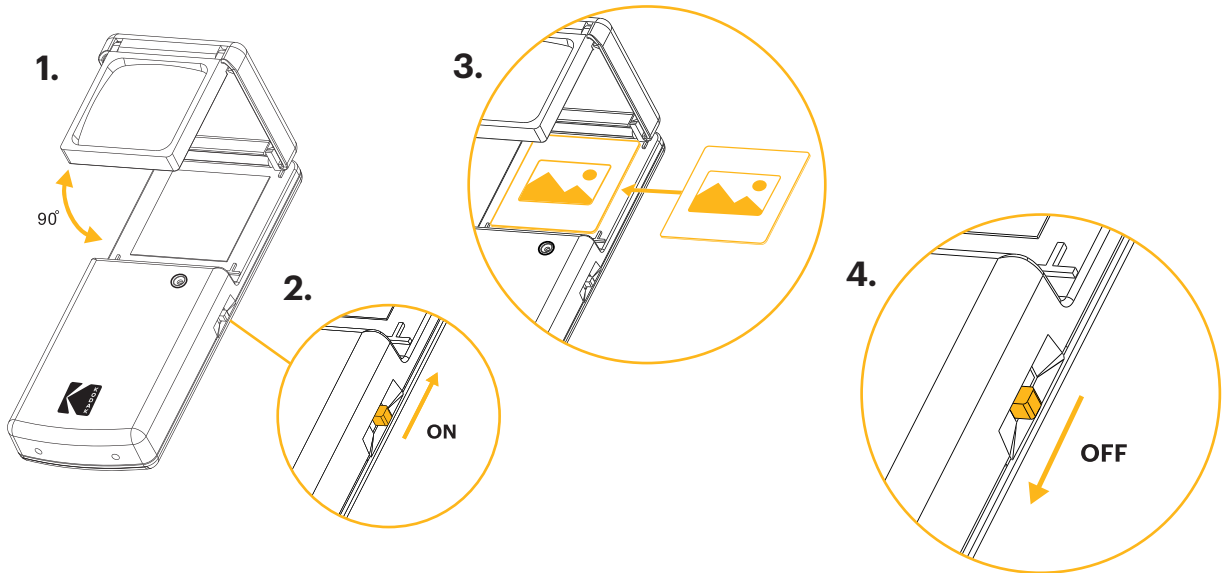

## 8. CARE & MAINTENANCE

- When storing for an extended length of time, remove the batteries from the battery compartment and store the slide viewer in a dry place.
- Clean the magnifying lens with a soft dry cotton cloth or lens cleaning paper.

## 9. CUSTOMER SERVICE

Should you experience any problems with your product, please contact us before returning the item to the place of purchase.

**We're here to help!**

U.S. Support: **[kodak@camarketing.com](mailto:kodak@camarketing.com), 844-516-1539**

International Support: **[kodakintl@camarketing.com](mailto:kodakintl@camarketing.com), 844-516-1540**

TO SEE THIS GUIDE IN FRENCH, ITALIAN,  
GERMAN, OR SPANISH, PLEASE VISIT

**WWW.KODAKPHOTOPLUS.COM**

OR USE THIS QR CODE:



**www.kodakphotoplus.com**

The Kodak trademark, logo, and trade dress are used under license from Eastman Kodak Company.

All other products, brand names, company names, and logos are trademarks of their respective owners, used merely to identify their respective products, and are not meant to connote any sponsorship, endorsement, or approval.

Distributed by C&A Marketing, Inc., 114 Tived Lane East, Edison, NJ 08837 USA.

© 2022. C&A IP Holdings LLC. All Rights Reserved. Made in China.

