


Displaying and Navigating the Menu Bar

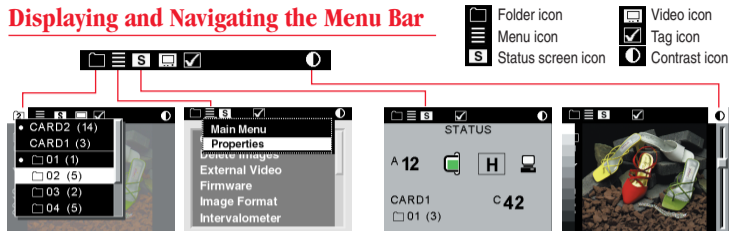


Using the Image LCD and Digital Buttons

- Turn the Image LCD on Press the OK button.
- Select a highlighted menu option Press the OK button.
- Enable Region of Interest box (Zoom mode)..... Press the OK button.
- Implement a zoom (Zoom mode) Press the OK button.
- Delete an image (Delete mode)..... Press the OK button.
- Toggle the Menu bar on/off..... Press the Menu button.
- Turn the Image LCD off Press the Cancel button.
- Dismiss a menu without implementing change Press the Cancel button.
- Disable Region of Interest box (Zoom mode)..... Press the Cancel button.
- Navigate through images in all Display modes (except Zoom mode when Region of Interest box is on) Press the left or right side of the 4-way switch.


Using the Image LCD and Digital Buttons (continued)

- Navigate the Menu bar and display menus Press the left or right side of the 4-way switch.
- Navigate a drop-down menu Press the top or bottom of the 4-way switch.
- Change to a different Display mode Press the top or bottom of the 4-way switch.
- Move the Region of Interest box (Zoom mode) Press any edge of the 4-way switch.


Connecting to a Computer with Two IEEE 1394 Ports

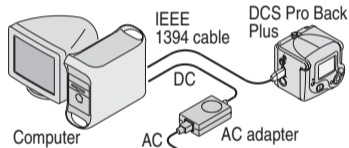

Connecting to a Computer with One IEEE 1394 Port

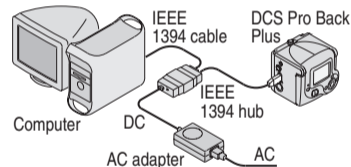

Connecting to a Computer Using Battery Power

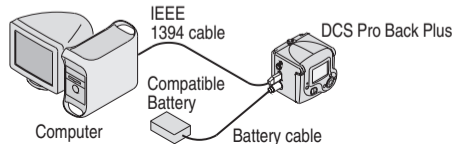


Kodak Professional DCS Pro Back Plus




Quick Reference

Front (attaches to camera body)

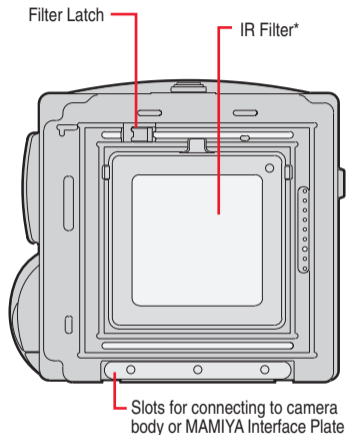


*To obtain correct focus you must use either an IR filter or an anti-aliasing filter which is available as an accessory.

Rear

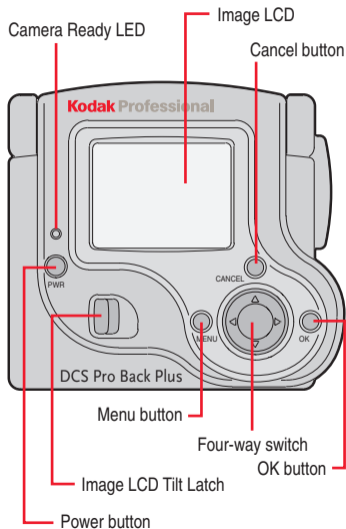


Sides

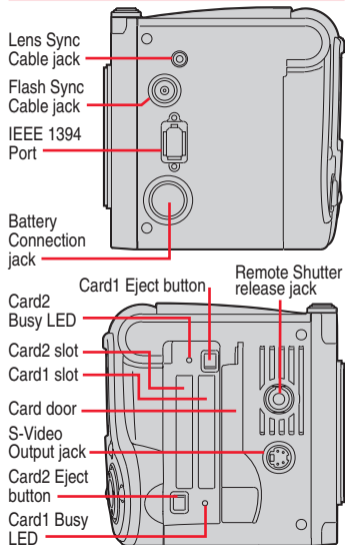

Inserting/Removing a CF Card

To Insert:


1. Open the Card door.
2. Insert a card in the slot and press firmly until you feel the card seat. (When using a single card, you can use either slot.)
3. Insert a second card, if needed. (The first card inserted is the active card.)
4. Close the Card door.

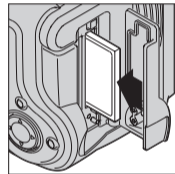


To Remove:

1. Open the Card door.
CAUTION: Do not remove the card when the Card Busy LED is flashing. Doing so could destroy all the image files on the card.
2. Press the Eject button next to the card to be ejected.

Connecting to a Battery in Portable Mode

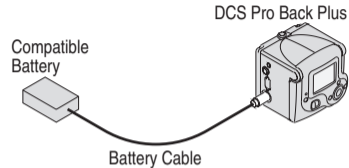

 Connecting to an AC Adapter in Portable Mode



EASTMAN KODAK COMPANY
Rochester, New York 14650
© Eastman Kodak Company, 2001

Kodak and Kodak Professional are trademarks.
Printed in U.S.A.

P/N 6B5811

9/01