

EASTMAN KODAK COMPANY

Kodak

Battery Charging (green) OOO No charging Battery low Battery partially charged Battery fully charged

Error (red blinking)



Kodak EasyShare Camera Dock II




Quick Start Guide

For details, see your KODAK EASYSHARE Camera User's Guide.

Camera Dock Contents Cavity for camera insert Connector Power/Transfer light USB connector

O Power connector

EASYSHARE Camera Contents

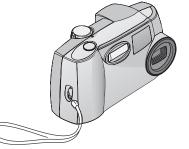

6B8006

Rochester, NY 14650 U.S.A. IM: Kodak, EasyShare © Eastman Kodak Company, 2002


- Charging lights


Connect button




Universal camera insert

Works with all KODAK **EASYSHARE** Cameras

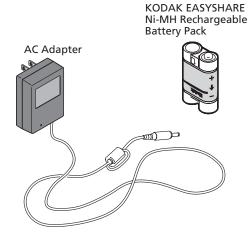

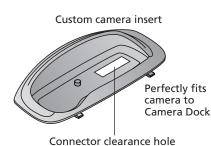


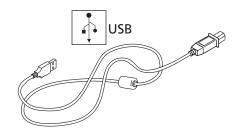




First! Install Software

BEFORE connecting Camera Dock to computer

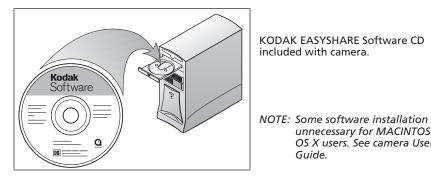


3 Connect Camera Dock

Leave connected for easy access.

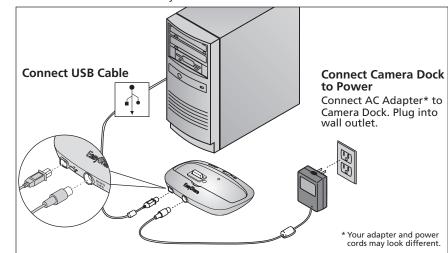

2 Install Camera Insert

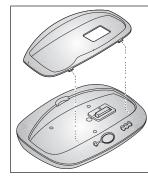

Use custom camera insert (included with camera). If unavailable, use universal camera insert (included with Camera Dock).

 
unnecessary for MACINTOSH OS X users. See camera User's

To order a custom insert for your camera go to www.kodak.com/go/accessories.

Guide.

4 Install Battery Pack


See camera User's Guide for details.




KODAK EASYSHARE Ni-MH Rechargeable Battery Pack is included with Camera Dock.

5 Charge Battery Pack

 Only the KODAK EASYSHARE Ni-MH Rechargeable Battery Pack can be recharged by the Camera Dock.



Turn off camera, place in Camera Dock.

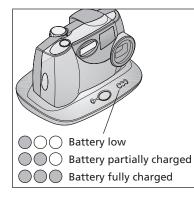


6 Take Pictures


See camera User's Guide.

Transfer Pictures to Computer

Place camera in Camera Dock. Press the Connect button.

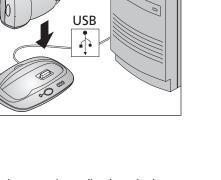

8 Store Camera in Camera Dock

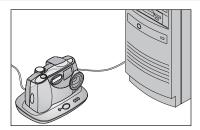

Keep your camera charged and ready to use.

Blinking Green = Pictures transferring

Open Connector door.

