


1 Installing the software


IMPORTANT: *Before connecting any cables, install the software that was included with your camera. Follow the on-screen instructions.*

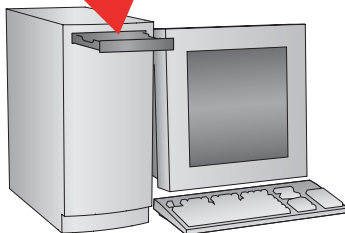


After installing the software, return to this Getting Started Guide.




2 Loading the battery

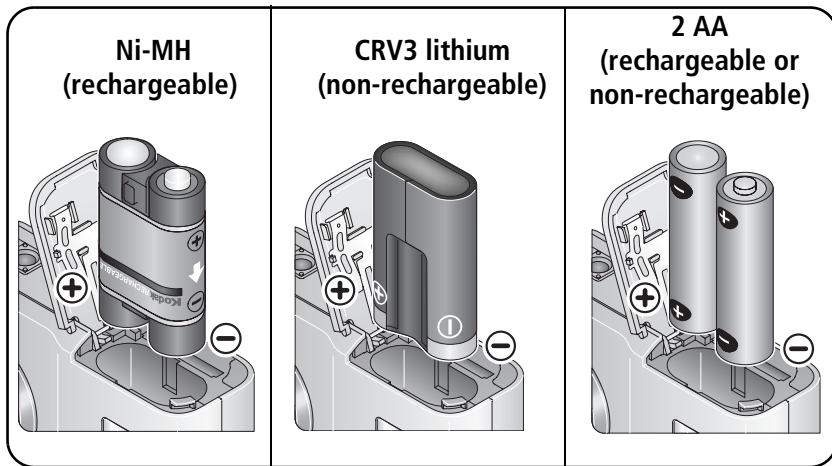



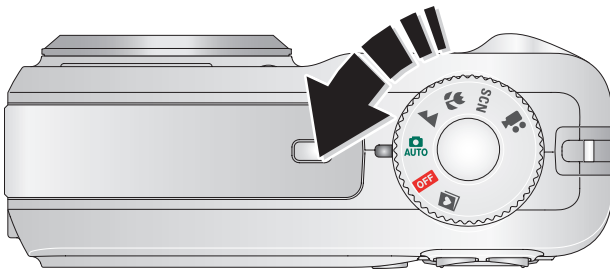

3 Turning on the camera

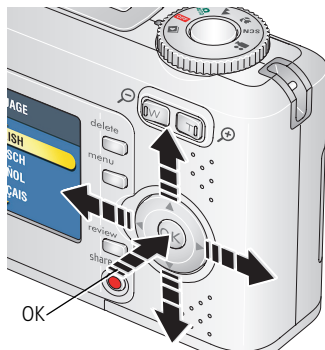


4 Setting the language, date/time



- ①  /  to change
 /  for previous/next field
- ② OK to accept

5 Taking a picture/video


Picture

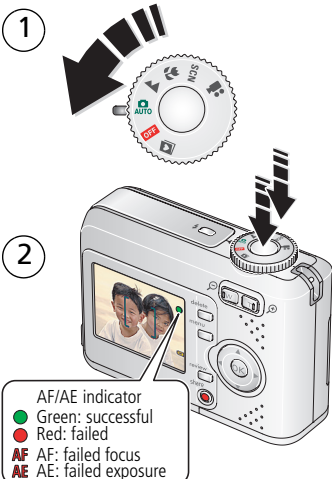

Press the Shutter button halfway down to set the auto focus and auto exposure.

When the AE/AF indicator turns green, press the Shutter button completely down.

Video

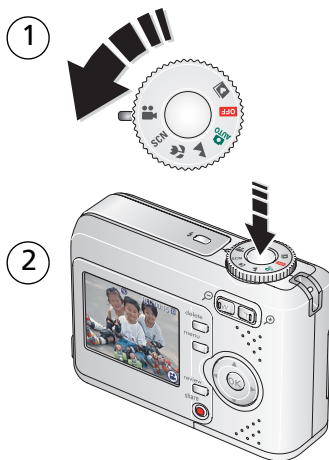

Press the Shutter button completely down and release.

To stop recording, press and release the Shutter button again.

6 Reviewing pictures/videos




- 1 Press Review.
- 2 ◀/▶ Previous/next picture/video
OK Play a video


7 Transferring pictures/videos

USB cable

1

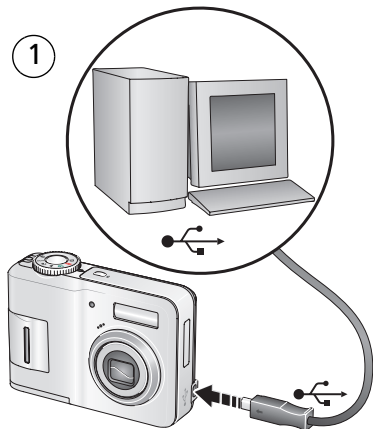

2

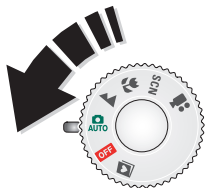

Kodak EasyShare printer dock or camera dock

(May be sold separately.)

For dock compatibility, visit www.kodak.com/go/dockcompatibility.

To purchase accessories, visit www.kodak.com/go/c433accessories.

To use an EasyShare dock, see its Getting Started Guide.

8

Keep learning about your camera!

Congratulations!

You have:

- set up your camera
- taken pictures
- transferred pictures to your computer

Keep learning!


Finish reading this book, so you can take and share your best pictures!

Visit www.kodak.com/go/c433support and www.kodak.com/go/easysharecenter for:

- the extended user's guide
- interactive troubleshooting and repairs
- interactive tutorials
- FAQs
- downloads
- accessories
- printing information
- product registration



Front view

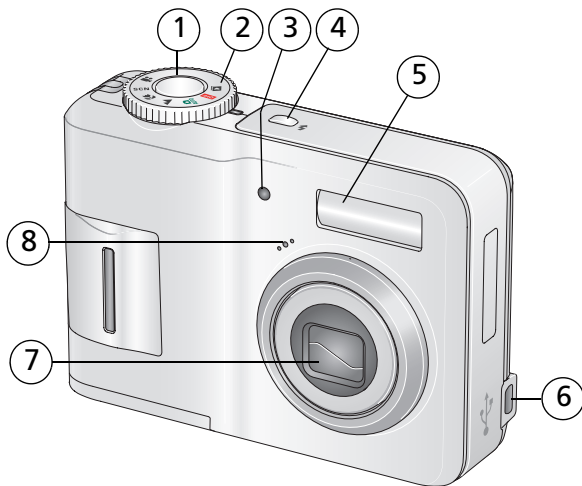

1 Shutter button

2 Mode dial

3 Self timer/Video light

4 Flash button


5 Flash


6 USB port

7 Lens

8 Microphone

Back view

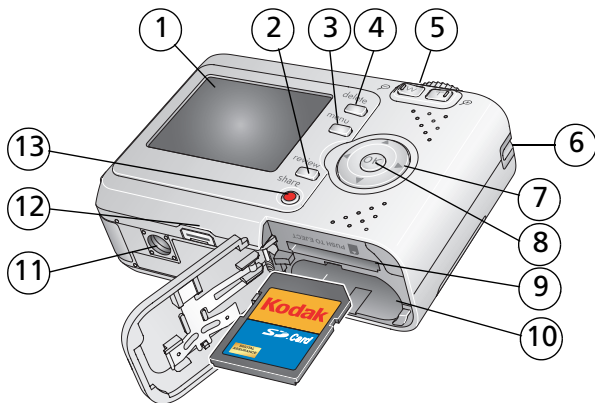

- | | | | |
|---|-----------------------------|----|---|
| 1 | LCD | 7 |  |
| 2 | Review button | 8 | OK button |
| 3 | Menu button | 9 | Slot for optional SD or MMC card |
| 4 | Delete button | 10 | Battery compartment |
| 5 | Wide angle/Telephoto button | 11 | Tripod socket |
| 6 | Strap post | 12 | Dock connector |
| | | 13 | Share button |

1


Doing more with your camera

Using optical zoom

Use optical zoom to get up to 3X closer to your subject. Optical zoom is effective when the lens is no closer than 24 in. (60 cm) to the subject or 4 in. (10 cm) in Close-up mode. You can change optical zoom before (but not during) video recording.

- 1 Use the LCD to frame your subject.
- 2 Press Telephoto (T) to zoom in. Press Wide Angle (W) to zoom out.

The zoom indicator shows zoom status.

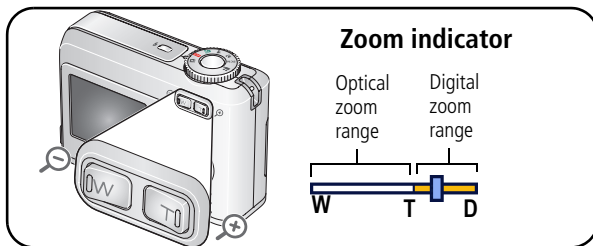

- 3 Take the picture or video.


Using digital zoom

Use digital zoom in any Still mode to get up to 15X magnification. Press the Telephoto (T) button to the optical zoom limit (3X). Release the button, then press it again.

NOTE: You may notice decreased image quality when using digital zoom. The blue slider on the zoom indicator pauses and turns red when the picture quality reaches the limit for an acceptable 4 x 6-in. (10 x 15 cm) print.

Using the flash

Use the flash when you take pictures at night, indoors, or outdoors in heavy shadows.




Press the ⚡ button repeatedly to scroll through flash modes (see Flash modes below).





The current flash mode is shown in the LCD status area.

Flash modes	Flash fires
Auto	When the lighting conditions require it.
Fill	Every time you take a picture, regardless of the lighting conditions. Use when the subject is in shadow or is "backlit" (when the light is behind the subject).
Red-eye	Once, so the subject's eyes become accustomed to the flash, then fires again when the picture is taken. (If the lighting conditions require flash but do not require Red-eye reduction, the flash may fire only once.)
Off	Never.

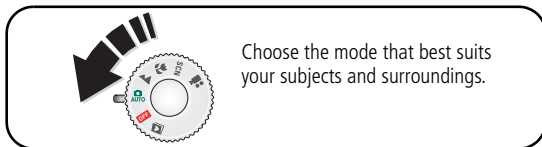Zoom position	Flash distance
Wide angle	2–11.5 ft (0.6–3.5 m) @ ISO 200
Telephoto	2– 6.6 ft (0.6–2.0 m) @ ISO 200

Picture-taking modes










Use this mode	For
 Auto AUTO	General picture taking—offers an excellent balance of image quality and ease of use.
 Landscape	Far-away scenes. The camera uses infinity auto-focus. Auto-focus framing marks are not available in Landscape.
 Close-up	Close range. Use available light instead of flash if possible. The camera automatically sets the focus distance depending on the zoom position.
SCN Scene	Point-and-shoot simplicity when taking pictures under special conditions. (See page 13.)
 Video	Capturing video with sound.




Scene modes

- 1 Turn the Mode dial to Scene **SCN**.
- 2 Press ◀/▶ to display Scene mode descriptions.

NOTE: If the Help text turns off, press the OK button.


- 3 Press the OK button to choose a Scene mode.


Use this SCN mode	For
 Portrait	Full-frame portraits of people.
 Sport	Subjects that are in motion.
 Children	Action pictures of children in bright light.
 Party	People indoors. Minimizes red eye.
 Beach	Bright beach scenes.
 Snow	Bright snow scenes.
 Fireworks	Fireworks displays. Flash does not fire. Place the camera on a flat, steady surface or use a tripod.

Use this SCN mode		For
	Self-Portrait	Close-ups of yourself. Assures proper focus and minimizes red eye.
	Backlight	Subjects that are in shadow or "backlit" (when light is behind the subject).
	Night Portrait	Night scenes or low-light conditions. Minimizes red eye. Place the camera on a flat, steady surface or use a tripod.

Using the self-timer


The Self-timer creates a 10-, 2-second, or 2-shot delay between the time you press the Shutter button and the time the picture or video is taken.



- 1 In any Still mode, press the Menu button.
- 2 Use $\blacktriangle/\blacktriangledown$ to highlight Self Timer , then press OK.
- 3 Use $\blacktriangle/\blacktriangledown$ to highlight a self-timer setting, then press OK.
 - 10-second delay (so you have time to get into the scene)
 - 2-second delay (for a steady, auto-shutter release on a tripod)
 - 2-shot (one picture taken after 10 seconds and another picture taken 8 seconds later)
- 4 Place camera on a flat surface or tripod.
- 5 Compose the scene.
- 6 Press the Shutter button halfway, then completely down.



To cancel the self-timer, follow steps 1 and 2, select Off, then press OK.


Use the same procedure to take a video, but:

- Turn the Mode dial to Video .
- Press the Shutter button completely down.

NOTE: The video stops when no storage space remains. Only the 2- and 10-second options are available in video mode.

Using exposure compensation to adjust brightness

In Auto, Landscape, or Close-up mode, you can adjust exposure compensation to make your pictures darker or lighter. Press  to decrease exposure compensation and  to increase exposure compensation.


The exposure compensation level is shown on the LCD , and the LCD gets dimmer or brighter.

Using the auto-focus framing marks (for pictures)

On the LCD screen, framing marks indicate the camera focus area. The camera attempts to focus on foreground subjects, even if the subjects are not centered in the scene.

- 1 Press the Shutter button **halfway**.

When the framing marks turn green, focus is accomplished.

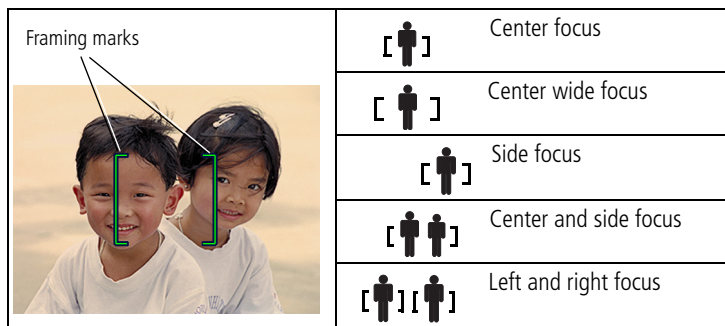

- 2 If the camera is not focusing on the desired subject (or if the framing marks disappear), release the Shutter button, recompose the scene, and repeat step 1.
- 3 Press the Shutter button **completely down** to take the picture.


NOTE: Framing marks do not appear in Landscape or Video mode. When you use Focus Zone and set Center Zone, the framing marks are fixed at Center Wide.

2

Working with pictures/videos

Reviewing pictures/videos on your camera

Press the Review button to view and work with your pictures/videos.



1 Press Review.
(Press again to exit.)

2 ◀/▶ for previous/next.


Videos:

- OK Play/pause.
- ◀ Rewind to beginning (during playback).
- ▶ Next picture/video (during playback).


To save battery power, use an optional Kodak EasyShare dock.
(See www.kodak.com/go/c433accessories.)

NOTE: Pictures taken at the 3.5 MP (3:2) quality setting are displayed at a 3:2 aspect ratio with black bars at the top of the screen. A video's duration is displayed at the top of the LCD.


Magnifying a picture during review

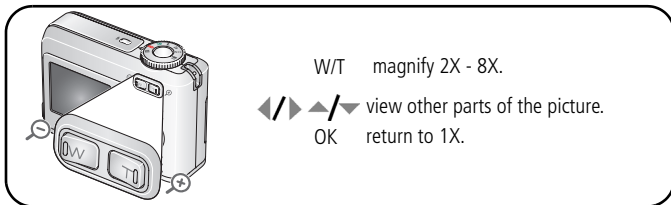

Viewing multi-up (thumbnails)

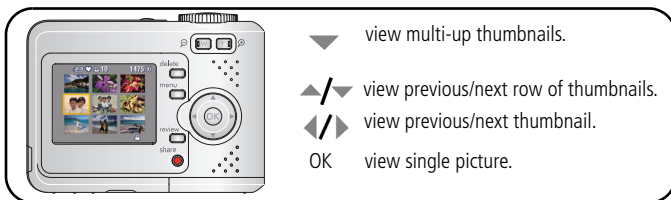

Deleting pictures/videos

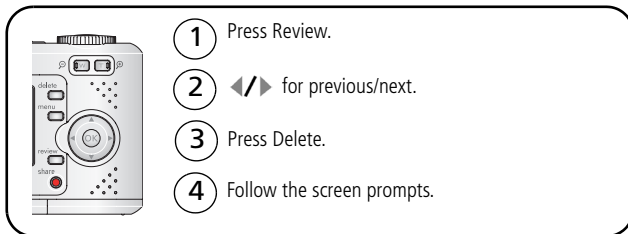


Using the undo delete feature

If you accidentally delete a picture, you can use Undo Delete to retrieve it. This feature is only available immediately after you delete a picture.

NOTE: You cannot use Undo Delete if your picture is larger than 10 MB.


Running a slide show


Use the Slide Show to display your pictures/videos on the LCD.

- 1 Press the Review button, then press the Menu button.
- 2 Press ▲/▼ to highlight Slide Show , then press the OK button.
- 3 Press ▲/▼ to highlight Begin Show, then press the OK button.
Each picture and video is displayed once.

To interrupt the Slide Show, press the OK button.

Cropping pictures



- 1 Press Review.
- 2 ◀/▶ for previous/next.
- 3 Press Menu, choose Crop , then press OK.
- 4 Press Telephoto (T) to zoom in, or ◀/▶ ▶/▶ to move the crop box.
- 5 Follow the screen prompts.

The picture is copied, then cropped. The original picture is saved. A cropped picture cannot be cropped again on the camera.

Press the Menu button to exit the menu.






Copying pictures/videos

You can copy pictures/videos from a card to internal memory or from internal memory to a card.

Before you copy, make sure that:

- A card is inserted in the camera.
- The camera's picture storage location is set to the location **from** which you are copying.

Copy pictures or videos:

- 1 Press the Review button, then press the Menu button.
- 2 Press / to highlight Copy , then press the OK button.
- 3 Press / to highlight an option.
- 4 Press the OK button.

NOTE: Pictures/videos are copied, not moved. To remove pictures/videos from the original location after copying, delete them (see [page 19](#)). Tags that you applied for print, email, and favorites are not copied. Protection settings are not copied.

3

Solving camera problems

For step-by-step product support, visit www.kodak.com/go/c433support and select Interactive Troubleshooting & Repairs.

Camera problems

If...	Try one or more the following
Camera does not turn on.	<ul style="list-style-type: none">■ Install new batteries.■ Charge rechargeable batteries.
Camera does not turn off.	<ul style="list-style-type: none">■ Remove the battery, then reinsert or replace it.
Pictures remaining number does not decrease after taking a picture.	<ul style="list-style-type: none">■ The camera is operating normally. Continue taking pictures.
Short battery life with Kodak Ni-MH rechargeable digital camera batteries.	<ul style="list-style-type: none">■ Wipe the contacts with a clean, dry cloth before loading batteries in the camera.■ Use the Refresh feature on your camera dock series 3 or printer dock series 3.
Stored pictures are corrupted.	<ul style="list-style-type: none">■ Retake pictures. Keep rechargeable batteries charged.



CAUTION:

Do not disassemble this product; there are no user-serviceable parts inside. Refer servicing to qualified service personnel. Do not expose this product to liquid, moisture, or extreme temperatures. Kodak AC adapters and battery chargers are intended for indoor use only. The use of controls, adjustments, or procedures other than those specified herein may result in exposure to shock and/or electrical or mechanical hazards. If the LCD breaks, do not touch the glass or liquid. Contact Kodak customer support.

- The use of an accessory attachment that is not recommended by Kodak, such as an AC adapter, may cause fire, electric shock, or injury.
- Use only a USB-certified computer. Contact your computer manufacturer if you have questions.
- If using this product in an airplane, observe all instructions of the airline.
- When removing the battery, allow it to cool; it may be hot.
- Read and follow all warnings and instructions supplied by the battery manufacturer.
- Use only batteries approved for this product to avoid risk of explosion.
- Keep batteries out of the reach of children.
- Do not allow batteries to touch metal objects, including coins. Otherwise, a battery may short circuit, discharge energy, become hot, or leak.
- Do not disassemble, install backward, or expose batteries to liquid, moisture, fire, or extreme temperature.
- Remove the battery when the product is stored for an extended period of time. In the unlikely event that battery fluid leaks inside the product, contact Kodak customer support.
- In the unlikely event that battery fluid leaks onto your skin, wash immediately with water and contact your local health provider. For additional health-related information, contact your local Kodak customer support.
- Dispose of batteries according to local and national regulations.
- Do not charge non-rechargeable batteries.

For more information on batteries, see www.kodak.com/go/batterytypes

Upgrading your software and firmware

Download the latest versions of the software included on the Kodak EasyShare software CD and the camera firmware (the software that runs on the camera). See www.kodak.com/go/c433downloads.

Additional care and maintenance

- If the camera has been subjected to inclement weather or you suspect water has gotten inside the camera, turn off the camera and remove the batteries and card. Allow components to air-dry for at least 24 hours before using the camera again.
- Blow gently on the lens or LCD to remove dust and dirt. Wipe gently with a soft, lint-free cloth or an untreated lens-cleaning tissue. Do not use cleaning solutions unless designed specifically for camera lenses. Do not allow chemicals, such as suntan lotion, to contact painted surfaces.
- Service agreements are available in some countries. Contact a dealer of Kodak products for more information.
- For digital camera disposal or recycling information, contact your local authorities. In the US, visit the Electronics Industry Alliance Web site at www.eiae.org or visit www.kodak.com/go/c433support.

Warranty

Kodak warrants Kodak EasyShare digital cameras and accessories (excluding batteries) to be free from malfunctions and defects in both materials and workmanship for one year from the date of purchase.

Retain the original dated sales receipt. Proof of the date of purchase will be required with any request for warranty repair.

This limited warranty will be honored only within the geographical location that Kodak digital cameras and accessories were purchased.

Kodak will REPAIR or REPLACE Kodak EasyShare digital cameras and accessories if they fail to function properly during the warranty period, subject to any conditions and/or limitations stated herein. Such repair service will include all labor as well as any necessary adjustments and/or replacement parts. Such repair or replacement is the sole remedy under this warranty.

If replacement parts are used in making repairs, these parts may be remanufactured, or may contain remanufactured materials. If it is necessary to replace the entire product, it may be replaced with a remanufactured product.

Request for Warranty service will not be accepted without proof of date of purchase, such as a copy of the original dated Kodak EasyShare digital camera or accessory sales receipt. (Always keep the original for your records.)

This warranty does not apply to the battery(s) used in digital cameras or accessories. This warranty does not cover circumstances beyond Kodak's control, nor problems caused by failure to follow the operating instructions in the Kodak EasyShare digital cameras and accessories User's Guides.

This warranty does not apply when failure is due to shipping damage, accident, alteration, modification, unauthorized service, misuse, abuse, use with incompatible accessories or attachments, failure to follow Kodak's operation, maintenance or repacking instructions, failure to use items supplied by Kodak (such as adapters and cables), or claims made after the duration of this warranty.

Kodak makes no other express or implied warranty for this product. In the event that the exclusion of any implied warranty is ineffective under the law, the duration of the implied warranty will be one year from the purchase date.

The option of replacement is Kodak's only obligation. Kodak will not be responsible for any special, consequential or incidental damages resulting from the sale, purchase, or use of this product, regardless of the cause. Liability for any special, consequential or incidental damages (including but not limited to loss of revenue or profit, downtime costs, loss of the use of the equipment, cost of substitute equipment, facilities or services, or claims of your customers for such damages resulting from the purchase, use or failure of the product), regardless of cause or for breach of any written or implied warranty is expressly disclaimed and excluded herefrom.

Your rights

Some states or jurisdictions do not allow exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. Some states or jurisdictions do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

This warranty gives you specific rights, and you may have other rights which vary from state to state or by jurisdiction.

Outside the United States and Canada

In countries other than the United States and Canada, the terms and conditions of this warranty may be different. Unless specific Kodak warranty is communicated to the purchaser in writing by a Kodak company, no warranty or liability exists beyond any minimum requirements imposed by law, even though defect, damage, or loss may be by negligence or other act.

FCC compliance and advisory



Kodak EasyShare C433 zoom digital camera

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed or used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: 1) reorient or relocate the receiving antenna; 2) increase the separation between the equipment and the receiver; 3) connect the equipment to an outlet on a circuit different from that to which the receiver is connected; 4) consult the dealer or an experienced radio/TV technician for additional suggestions.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Where shielded interface cables have been provided with the product or specified additional components or accessories elsewhere defined to be used with the installation of the product, they must be used in order to ensure compliance with FCC regulation.

Canadian DOC statement

DOC Class B Compliance—This Class B digital apparatus complies with Canadian ICES-003.

Observation des normes-Classe B—Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Waste Electrical and Electronic Equipment labeling



In the European Union, do not discard this product as unsorted municipal waste. Contact your local authorities or go to www.kodak.com/go/recycle for recycling program information.

VCCI Class B ITE

この装置は、情報処理装置等電波障害自主規制協議会（VCCI）の基準に基づいたクラスB情報技術装置です。この装置は、家庭環境で使用することを目的としていますが、この装置がラジオやテレビジョン受信機に近接して使用されると、受信障害を引き起こすことがあります。取扱説明書に従って正しい取り扱いをして下さい。

English translation: This is a Class B product based on the standard of the Voluntary Control Council for Interference from Information Technology Equipment (VCCI). If this is used near a radio or television receiver in a domestic environment, it may cause radio interference. Install and use the equipment according to the instruction manual.

Korean Class B ITE

이 기기는 가정용으로 전자파적합 등록을 한 기기로서 주거지역에서는 물론 모든 지역에서 사용할 수 있습니다.

Kodak

Eastman Kodak Company

Rochester, New York 14650

© Eastman Kodak Company, 2006

Kodak and EasyShare are trademarks of Eastman Kodak Company.

4J4882_en

Notes