


1 Installing the software


IMPORTANT: *Before connecting any cables, install the software that was included with your camera. Follow the on-screen instructions.*

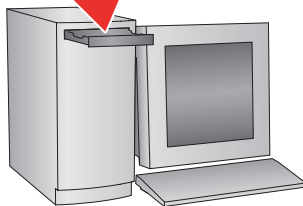

After installing the software, return to this Getting Started Guide.



2 Loading the batteries

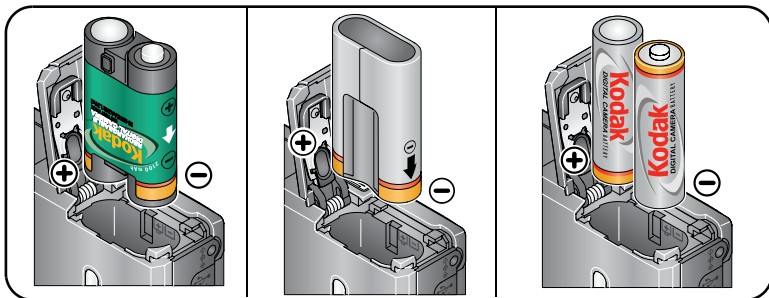


Ni-MH
(rechargeable)

CRV3 lithium
(non-rechargeable)

2 AA (rechargeable or
non-rechargeable)

3 Turning on the camera

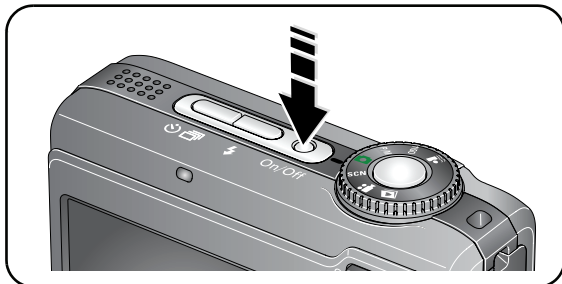

4 Setting the language, date/time


- ① Language:
 - 1 ▲/▼ to change.
 - 2 OK to accept.

- ① Date/Time:
 - 1 At the prompt, press OK.
 - 2 ▲/▼ to change.
◀/▶ for previous/next field.
OK to accept.





5 Taking a picture/video

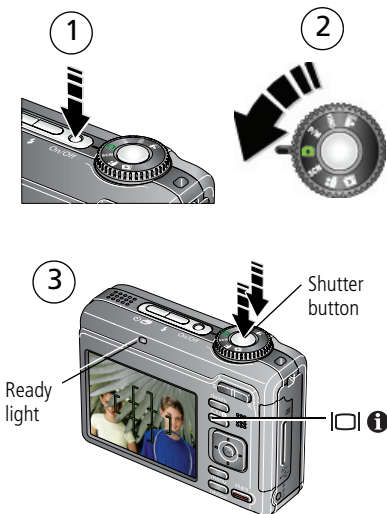Pictures



Press the Shutter button halfway to focus and set exposure.

Press it completely down when the Ready light turns green.

Press   to turn on/off the LCD

Videos



Press the Shutter button completely down and release.

To stop recording, press the Shutter button again.

6 Reviewing pictures/videos



- ① Press Review.
(Press again to exit.)
- ② ◀▶ for previous/next picture/video.



Videos:

- ▶ Play.
- OK During playback to pause or play.
- ▲/▼ During playback to adjust the volume.
 - ▶ During playback to play at 2X speed; press again for 4X.
 - ◀ During playback to reverse at 2X speed; press again for 4X.


7 Transferring pictures/videos

USB cable

①

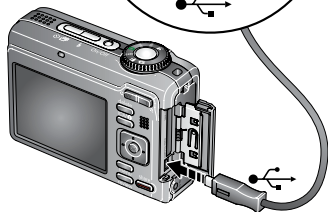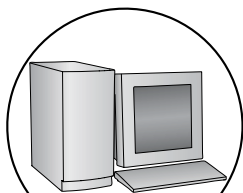

②

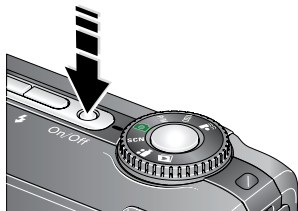

Kodak EasyShare printer dock or camera dock

(May be sold separately.)

For dock compatibility, visit www.kodak.com/go/dockcompatibility.

To purchase accessories, visit www.kodak.com/go/z885accessories.

To use an EasyShare dock, see its Getting Started Guide.

8 Keep learning about your camera!

Congratulations!

You have:

- set up your camera
- taken pictures
- transferred pictures to your computer

Keep learning!


Finish reading this book, so you can take and share your best pictures!

Visit www.kodak.com/go/z885support and www.kodak.com/go/easysharecenter for:

- the extended user's guide
- interactive troubleshooting and repairs
- interactive tutorials
- FAQs
- downloads
- accessories
- printing information
- product registration



Front view

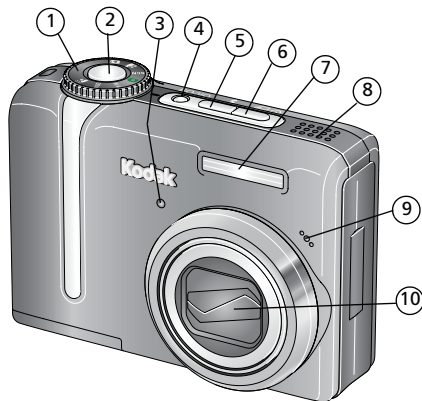


1 Mode dial

2 Shutter button

3 Self-timer/Video light

4 On/Off button

5 Flash button 

6 Self-timer/Burst button 


7 Flash





8 Speaker

9 Microphone

10 Lens

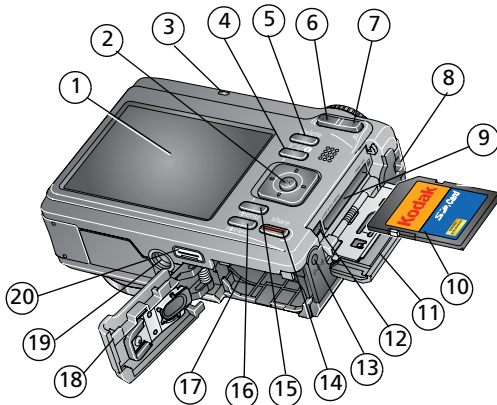Back view

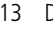

- | | |
|---|--|
| 1 LCD | 11 SD/MMC card door |
| 2 OK/4-way arrows  | 12 USB, A/V Out  |
| 3 Ready light | 13 DC-In (3V)  , for optional AC adapter |
| 4 LCD/Info button  | 14 Share button |
| 5 Delete button | 15 Menu button |
| 6 Wide angle button | 16 Review button |
| 7 Telephoto button | 17 Battery compartment |
| 8 Strap post | 18 Battery door |
| 9 Slot for optional SD or MMC card | 19 Tripod socket |
| 10 SD or MMC card (sold separately) | 20 Dock connector |

1

Doing more with your camera

Using optical zoom


Use optical zoom to get up to 5X closer to your subject. Optical zoom is effective when the lens is no closer than 24 in. (60 cm) to the subject or 7.9 in. (20 cm) in Close-up mode. You can change optical zoom before and during video recording.

- 1 Use the LCD to frame your subject.
- 2 Press Telephoto (T) to zoom in. Press Wide Angle (W) to zoom out.

The zoom indicator shows zoom status.


- 3 Take the picture or video.


NOTE: In Video mode, the zoom indicator changes and only the optical zoom range appears.

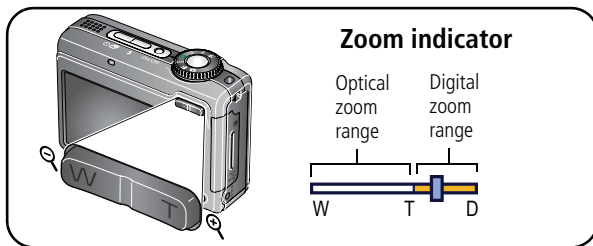


Using the self-timer


Use the self-timer when you want to be included in a picture, or to ensure a steady Shutter button press.

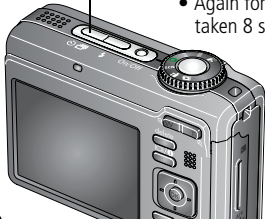

- 1 Place camera on a tripod or flat surface.
- 2 In most Still modes, press the Self-timer/Burst button :
 - Once for a 10-second delay (so you have time to get into the scene)
 - Again for a 2-second delay (for a steady, auto-shutter release on a tripod)
 - Again for 2-shot (one picture taken after 10 seconds and another picture taken 8 seconds later)
- 3 Compose the scene.
- 4 Press the Shutter button halfway, then completely down.
The picture is taken after the delay.


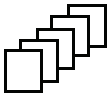

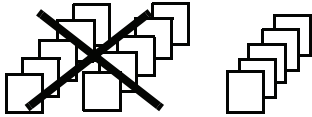
To cancel the Self-timer before the picture is taken, press the Self-timer/Burst button , or press the Shutter button completely down.


Use the same procedure to use the self-timer in Video mode, but:

- Turn the Mode dial to Video .
- Press the Shutter button completely down.

NOTE: The video stops when no storage space remains. Only the 2- and 10-second options are available in video mode.

Using burst

Mode	Icon	Description	Purpose
First Burst		Camera takes up to 5 pictures while the Shutter button is pressed. 	Capture an expected event. Example: A person swinging a golf club.
Last Burst		Camera takes up to 30 pictures while the Shutter button is pressed. When the Shutter button is released, only the last 5 pictures are saved. 	Capture an event when the precise timing is uncertain. Example: A child blowing out birthday candles.

1 In most Still modes, press the Self-timer/Burst button .

NOTE: Burst is unavailable in Portrait, Night Portrait, Night Landscape, Backlight, Fireworks, and Panorama.


2 Press the Shutter button **halfway** to focus and set exposure.

3 Press the Shutter button **completely down and hold it** to take pictures.

The camera stops taking pictures when you release the Shutter button, when the pictures are taken, or when there is no more storage space.

NOTE: During quickview, you can delete all pictures in the burst series. To delete selectively, do so in Review (see [page 21](#)).

Using the flash

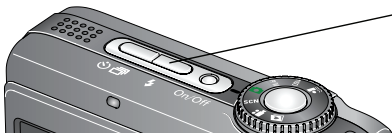


Press the **⚡** button repeatedly to scroll through flash modes (see Flash modes below).






The current flash mode appears in the LCD screen.

Flash-to-subject distance	
Zoom position	Flash distance
Wide angle	2–19.3 ft (0.6–5.9 m) @ ISO 400
Telephoto	2–10.5 ft (0.6–3.2 m) @ ISO 400

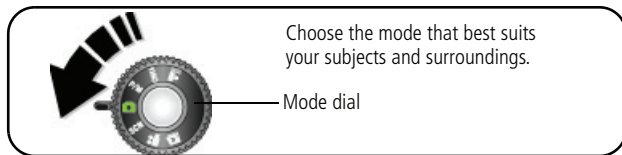Flash modes	Flash fires	
⚡A Auto Flash	When the lighting conditions require it.	
⚡ Fill	Every time you take a picture, regardless of the lighting conditions. Use when the subject is in shadow or is “backlit” (when the light is behind the subject). In low light, hold the camera steady or use a tripod.	
👁 Red-eye	If Red-eye Pre-flash is turned off: ■ The flash fires once and the camera automatically corrects red-eye in the picture.	If Red-eye Pre-flash is turned on: ■ The flash fires once so the eyes become accustomed to the flash, then fires again when the picture is taken.
⚡ Off	Never.	

Capture modes




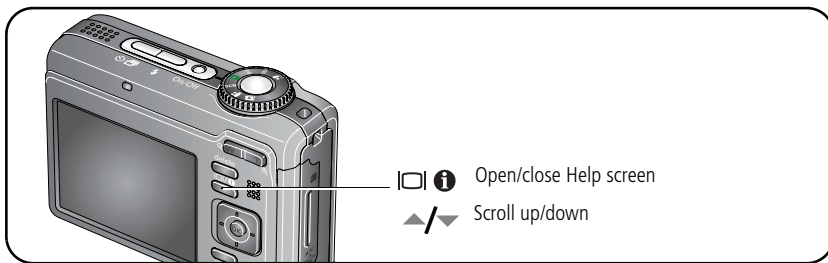
Capture mode	For
 Smart Scene	General picture taking. When the Shutter button is pressed halfway, faces are detected, the scene is analyzed, and the best settings are applied. Pictures are taken in Auto mode if the Scene (SCN) mode cannot be determined.
P/M P, M	More creative control. Program and Manual modes.
 High ISO	People in low-light scenes indoors using a higher ISO.
 Digital Image Stabilization	Minimizing the effects of camera shake and subject movement.
SCN Scene	Point-and-shoot simplicity when taking pictures under special conditions. (See page 15.)
 Video	Capturing video with sound. (See page 4.)
 Favorites	Viewing favorite pictures.

Scene modes

- 1 Turn the Mode dial to Scene **SCN**.
- 2 Press ◀/▶ ▲/▼ to display Scene mode descriptions.
NOTE: If the mode description turns off before you finish reading it, press OK.
- 3 Press OK to choose a Scene mode.


Using camera Help

To better understand each menu option, use camera Help. Highlight a menu choice, then press the  button.



Understanding the picture-taking icons


In Smart Scene mode  —no buttons pressed

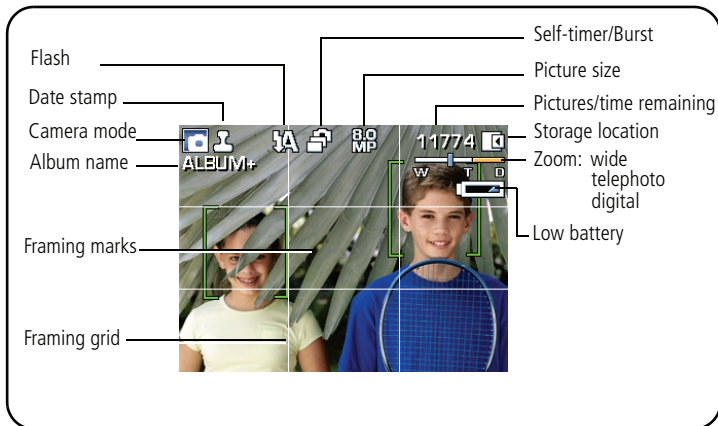

2


Working with pictures/videos



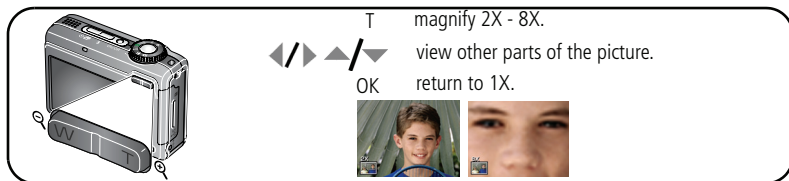


Magnifying a picture during review

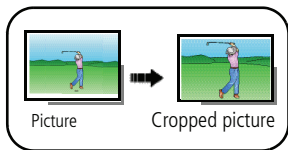

NOTE: If you press the W button while at 1X, the view changes from single-picture to multi-up thumbnails.

Cropping pictures



- 1 Press the Review button, then  to find a picture.
- 2 Press the Menu button, then   to highlight Crop. Press the OK button.
- 3 Press Telephoto (T) to zoom in, or   to move the crop box. Press OK.

- 4 Follow the screen prompts.

The picture is cropped. The original is saved. (Cropped pictures cannot be cropped again.)

- Press the Menu button to exit the menu.




Viewing thumbnails (multi-up)




- 1 Press the Review button.
- 2 Press the Zoom Wide Angle (W) button to change from single-picture view to multi-up thumbnails.
- 3 Press Telephoto (T) to return to single-picture view.
 - Press the Review button to exit Review.

Using Kodak Perfect Touch technology

Kodak Perfect Touch technology helps ensure better, brighter pictures.

- 1 Press the Review button, then  to find a picture.
- 2 Press the Menu button, then   to highlight Perfect Touch tech. Press the OK button.

The enhancement is previewed in a split screen. Press  to view other parts of the picture.
- 3 Press OK. Follow the screen prompts to replace the original picture or to save the enhanced picture as a new one.


NOTE: You cannot enhance previously enhanced or panorama pictures, or videos.

- Press the Menu button to exit the menu.

Editing videos

Making a picture from a video

You can choose a single frame from a video, then make a picture suitable for printing.

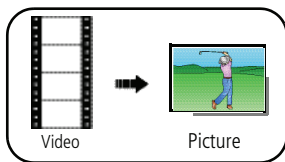


- 1 Press the Review button, then **◀/▶** to find a video.
- 2 Press the Menu button, then **◀/▶ ▲/▼** to highlight Make Picture. Press the OK button.
- 3 Press **◀/▶** to navigate through video frames.
- 4 Press OK to select a video frame, then press **▼**.
- 5 Follow the screen prompts.

A picture is created. (The original video is saved.)

Trimming a video

You can delete an unwanted portion from the beginning or end of a video.

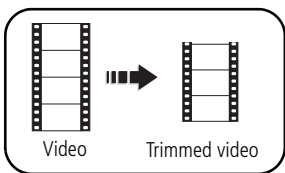


- 1 Press the Review button, then **◀/▶** to find a video.
- 2 Press the Menu button, then **◀/▶ ▲/▼** to highlight Edit Video. Press the OK button.
- 3 Choose Trim, then press OK.
- 4 Follow the screen prompts.

The video is trimmed. (You can save it as a new video or replace the original.)

Using sound tags

You can add a unique sound/message (up to 1 minute long) to your picture. Only one tag can be applied to each picture. You cannot add a sound tag to a video.

Recording a sound tag

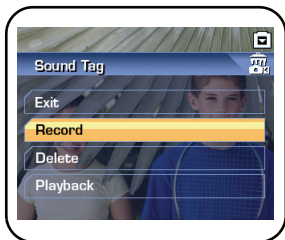


- 1 Press the Review button, then **◀/▶** to find a picture.
- 2 Press the Menu button, then **◀/▶ ▲/▼** to highlight Sound Tag. Press the OK button.
- 3 Choose Record, then press OK.
- 4 Follow the screen prompts.

The sound tag is applied to your picture.


- Press the Menu button to exit the menu.

Playing a sound tag

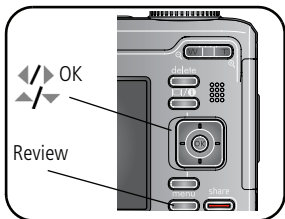

- 1 Press the Review button, then **◀/▶** to find a tagged picture.
- 2 Press **▼** to play the sound tag.
- 3 Press **▲/▼** to adjust the volume.
- 4 Press OK to pause or replay the sound tag during playback.

Deleting pictures/videos

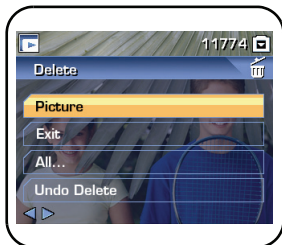

- 1 Press the Review button.
- 2 Press ◀/▶ to find a picture/video.
- 3 Press the Delete button.
- 4 Follow the screen prompts.

NOTE: After you delete a picture/video, the next picture/video (overlaid with the Delete menu with the Undo Delete option) appears. If there are no more pictures/videos, the Delete menu on a blank screen appears. See [Using the undo delete feature](#) for more information.

Using the undo delete feature

If you accidentally delete a picture or video, use Undo Delete to retrieve it. This feature is available only immediately after you delete a picture/video in Review mode. The Undo Delete option appears.

- 1 Press ▲/▼ to highlight Undo Delete.
- 2 Press OK.

The deleted picture/video (overlaid with the Delete menu) appears.
- Select Exit to exit the Delete menu.

3

Solving camera problems

For step-by-step product support, visit www.kodak.com/go/z885support and select Interactive Troubleshooting & Repairs.

Camera problems

If...	Try one or more of the following
Camera does not turn on/off.	<ul style="list-style-type: none">■ Install new batteries (page 2).■ Charge rechargeable batteries.■ Remove the battery, then reinsert or replace it.
Stored pictures are corrupted.	<ul style="list-style-type: none">■ Retake pictures. Do not remove card while the Ready light is blinking. Keep rechargeable batteries charged.■ Transfer the pictures to the computer (page 6), format the SD/MMC card in the camera. (Press the Menu button, choose Setup and find Format). Formatting deletes all pictures/videos, including protected files. Removing the card during formatting may damage the card.
Short battery life with Kodak Ni-MH rechargeable digital camera batteries.	<ul style="list-style-type: none">■ Wipe the contacts with a clean, dry cloth before loading batteries in the camera.■ Limit the following activities that quickly deplete battery power: reviewing pictures/videos on the LCD; and excessive use of the flash.■ Use the Refresh feature on your camera dock series 3 or printer dock series 3.

4

Appendix

Important safety instructions



CAUTION:

Do not disassemble this product; there are no user-serviceable parts inside. Refer servicing to qualified service personnel. Do not expose this product to liquid, moisture, or extreme temperatures. Kodak AC adapters and battery chargers are intended for indoor use only. The use of controls, adjustments, or procedures other than those specified herein may result in exposure to shock and/or electrical or mechanical hazards. If the LCD breaks, do not touch the glass or liquid. Contact Kodak customer support.

- The use of an accessory that is not recommended by Kodak may cause fire, electric shock, or injury.
- Use only a USB-certified computer. Contact your computer manufacturer if you have questions.
- If using this product in an airplane, observe all instructions of the airline.
- When removing the battery, allow it to cool; it may be hot.
- Read and follow all warnings and instructions supplied by the battery manufacturer.
- Use only batteries approved for this product to avoid risk of explosion.
- Keep batteries out of the reach of children.
- Do not allow batteries to touch metal objects, including coins. Otherwise, a battery may short circuit, discharge energy, become hot, or leak.
- Do not disassemble, install backward, or expose batteries to liquid, moisture, fire, or extreme temperature.
- Remove the battery when the product is stored for an extended period of time. In the unlikely event that battery fluid leaks inside the product, contact Kodak customer support.
- In the unlikely event that battery fluid leaks onto your skin, wash immediately with water and contact your local health provider. For additional health-related information, contact your local Kodak customer support.
- Dispose of batteries according to local and national regulations.
- Do not charge non-rechargeable batteries.

For more information on batteries, see www.kodak.com/go/batterytupes

Upgrading your software and firmware

Download the latest versions of the software included on the Kodak EasyShare software CD and the camera firmware (the software that runs on the camera). See www.kodak.com/go/z885downloads.

Additional care and maintenance

- If the camera has been subjected to inclement weather or you suspect water has gotten inside the camera, turn off the camera and remove the batteries and card. Allow components to air-dry for at least 24 hours before using the camera again.
- Blow gently on the lens or LCD to remove dust and dirt. Wipe gently with a soft, lint-free cloth or an untreated lens-cleaning tissue. Do not use cleaning solutions unless designed specifically for camera lenses. Do not allow chemicals, such as suntan lotion, to contact painted surfaces.
- Service agreements are available in some countries. Contact a dealer of Kodak products for more information.

For digital camera disposal or recycling information, contact your local authorities. In the US, visit the Electronics Industry Alliance Web site at www.eiae.org or visit www.kodak.com/go/z885support.

Warranty

Kodak warrants Kodak consumer electronic products and accessories (“Products”), excluding batteries, to be free from malfunctions and defects in both materials and workmanship for one year from the date of purchase. Retain the original dated sales receipt. Proof of the date of purchase will be required with any request for warranty repair.

Limited warranty coverage

Warranty service is only available from within the country where the Products were originally purchased. You may be required to ship Products, at your expense, to the authorized service facility for the country where the Products were purchased. Kodak will repair or replace Products if they fail to function properly during the warranty period, subject to any conditions and/or limitations stated herein. Warranty service will include all labor as well as any necessary adjustments and/or replacement parts. If Kodak is unable to repair or replace a Product, Kodak will, at its option, refund the purchase price paid for the Product provided the Product has been returned to Kodak along with proof of the purchase price paid. Repair, replacement, or refund of the purchase price are the sole remedies under the warranty. If replacement parts are used in making repairs, those parts may be remanufactured, or may contain remanufactured materials. If it is necessary to replace the entire Product, it may be replaced with a remanufactured Product. Remanufactured Products, parts and materials are warranted for the remaining warranty term of the original Product, or 90 days after the date of repair or replacement, whichever is longer.

Limitations

This warranty does not cover circumstances beyond Kodak's control. This warranty does not apply when failure is due to shipping damage, accident, alteration, modification, unauthorized service, misuse, abuse, use with incompatible accessories or attachments (such as third party ink or ink tanks), failure to follow Kodak's operation, maintenance or repacking instructions, failure to use items supplied by Kodak (such as adapters and cables), or claims made after the duration of this warranty. Kodak makes no other express or implied warranty for this product, and disclaims the implied warranties of merchantability and fitness for a particular purpose. In the event that the exclusion of any implied warranty is ineffective under the law, the duration of the implied warranty will be one year from the purchase date or such longer period as required by law. The option of repair, replacement, or refund is Kodak's only obligation. Kodak will not be responsible for any special, consequential or incidental damages resulting from the sale, purchase, or use of this product regardless of the cause. Liability for any special, consequential or incidental damages (including but not limited to loss of revenue or profit, downtime costs, loss of the use of the equipment, cost of substitute equipment, facilities or services, or claims of your customers for such damages resulting from the purchase, use, or failure of the Product), regardless of cause or for breach of any written or implied warranty is expressly disclaimed.

Your rights

Some states or jurisdictions do not allow exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. Some states or jurisdictions do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. This warranty gives you specific rights, and you may have other rights which vary from state to state or by jurisdiction.

Outside the United States and Canada

In countries other than the United States and Canada, the terms and conditions of this warranty may be different. Unless a specific Kodak warranty is communicated to the purchaser in writing by a Kodak company, no warranty or liability exists beyond any minimum requirements imposed by law, even though defect, damage, or loss may be by negligence or other act.

FCC compliance and advisory



Kodak EasyShare z885 zoom digital camera

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed or used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

Appendix

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: 1) reorient or relocate the receiving antenna; 2) increase the separation between the equipment and the receiver; 3) connect the equipment to an outlet on a circuit different from that to which the receiver is connected; 4) consult the dealer or an experienced radio/TV technician for additional suggestions.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Where shielded interface cables have been provided with the product or specified additional components or accessories elsewhere defined to be used with the installation of the product, they must be used in order to ensure compliance with FCC regulation.

Australian C-tick



N137

Canadian DOC statement

DOC Class B Compliance

This Class B digital apparatus complies with Canadian ICES-003.

Observation des normes-Classe B

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Waste Electrical and Electronic Equipment labeling



In the European Union, do not discard this product as unsorted municipal waste. Contact your local authorities or go to www.kodak.com/go/recycle for recycling program information.

VCCI Class B ITE

この装置は、情報処理装置等電波障害自主規制協議会（VCCI）の基準に基づいてクラスB情報技術装置です。この装置は、家庭環境で使用することを目的としていますが、この装置がラジオやテレビジョン受信機に近接して使用されると、受信障害を引き起こすことがあります。
取扱説明書に従って正しい取り扱いをして下さい。

Korean Class B ITE

이 기기는 가정용으로 전자파적합등록을 한 기기로서 주거지역에서는 물론 모든 지역에서 사용할 수 있습니다.

Chinese RoHS

环保使用期限 (EPUP)

在中国大陆, 该值表示产品中存在的任何危险物质不得释放, 以免危及人身健康、财产或环境的时间期限 (以年计)。该值根据操作说明中所规定的产品正常使用而定。

有毒有害物质或元素名称及含量标识表						
部件名称	有毒有害物质或元素					
	铅	汞	镉	六价铬	多溴联苯	多溴二苯醚
数码相机电路板元件	×	○	○	○	○	○
○: 表示该有毒有害物质在该部件所有均质材料中的含量均在SJ/T 11363-2006规定的限量要求以下。 ×: 表示该有毒有害物质至少在该部件的某一均质材料中的含量超出SJ/T 11363-2006规定的限量要求。						



USB 数据线



音频/视频电缆

Kodak

Eastman Kodak Company

Rochester, NY 14650

Eastman Kodak Company, 2007

Kodak, EasyShare, and Perfect Touch are trademarks of Eastman Kodak Company.

4J6180_en