


See the extended user guide – for more information about using your frame, visit www.kodak.com/go/digitalframesupport. See the frame package for package contents.


Front View

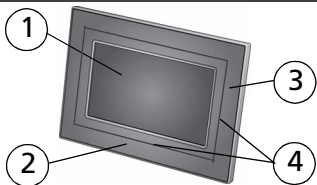

- 1 LCD screen
- 2 Touch border (tap/slide)
- 3 Touch border (tap only)
- 4 Touch-sensitive raised guide

To use the touch border, see page 6.

Back/Side View

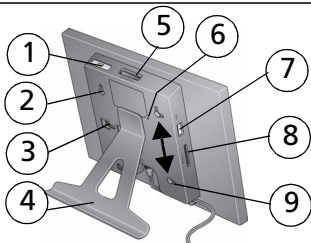

- 1 On/Off button
- 2 Stand attachment slot
- 3 Frame stand (see [page 2](#))
- 4 Memory card slot - SD, MS, xD, MMC
- 5 Reset button
- 6 USB connector (to camera/USB device)
- 7 Memory card slot - SD/SDHC
- 8 Wall mounting holes (see [page 8](#))


1

Getting started

Setting up your picture frame

Attaching the frame stand

Your frame displays pictures in landscape . To change to portrait , see [page 7](#).

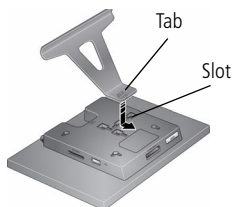

Make sure the tab is secure in the slot.

Attaching the power cable




CAUTION:

Do not use this power cable with other devices, including digital cameras.



Your power cable may look different from the one pictured. Use the plug that accommodates your type of power outlet.

Turning on your frame

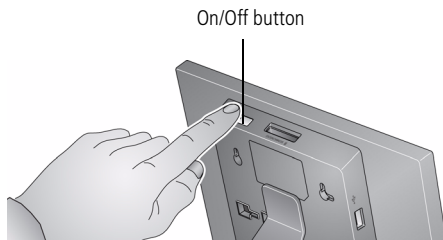



Setting your language

The language screen appears the first time you turn on your frame.

Using the touch borders (see [page 6](#)):

- Slide to find your language, then tap OK.

To change the language at a later time:

- Tap  (Home) →  (Settings), then slide to highlight Language.

The language screen appears.

Slide to highlight your language, then tap OK.



Enjoying your pictures immediately!



- **To view your pictures or play a slide show,** insert a memory card, or connect a camera or other USB device (see [page 5](#)).

If you are at the Home screen, see [page 10](#) to start your slide show.


To change the slide show order, see [page 12](#).

Inserting a memory card

To insert a card, push the card firmly into the slot until it stops.


To remove a card from:
top card slot - push in the card to release it.
side card slot - pull out the card

CAUTION: Do not insert a micro or mini memory card without an adapter.

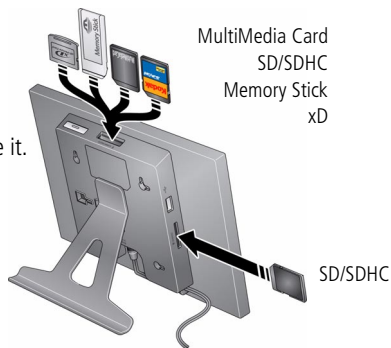

Connecting a digital camera or other USB device

USB devices: camera, flash drive, card reader, etc. (sold separately)

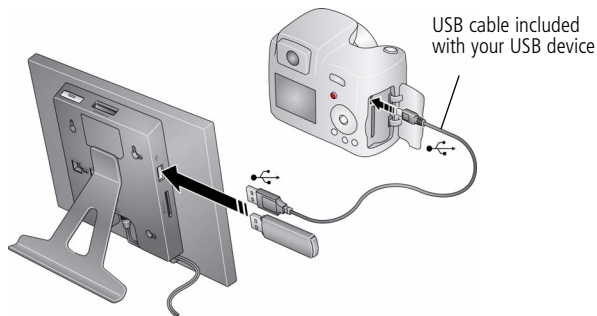

Using your frame's touch border

Touch along the raised guide at the bottom (tap/slide) or right (tap only) border to find/highlight menu items or pictures. Press OK to select them.

NOTE: The screen is not touch-sensitive. Do not touch.




CAUTION:


Only use your finger to touch the borders. Using sharp or metal objects may damage the border or screen.

On the raised guide:

- **Tap** at bottom or right to find/highlight menu items or pictures
- **Slide** along bottom to find/highlight selections quickly. Sliding right to left during a slide show quickly scrolls forward through your pictures. Slide left to right to reverse
- **Touch, hold until the screen changes, then slide** along bottom to move quickly through numerous images

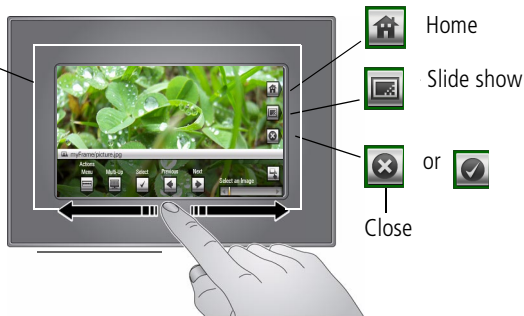


Tap Menu or More for more options.

Tap  to resume a slide show.



If the icons disappear, tap the touch border.

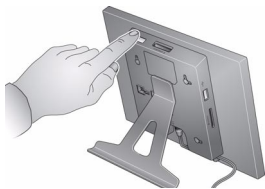
Turning off your frame



- **Standby mode**—Press the power button on the frame.
- **Power off**—Unplug the power cable.

Changing your frame orientation



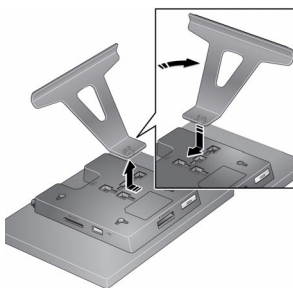

Your frame is set up to display pictures in landscape  orientation. You can turn the stand to change it to portrait  but you must also change the setting.



Change the stand position:


- 1 Remove the stand, turn it 90°, and replace as shown (see [page 2](#)).


Change the setting:

- 1 Tap  (Home) →  (Settings).
- 2 Slide to highlight  (Viewing options), then tap OK.
Slide to highlight Frame orientation, then tap OK.
Slide to highlight Portrait, then tap OK.
- 3 Tap  to exit.

Mounting your frame on the wall

Use wall-anchoring hardware (not included) to anchor your frame securely to your wall.

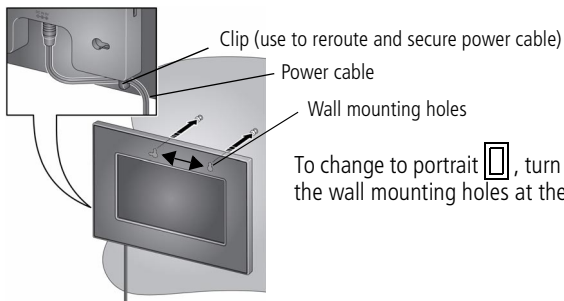

To change to portrait , turn your frame 90° and use the wall mounting holes at the top.

2

Doing more with your frame

Accessing your pictures


Tap Home to access pictures from your memory card and all connected devices (see [page 5](#)). Use the touch borders to make your selections (see [page 6](#)).



- 1 Tap  (Home).

All connected sources and the Settings icon are displayed.

- 2 Slide to highlight a picture source, then:

- Tap  (Slide show) to start a slide show.
- OR
- Tap OK to view thumbnails.

Picture source icons:



Memory card—appears when you insert a card ([page 5](#)). The label and icon indicate the type of card.



Camera—appears when you connect a digital camera via USB cable ([page 5](#)).



USB drive—appears when you insert a USB flash drive ([page 5](#)).




Settings—customize your frame settings. For example; set slide show durations and transitions, set viewing options, screen brightness, clock, and timer. See the extended user guide at www.kodak.com/go/digitalframesupport.

Viewing your pictures

Playing a slide show

There are three ways to start a slide show on your frame:

- Insert a memory card or USB device, then turn on the frame.
- Turn on the frame, then insert a card or connect a USB device—a new slide show starts automatically, replacing a currently running slide show or single view picture.
- Highlight a picture in thumbnails view or highlight a picture source on the Home screen, then tap  (Slide show).


NOTE: A slide show plays continuously until you stop it or turn off the frame.

NOTE: If a slide show is running and the screen icons are unavailable, tap the touch border. Tap  (Close) to hide the icons.


Viewing thumbnails

There are two ways to view your pictures as thumbnails:



- Tap  (Home). Slide to highlight a picture source (see [page 9](#)), then tap OK.







OR

- From a slide show or single view, tap  (Multi-up).

NOTE: If the screen icons are unavailable, tap the touch border.

To navigate through the thumbnails, slide your finger left/right along the bottom touch border. Touch and hold until the screen changes (about 3 seconds) to move even faster through the thumbnails.


Viewing a single picture

- **To view a single**, full-screen picture, highlight it in thumbnails view, then tap OK.
- **To magnify** a picture up to 8X, tap  (Menu), then tap  (Zoom) repeatedly. To view other parts of the picture, tap . To return to 1X size, tap  (Zoom) repeatedly.
- **To rotate** a picture, tap  (Menu), then tap  (Rotate).

Viewing pictures by date or filename

By default, the pictures on your frame are arranged and played by date, starting with the oldest. You can change the arrangement or order, by date, or alphabetically by filename.

To change the sort order:

- 1 Highlight a picture source (for example, a folder with pictures), or multiple pictures (see [page 15](#)).
- 2 Tap  (Viewing Options).
- 3 Highlight Sort, then tap OK.
- 4 Select a sort order:
 - Date, oldest to newest (default)
 - Date, newest to oldest
 - Filename, A - Z
 - Filename, Z - A
- 5 Tap OK.


Copying pictures

Copy pictures from your current viewing location to other connected devices (see [page 5](#)).



CAUTION:

Removing a card or disconnecting a device while copying may damage your card, pictures, or device.

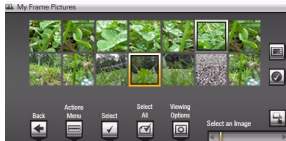


- 1 Highlight a picture to copy:


In thumbnails view, slide your finger along the slider area to find a picture; or, display a picture in single view.

- 2 Tap  (Menu).

- 3 Tap  (Copy).

- 4 Tap the destination you want to copy to, then tap OK.
The picture is copied.

- 5 Tap  (Close) to close the menu.

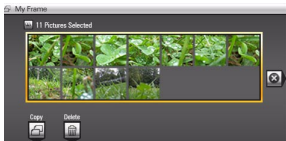


To copy multiple pictures, [see page 15](#).




Deleting pictures



CAUTION:

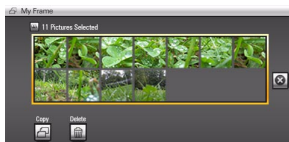Removing a card or disconnecting a device while deleting may damage your card, pictures, or device.





- 1 Highlight a picture to delete:
In thumbnails view, slide your finger along the slider area to find a picture; or, display a picture in single view.
- 2 Tap  (Menu).
- 3 Tap  (Delete).
- 4 Tap Yes to confirm.
The picture is deleted.
- 5 Tap  (Close) to close the menu.


To delete multiple pictures, [see page 15](#).

Selecting multiple pictures

Use the multi-select feature to copy or delete two or more pictures; or to play a slide show of selected pictures.

- 1 In thumbnails view, touch and slide to find a picture, then tap  to select it.
A check mark appears on the selected picture.
- 2 Continue selecting pictures.
To remove a check mark, tap  again.

Selecting/Unselecting all

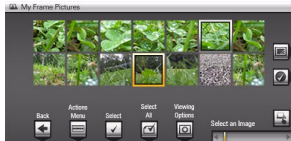

Select all

- Tap Select All from thumbnails view (or your current location).

Unselect all

- To remove all check marks, choose Unselect All.

Copying from your computer

Use the Kodak EasyShare digital display software to drag and drop pictures easily from your computer to a memory card (or other removable USB device). Insert the card into your frame and play a slide show right away (see [page 5](#)).

Installing the Kodak EasyShare digital display software




CD packaged with your frame.

- 1 Insert the CD into your computer and follow the on-screen instructions to install the software.

NOTE: Clicking Complete installs both the Kodak EasyShare software and the Kodak digital display software. Both applications work together to ensure the best experience when working with your pictures, frame and connected devices.

Both software icons appear on your desktop.

- 2 Double-click  (Kodak EasyShare digital display icon) to start using the software.

Using the Kodak EasyShare digital display software

- 1 Insert a memory card into your computer or card reader. Or insert a removable USB device into the computer's USB port.
- 2 Click Device Zone to see the card or USB device in the Shortcut pane.
- 3 In My Sources, click the folder or location on your computer that contains the pictures you want to copy.

- 4 In the Viewer pane, select the pictures, then drag and drop them to the card or USB device in the Shortcut pane.
- 5 Remove the card from your computer and insert it into your frame card slot or a connected card reader.


A slide show begins.

NOTE: To maintain the slide show order during playback, see [page 12](#) and select Filename, A - Z.

For more information on the features included in the EasyShare digital display software, click the Help button.

Customizing your frame

For a custom look, remove the adhesive matte (included) from its liner, align it carefully, then attach it to your frame.

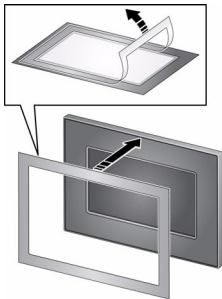


You can reapply the matte to your frame several times. When you are not using the matte, reapply it to the liner and store in a plastic bag to keep the adhesive backing clean.

Maintaining your frame and mattes

IMPORTANT: *Always disconnect the power before cleaning. Do not use water, cleaning solutions, or other adhesives on the frame or any of its parts.*

Gently wipe the frame, LCD, or matte with a clean, dry cloth (included). For fingerprints on the frame, apply light pressure.

Resetting factory defaults

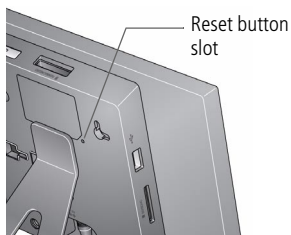

- 1 Make sure the power cable is connected and the frame is turned on.
- 2 Insert a small sharp object into the reset button slot and press the recessed reset button.
When the reset is successful, the set language screen appears.
All settings return to the original factory defaults.
- 3 Reset your language. See [page 3](#).

Learning more about your frame

www.kodak.com/go/digitalframes

Frame accessories, including decorative faceplates and custom mattes

www.kodak.com/go/digitalframesupport

Extended user guide

Interactive troubleshooting and repairs

Interactive tutorials

FAQs

Downloads

Product registration

3 Solving frame problems

For step-by-step product support, visit www.kodak.com/go/digitalframesupport and select Interactive Troubleshooting & Repairs.

If...	Try one or more of the following
Frame does not turn on.	<ul style="list-style-type: none">■ Make sure the power cable that was included with your frame is connected securely (see page 2).■ Unplug the power cable from the frame. Wait 5 seconds, then reconnect the cable.■ Press and hold the power button for 1 second.
Nothing happens when a memory card, camera, or USB device is connected.	<ul style="list-style-type: none">■ Insert a certified SD/MMC/MS/xD card with images into the designated card slot, then push to seat it (see page 5). In the top card slot, make sure the card is seated flush with the case.■ Make sure the USB cable that was included with your camera or USB device is connected securely (see page 5).■ Make sure the file format of your pictures is supported. See the extended user guide at www.kodak.com/go/digitalframesupport. NOTE: A large picture file may take time to appear.
Touch border doesn't work.	<ul style="list-style-type: none">■ Use your finger to make your selections on the touch-sensitive borders (see page 6).■ Unplug the power cable from the frame. Wait 5 seconds, then reconnect the cable. Press and hold the power button for 1 second.
Frame freezes up.	<ul style="list-style-type: none">■ Unplug the power cable then plug it back in.■ Use a paper clip or other slim object to press the recessed reset button on the back of the frame (see page 18).

Important safety instructions



CAUTION:

Do not disassemble this product; there are no user-serviceable parts inside. Refer servicing to qualified service personnel. Do not expose this product to liquid, moisture, or extreme temperatures. The use of controls, adjustments, or procedures other than those specified herein may result in exposure to shock and/or electrical or mechanical hazards. If the LCD breaks, do not touch the glass or liquid. Contact Kodak customer support.

- The use of an accessory that is not recommended by Kodak may cause fire, electric shock, or injury. For approved accessories, visit www.kodak/go/accessories.
- Digital frame battery (internal and non-removable) may include perchlorate material. Special handling may apply in California.
- Use only the AC adapter supplied with your frame to avoid damage to the frame.
- Do not place frame near naked flame sources such as lighted candles or heaters.

Upgrading your software and firmware

Download the latest versions of the software and the frame firmware (the software that runs on the frame). See www.kodak.com/go/digitalframedownloads.

Additional care and maintenance

- Wipe the frame and the LCD gently with a soft, lint-free cloth or an untreated lens-cleaning tissue. Do not use cleaning solutions unless designed specifically for LCD screens. Do not allow chemicals, such as suntan lotion, to contact painted surfaces.
- Service agreements are available in some countries. Contact a dealer of Kodak products for more information.

- For digital frame disposal or recycling information, contact your local authorities. In the US, visit the Electronics Industry Alliance Web site at www.eiae.org or visit www.kodak.com/go/digitalframesupport.

Limited warranty

Kodak warrants Kodak consumer electronic products and accessories (“Products”), excluding batteries, to be free from malfunctions and defects in both materials and workmanship for one year from the date of purchase. Retain the original dated sales receipt. Proof of the date of purchase will be required with any request for warranty repair.

Limited warranty coverage

Warranty service is only available from within the country where the Products were originally purchased. You may be required to ship Products, at your expense, to the authorized service facility for the country where the Products were purchased. Kodak will repair or replace Products if they fail to function properly during the warranty period, subject to any conditions and/or limitations stated herein. Warranty service will include all labor as well as any necessary adjustments and/or replacement parts. If Kodak is unable to repair or replace a Product, Kodak will, at its option, refund the purchase price paid for the Product provided the Product has been returned to Kodak along with proof of the purchase price paid. Repair, replacement, or refund of the purchase price are the sole remedies under the warranty. If replacement parts are used in making repairs, those parts may be remanufactured, or may contain remanufactured materials. If it is necessary to replace the entire Product, it may be replaced with a remanufactured Product. Remanufactured Products, parts and materials are warranted for the remaining warranty term of the original Product, or 90 days after the date of repair or replacement, whichever is longer.

Limitations

This warranty does not cover circumstances beyond Kodak’s control. This warranty does not apply when failure is due to shipping damage, accident, alteration, modification, unauthorized service, misuse, abuse, use with incompatible accessories or attachments (such as third party ink or ink tanks), failure to follow Kodak’s operation, maintenance or repacking instructions, failure to use items supplied by Kodak (such as adapters and cables), or claims made after the duration of this warranty. Kodak makes no other express or implied warranty for this product, and disclaims the implied warranties of merchantability and fitness for a particular purpose. In the event that the exclusion of any implied warranty is ineffective under the law, the duration of the implied warranty will be one year from the purchase date or such longer period as required by law. The option of repair, replacement, or refund is Kodak’s only obligation. Kodak will not be responsible for any special, consequential or incidental damages resulting from the sale, purchase, or use of this product regardless of the cause. Liability

for any special, consequential or incidental damages (including but not limited to loss of revenue or profit, downtime costs, loss of the use of the equipment, cost of substitute equipment, facilities or services, or claims of your customers for such damages resulting from the purchase use or failure of the Product), regardless of cause or for breach of any written or implied warranty is expressly disclaimed.

Your rights

Some states or jurisdictions do not allow exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. Some states or jurisdictions do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. This warranty gives you specific rights, and you may have other rights which vary from state to state or by jurisdiction.

Outside the United States and Canada

In countries other than the United States and Canada, the terms and conditions of this warranty may be different. Unless a specific Kodak warranty is communicated to the purchaser in writing by a Kodak company, no warranty or liability exists beyond any minimum requirements imposed by law, even though defect, damage, or loss may be by negligence or other act.

FCC compliance and advisory



Kodak EasyShare P720 digital frame

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed or used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: 1) reorient or relocate the receiving antenna; 2) increase the separation between the equipment and the receiver; 3) connect the equipment to an outlet on a circuit different from that to which the receiver is connected; 4) consult the dealer or an experienced radio/TV technician for additional suggestions.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Where shielded interface cables have been provided with the

Appendix

product or specified additional components or accessories elsewhere defined to be used with the installation of the product, they must be used in order to ensure compliance with FCC regulation.

FCC and Industry Canada

This device complies with Industry Canada RSS-210 and FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC et Industrie Canada

Cet appareil est conforme à la norme RSS-210 d'Industrie Canada et aux réglementations de la FCC. Son utilisation est soumise aux deux conditions suivantes : (1) cet appareil ne doit pas provoquer d'interférences nuisibles, et (2) cet appareil doit supporter les interférences reçues, y compris celles susceptibles de nuire à son bon fonctionnement.

CE

Hereby, Eastman Kodak Company declares that this Kodak product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

Canadian DOC statement

DOC Class B Compliance—This Class B digital apparatus complies with Canadian ICES-003.

Observation des normes-Classe B—Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Waste Electrical and Electronic Equipment labeling



EU: It is the final user's responsibility to discard this equipment into an approved, segregated collection scheme to enable its suitable treatment/disposal and to improve human/environmental protection. For more information, see your retailer, local authority, or www.kodak.com/go/recycle.

Australian C-Tick



N137

China RoHS

环保使用期限 (EPUP)

在中国大陆，该值表示产品中存在的任何危险物质不得释放，以免危及人身健康、财产或环境的时间期限（以年计）。该值根据操作说明中所规定的产品正常使用而定。

Environmental Protection Use Period (EPUP)

In China, this number indicates the time period (in years) within which any hazardous substances present in the product are not expected to be released such that there is risk to human health, property, or the environment. This value is assigned based on normal use of the product as described in the operating instructions.

Product Disclosure Table

有毒有害物质或元素名称及含量标识表
table of hazardous substances' name and concentration

部件名称 Component name	有毒有害物质或元素 hazardous substances' name					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr6+)	多溴联苯 (PBB)	多溴二苯 醚 (PBDE)
数码相架电路板元件 (Digital Photo Frame circuit board components)	X	O	O	O	O	O
控制器 (Controller)	X	O	O	O	O	O
交流变压器电路板元件 (AC Adapter circuit board components)	X	O	O	O	O	O

O: 表示该有毒有害物质在该部件所有均质材料中的含量均在SJ/T 11363-2006规定的限量要求以下。
 X: 表示该有毒有害物质至少在该部件的某一均质材料中的含量超出SJ/T 11363-2006规定的限量要求。
 O: indicates hazardous substance concentration lower than MCV
 X: indicates hazardous substance concentration higher than MCV



USB 数据线

Russian GOST-R



Eastman Kodak Company
Rochester, New York 14650

Цифровая фоторамка изготовлена в Китае; остальные элементы –
в соответствии с маркировкой

Licensing

Supply of this product does not convey a license nor imply any right to distribute content created with this product in revenue-generating broadcast systems (terrestrial, satellite, cable and/or other distribution channels), streaming applications (via Internet, intranets and/or other networks), other content distribution systems (pay-audio or audio-on-demand applications and the like) or on physical media (compact discs, digital versatile discs, semiconductor chips, hard drives, memory cards and the like). An independent license for such use is required. For details, please visit <http://mp3licensing.com>.

Kodak

Eastman Kodak Company

Rochester, New York 14650

© Eastman Kodak Company, 2008

Kodak and EasyShare are trademarks of Eastman Kodak Company.

Eastman Kodak Company is an authorized licensee of the CompactFlash trademark.

4F8173_en