





# Table of Contents

|  |      |
|--|------|
| <b>Process ECN-2 Specifications</b> .....                  | 7-2  |
| INTRODUCTION .....   | 7-2  |
| FILMS AND PROCESS SEQUENCE .....                           | 7-3  |
| Designated Films .....                                     | 7-3  |
| Film Structure .....                                       | 7-3  |
| Process ECN-2 Steps .....                                  | 7-4  |
| Safelights for Darkroom Illumination .....                 | 7-4  |
| Film Storage and Handling .....                            | 7-5  |
| Other Film Characteristics .....                           | 7-5  |
| PROCESSING MACHINE DESIGN AND CONSTRUCTION .....           | 7-7  |
| Machine Design .....                                       | 7-7  |
| Construction Materials .....                               | 7-9  |
| Filters .....  | 7-11 |
| Backing Removal Equipment .....                            | 7-11 |
| Solution Crossover Devices .....                           | 7-11 |
| Dryer Cabinet .....  | 7-11 |
| Machine Exhaust and Room Ventilation Systems .....         | 7-12 |
| Countercurrent Washes .....                                | 7-12 |
| Conversion to "UL" Bleach .....                            | 7-13 |
| OPERATING SPECIFICATIONS .....                             | 7-15 |
| Mechanical Specifications .....                            | 7-15 |
| Selecting a Bleach Formulation .....                       | 7-15 |
| Controlling Tank Concentration with Replenisher Rate ..... | 7-15 |
| Chemical Supplies and Substitutions .....                  | 7-16 |
| Mixing Instructions .....                                  | 7-16 |
| Drying Specifications .....                                | 7-19 |
| Turbulation Specifications .....                           | 7-19 |
| Wash-Water Flow Rates .....                                | 7-20 |
| Stop Wash .....  | 7-20 |
| Bleach Wash .....  | 7-20 |
| Final Wash .....   | 7-20 |
| Rewashing .....  | 7-21 |
| PROCESSING CHEMICALS .....                                 | 7-23 |
| Prepackaged Chemicals .....                                | 7-23 |
| Kit Chemicals .....  | 7-23 |
| Solution Mixing .....                                      | 7-26 |
| FORMULAS AND ANALYTICAL SPECIFICATIONS .....               | 7-27 |
| Bulk Formulas .....  | 7-27 |
| Rewash Formulas .....                                      | 7-33 |
| STORAGE OF SOLUTIONS .....                                 | 7-35 |

# 7 Process ECN-2 Specifications

## INTRODUCTION

The information contained herein is furnished by Eastman Kodak Company without any warranty or guarantee whatsoever. While Kodak is unaware of any valid domestic patents of others which would be infringed by the methods, formulas or apparatus described herein, the furnishing of this information is not to be considered as any license for inducement of, or recommendation for any action by any party any such action being a matter for independent investigation and decision by such party.

## MODULE 7

This module contains specifications describing continuous machine processing of Kodak color camera and laboratory films. The following modules are also used in conjunction with Process ECN-2.

Module 8 *Effects of Mechanical and Chemical Variations in Process ECN-2*

Module 1 *Process Control*

Module 3 *Analytical Procedures (for Chemical Analyses)*

Module 4 *Reagent Preparation Procedures (for Chemical Analyses)*

Other modules application to Process ECN-2 are:

Module 2 *Equipment and Procedures*

Module 5 *Chemical Recovery Procedures*

Module 6 *Environmental Aspects*

# FILMS AND PROCESS SEQUENCE

## Designated Films

### Camera Films

KODAK VISION3 500T Color Negative Film 5219 / 7219

KODAK VISION3 250D Color Negative Film 5207 / 7207

KODAK VISION3 200T Color Negative Film 5213 / 7213

KODAK VISION3 50D Color Negative Film 5203 / 7203

For information on exposure index, lighting, color balance, required filters, image structure, sensitometric curves, film storage, and types of rolls available, see the KODAK Publication relating to the film: H-1-5219, H-1-5207, H-1-5213 and H-1-5203

### Laboratory Films

KODAK VISION3 Color Digital Intermediate Film 2254

KODAK VISION Color Intermediate Film 2242 / 3242

KODAK VISION Color Intermediate Film 5242


For information on Laboratory Aim Density (LAD), safelights, image structure, sensitometric curves, film storage, and types of rolls available for each laboratory film, see the KODAK Publication relating to the film: H-1-5254 and H-1-5242. Also refer to KODAK Publication No. H-61, *LAD—Laboratory Aim Density*.

## Film Structure

Kodak color negative, intermediate, and internegative films are multilayer films with incorporated color couplers.

Figure 7-1 is a diagram of the film structure.

Figure 7-1 Cross Section of Unprocessed KODAK Color Negative and Intermediate Films

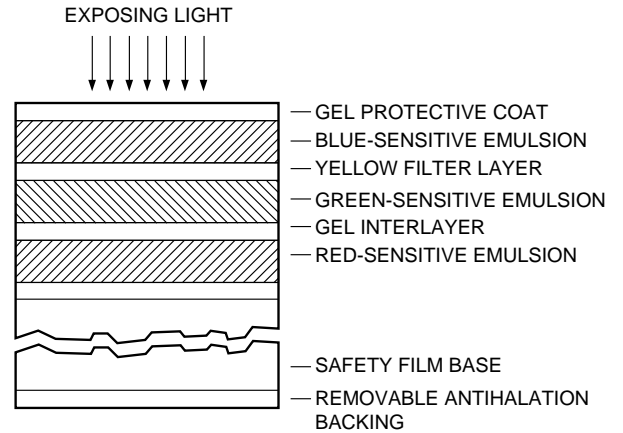

This drawing illustrates only the relative layer arrangement of the film and is not drawn to scale.

F002\_0457AC

The upper blue-sensitive layer contains a colorless coupler, which is converted to yellow dye during development, proportional to blue-light exposure. A yellow filter layer prevents blue light from reaching the two layers beneath, which are somewhat sensitive to blue light. The next layer is green-sensitive and contains a colorless coupler and a yellow-colored coupler, both of which form a magenta dye during development, proportional to green-light exposure. The residual yellow-colored coupler becomes a mask to correct for the unwanted blue absorption of the magenta dye. The bottom emulsion layer is red-sensitive and contains a colorless coupler and a pink-colored coupler, both of which are converted to a cyan dye during development, proportional to red-light exposure. The residual pink-colored coupler forms a mask to correct for the unwanted absorption of blue and green light by the cyan dye. A removable black antihalation layer (rem-jet) is coated on the back side of the film support.

## Process ECN-2 Steps

Process ECN-2 has four bleaching alternatives, Ferricyanide Bleach (SR-29), “UL” Bleach (SR-33), Ammonium “UL House” Bleach (SR-35), and Potassium “UL House” Bleach (SR-34). The “UL” bleaches can be used by laboratories having to comply with local environmental laws governing the amount of ferricyanide in the process effluent.

## Ferricyanide and Various “UL” Bleach Sequences

| Step  | Function   |
|---|--|
| 1. Prebath  | Softens rem-jet for removal.   |
| 2. Rem-Jet Removal and Rinse                      | Removes softened rem-jet backing.  |
| 3. Developer                                      | Reduces exposed silver halide grains in all three light-sensitive layers. The developing agent is oxidized by the exposed silver halide, and the oxidation product couples with the particular dye coupler incorporated within each layer to produce dye images. A silver image is formed simultaneously at the exposed silver-halide sites. |
| 4. Stop   | Stops the development of silver-halide grains and washes Color Developing Agent CD-3 from the film.  |
| NOTE: The film can now be handled in white light. |  |
| 5. Wash   | Removes excess acid stop.  |
| 6. Bleach (SR-29, SR-33, SR-34, or SR-35)         | Converts metallic silver from the silver picture image, formed during color development, to silver-halide compounds that can be removed by the fixer.  |
| 7. Wash   | Removes residual bleach from the film, preventing contamination of the fixer.  |
| 8. Fixer  | Converts silver-halide compounds formed in the bleach to soluble silver thiosulfate complex salts that are removed from the film in this fixer and subsequent wash.  |
| 9. Wash   | Removes residual soluble silver thiosulfate complex salts and unused hypo from the film.   |
| 10. Final Rinse                                   | Prevents water spots and controls biological growths.  |
| 11. Dryer   | Dries film for subsequent handling.  |

## Safelights for Darkroom Illumination

When handling film in a darkroom, safelights are used to provide as much light as possible without fogging the film. Handle the designated films in total darkness until after the stop. The remaining operations can be carried out in a lighted room. A safelight equipped with KODAK 3 Safelight Filter / dark green can be used to illuminate dials, meters, etc., during development, but do not allow the light to shine directly on the film.

## **Film Storage and Handling**

Store processed film at 21°C (70°F) or lower, and 40 to 50 percent relative humidity for normal or commercial use. For long-term storage conditions, see KODAK Publication No. H-23, *The Book of Film Care*.

Exercise care when handling negative films to avoid scratches and/or dirt that will be noticeable on the final print. Have film handlers use lint-free nylon or dacron gloves and handle the film the by edges. Further suggestions on how to keep camera or preprint films clean are in Module 2, *Equipment and Procedures*.

## **Other Film Characteristics**

For information on the physical characteristics of Kodak motion picture films (including edge identification, antihalation backing, perforations, and dimensional change characteristics), as well as cores, spools, winding, and packaging, refer to KODAK Publication No. H-1, *Kodak Professional Motion Picture Film*.





# PROCESSING MACHINE DESIGN AND CONSTRUCTION

## Machine Design


Films intended for Process ECN-2 are processed in roll form in a continuous processing machine. Film is transported through the various solution tanks, emulsion side out, on a series of spools. These spools are mounted in racks that fit into the tanks, and film is threaded over the spools so that it travels in a continuous spiral on each rack. The film should not be allowed to contact any part of the machine that can damage either the support or the emulsion side of the film.

The required treatment time for each processing step is obtained by installing racks in the solutions and washes that will transport a length of film for the required number of minutes at the machine transport speed. To provide adequate agitation of the developer at the emulsion surface, the developer tank is equipped with a turbulator. A turbulator is a submerged series of tubes, having nozzles or drilled holes at various locations along the tubes, opposite the film strand. For more information on turbulator design, see Module 2, *Equipment and Procedures*.

The processor chosen for Process ECN-2 should be a conventional deep-tank machine for 35 mm and/or 16 mm films. Submerged rollers and rack-drive assemblies are recommended for all solutions to minimize the splattering of solutions and aerial oxidation of the developer and fixer. Figure 7-2 is a simple schematic of a typical processing machine for Process ECN-2 using ferricyanide or "UL" bleach. Solution crossover devices should be used at all the locations shown in the schematics to reduce contamination and minimize loss of solution by carry-over into subsequent solutions.

Eastman Kodak Company does not market processing machines or auxiliary equipment suitable for Process ECN-2. However, a list of some manufacturers of processing equipment can be obtained through the Professional Motion Imaging offices.

Figure 7-2 Machine Schematic for Process ECN-2 with Recommended "UL" Bleach or Ferricyanide Bleach Sequence

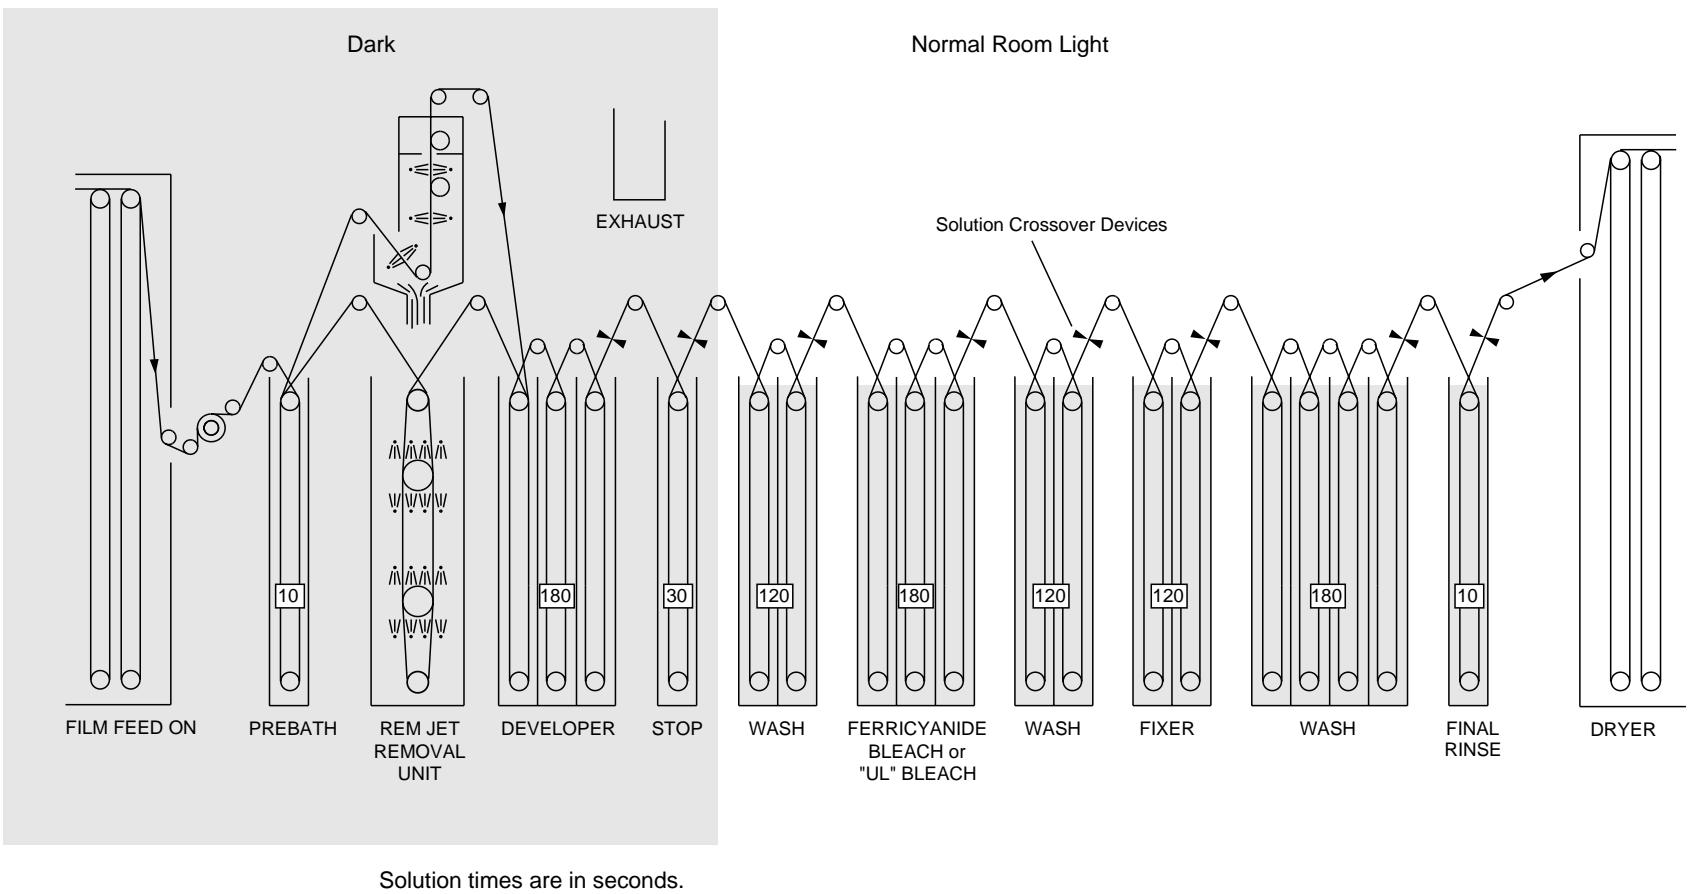

F002\_03/9EC

## Construction Materials

The construction materials recommended for the developer, stop, fixer, and bleach solutions are listed in Table 7-1. All the bleaches are quite corrosive. The "UL" bleach is slightly more corrosive than ferricyanide bleach. Titanium, Hastelloy C, and engineering plastics such as PVC are, therefore, recommended materials for UL or ferricyanide bleach. Use plastics compatible with low pH solutions (less than pH 5).

*Red brass* is commonly found in ferricyanide bleach systems, it will quickly be dissolved by "UL" bleach. In addition to machine tanks, it is often found in fittings, flowmeters, heat exchangers, and valves. Small red-brass parts have been found even when the bleach tank is constructed of titanium, Hastelloy C, or PVC.

It is a good practice to avoid extended exposure of staples to any bleach solution.

Additional information on materials construction and information on their use are given in KODAK Publication No. K-12, *Construction Materials for Photographic Processing Equipment*, and *The SPSE Handbook of Photographic Science and Engineering*, Materials of Construction for Photographic Processing Equipment section. You may also contact the Kodak Information Center at 1-800-242-2424.

**Table 7-1 Construction Materials for Process ECN-2**

| Solution                                | Plastics (Polyvinyl Chloride or Polyolefins) | Titanium | Hastelloy C | Austenitic Stainless Steel AISI Type 316 <sup>a</sup> |
|---|--|----------|-------------|---|
| <b>Bleach ("UL" or Ferricyanide):</b>   |  |          |             |   |
| Tanks and Racks                         | • b  | •        | •           |   |
| Mixing Tanks                            | • b  | •        | •           |   |
| Replenisher Holding Tanks               | • b  | •        | •           |   |
| Piping, Pumps, Valves, and Filter Cores | • b  | •        | •           |   |
| Overflow Holding Tank                   | • b  | •        | •           |   |
| <b>Stop:</b>                            |  |          |             |   |
| Tanks and Racks                         | • b  | •        | •           |   |
| Mixing Tanks                            | • b  | •        | •           | • c   |
| Replenisher Holding Tanks               | • b  | •        | •           | • c   |
| Piping, Pumps, Valves, and Filter Cores | • b  | •        | •           |   |
| <b>Others:</b>                          |  |          |             |   |
| Tanks and Racks                         | •  | •        | •           | •   |
| Mixing Tanks                            | •  | •        | •           | •   |
| Replenisher Holding Tanks               | •  | •        | •           | •   |
| Piping, Pumps, Valves, and Filter Cores | •  | •        | •           | •   |

- a AISI Type 316 Stainless Steel has been extensively tested and is satisfactory for the uses listed in the table above. Refer to The SPSE Handbook of Photographic Science and Engineering, Materials of Construction for Photographic Processing Equipment Section for information on other Austenitic Stainless Steels.
- b Plastics compatible with low pH solutions should be used (e.g., polyvinyl chloride, polypropylene, and high-density polyethylene). The compatibility of other plastics should be evaluated under actual use.
- c Provided the concentration of sulfuric acid specified for the stop is not exceeded.

## Filters

Filters are used to remove any insoluble material in the form of solids and tars from processing solutions and wash waters. If this material is not removed, it can adhere to the film being processed, machine tank walls, rollers, lines, etc. Filters are required in replenisher lines, recirculation systems, and wash-water lines.

The ideal porosity rating for filters is 10 microns, but the back pressure of a 10-micron filter is sometimes too great to permit adequate flow unless oversize pumps or parallel filters are used. Increasing the filter area will decrease the back pressure, but also increase the cost of filters. Filters with porosity ratings larger than 30 microns will produce low-back pressure, but are of little value in removing insoluble material. Another option is using high-porosity filters in series. The high-porosity filters will slow the clogging of the low-porosity filters.

Establish and follow a definite replacement schedule for filters. Change filters every week or two, or whenever the pressure differential across the filter pot exceeds 10 psig (69 kPa).

Polypropylene, fiber glass, or bleached cotton are acceptable filter media for all Process ECN-2 solutions. *Viscose rayon is not recommended* with the prebath, developer, or bleaches since it can cause adverse photographic effects. Table 7-1 lists acceptable construction materials for filter cores. Test all filters for adverse photographic effects before use. Before a change of filter materials or vendors is made, a photographic effect screening test should be run.

## Backing Removal Equipment

All Process ECN-2 compatible films with rem-jet antihalation backing must have it removed prior to development. As the film enters the machine, a prebath softens the backing for removal. The removal must be done so that none of the backing material sticks to the emulsion surface. The removal unit is designed so the combined action of water jets and buffers remove all of the backing and residual haze. Either a wet sponge or high-speed rotating buffers may be used. The buffers should only contact the film support side. Locate a film solution crossover device after the last water spray before entering the developer.

For details and specifications on removal units for acetate and ESTAR Base films, see Module 2, *Equipment and Procedures*.

## Solution Crossover Devices

Processing solution loss and dilution are minimized by various devices that wipe or remove solution off both sides of the film strand. These devices can consist of plastic blades, air streams, vacuum, buffer flush, or other mechanical means. When located at solution crossovers, these devices direct solution back into the originating tank and minimize the carryover of processing solutions.

Such a device should be located on the exit strand between stages of all countercurrent washes, and on all Process ECN-2 solutions except the prebath. Some processing machines have used wiper-blade squeegees (30 to 40 durometer hardness) in the past; but the use of wiper-blade squeegees has steadily declined due to their inherent potential to cause damage to film. Currently, wiper-blade squeegees are no longer recommended for use on ECN processing machines. Even when carefully maintained, wiper-blade squeegees still have a greater propensity to cause damage to film than other types of carryover limiting devices at solution crossovers. Air knives are recommended for use with the ECN-2 process since they are least likely to cause damage to the film.

## Dryer Cabinet

Carefully control drying of processed film to avoid a soft, sticky emulsion which leads to a physical defect called *ferrotyping*. If the film is over-dried, the emulsion becomes brittle and the film tends to blister. Satisfactory drying leaves the film dry without tackiness one half to two thirds of the way through the drying cabinet. Allow the film to cool to room temperature before windup. After cooling, the film should have a moisture content in equilibrium with air at 50 percent relative humidity.

Either an impingement or convection (nonimpingement) dryer can be used. The impingement dryer dries film in a shorter time and occupies less space than most nonimpingement dryers. Regardless of the type, the drying equipment must produce adequate and uniform drying to prevent deformation of the film support or emulsion. Filter the input air to the dryer to remove dust particles that can stick to the film. A high-efficiency particulate air (HEPA) filter, such as the Micretain Equi Flo\* filter (95 percent efficient at 0.3-micron particle size) is recommended.

---

\* A product of Cambridge Filter Corporation, 7645 Henry Clay Blvd., Liverpool, NY 13088

## Machine Exhaust and Room Ventilation Systems

Install local exhausts at specific locations on the processing machine and at specific work areas to provide for the safety and comfort of the laboratory personnel. Supplement local exhausts with a room ventilation system having a capacity of 10 air changes per hour. Vent the discharge air from these systems outside the building so that discharged air does not contaminate incoming air.

Locate local exhausts over chemical mixing tanks to remove irritating chemical dust and vapor produced when processing solutions are mixed.

Processing machines need local exhausts at the stop tank. A slot-type exhaust, for example, on the far side of the stop tank will carry away any sulfur dioxide or hydrogen sulfide generated by developer carried over into the stop.


Exhaust hoods need not fit tightly over tanks, and slots should be placed to draw air away from the operator. The exhaust system should provide an air flow of 175 ft<sup>3</sup>/min (5 m<sup>3</sup>/min) for every square foot (0.09 m<sup>2</sup>) of solution surface, and provide 50 to 75 ft/min (15 to 23 m/min) control velocity over the surface of the tank.

## Countercurrent Washes

Multitank, countercurrent wash methods provide a great savings in water. In this technique, fresh water enters the last tank, flows to the previous tank, and so on to the first tank, in a direction counter to that of film travel. As the film advances through the wash, it enters cleaner and cleaner water.

A four-stage countercurrent final wash is illustrated in Figure 7-3.

Figure 7-3 Four-Stage Countercurrent Wash

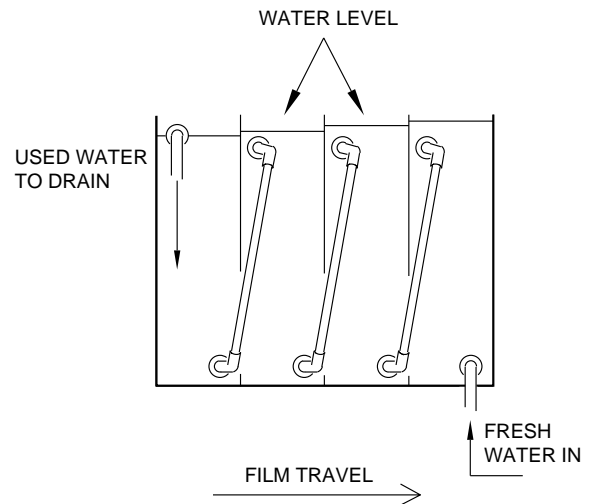

F002\_0455AC

## Conversion to “UL” Bleach

The advantages of converting to the “UL” bleach (SR-33), from ferricyanide bleach (SR-29) are:

- “UL” bleach maintains a cleaner tank
- “UL” bleach forms no Prussian blue
- “UL” bleach is easier to regenerate
- “UL” bleach regenerates into a cleaner replenisher

The advantages of converting to the “UL” bleach, from persulfate bleach are:

- “UL” bleach has more bleaching power
- “UL” bleach has a longer solution life
- “UL” bleach is less sensitive to process variations
- “UL” bleach maintains the same D-min and film look as ferricyanide

Mechanical changes are minor; just adjust controls to keep the bleach at 27°C (80°F). Solution times and replenishment rates do not change.

If using the ferricyanide bleach currently, first remove any red brass from the system, then clean up the bleach system. A high pH wash (10 to 12) will help eliminate any prussian blue in the system. Three cleaning cycles are recommended.





## OPERATING SPECIFICATIONS

### Mechanical Specifications

The recommended mechanical specifications for Process ECN-2 are shown in Table 7-2 for ferricyanide bleach and 7-3 for various “UL” bleaches. Included are temperatures and tolerances, processing solution times, replenisher rates, and other pertinent information.

Use the processing times and drying conditions shown in tables 7-2 and 7-3 as a guide for preliminary machine design. The processing times actually used may differ slightly from the ones shown in the tables because of machine design variables, such as film velocity, degree of solution agitation, and amount of solution carry-over. You must determine those specifications necessary to produce satisfactory quality for your installation. Optimum drying conditions (air volume, temperature, and relative humidity) also vary with each dryer design.

Use the replenishment data listed with the mechanical specifications as a starting point for determining exact requirements to maintain the tank chemical analytical specifications.

Handle the exposed stock designated for Process ECN-2 in total darkness during machine loading and processing until after the stop. The processing steps after the stop can be performed in normal room light.

Three “UL” Bleach formulations are available to fill various laboratory operating and environmental needs. They are:

1. Ammonium “UL” Bleach, SR-33. This is the original formulation for Process ECN-2 and has been in use since about 1990. This formulation contains the highest percentage of ammonium ion which maximizes bleach activity. Because the least amount of active ingredients are necessary, this is the least expensive of the UL Bleach varieties to operate. The use of ammonia in a laboratory may present some handling and odor considerations and is restricted in some sewer districts. The next two formulations have been derived to minimize these considerations.
2. Ammonium “UL House” Bleach, SR-35. This formulation was derived to allow for a common tank and replenisher to be used for both Processes ECN and ECP. This formula contains about half the ammonium ion as the original formula. Its advantages are reduced ammonium ion and less mixing and solution handling between the two processes.
3. Potassium “UL House” Bleach, SR-34, combines the advantages of a non-ammonium formulation with a house system where one replenisher feeds tanks for both Processes ECN and ECP. Through replenisher rate manipulation, the tanks for Processes ECN and ECP are maintained at appropriate levels so bleaching is completed while excess carryout is avoided.

### Selecting a Bleach Formulation

Experimentation has shown that an all-ammonium bleach is the most active and, therefore, needs the minimum amount of iron (and the associated amount of PDTA) for adequate bleaching. When potassium cations are substituted for ammonium, about 20% more iron is needed to complete bleaching in a given time. If all sodium cations are used, about another 5% more iron is needed to maintain the same level of activity. The best formulation for use in a given lab should be determined based on several operating factors.

Some of the factors to consider are:

- Local chemical cost and availability
- Laboratory ventilation factors
- Restrictions on sewer discharge.

### Controlling Tank Concentration with Replenisher Rate

Since bleach systems are subject to evaporation in the machine, overflow and replenisher holding tanks, system evaporation often plays a significant part in striking a balance between replenisher concentration, replenisher rate, and tank concentration. The best way to adjust between these factors, especially in a house system, is to vary the replenisher rate to maintain the desired tank concentration. Allowing the tank concentration to run high creates waste due to carryout. A low tank concentration presents the danger of inadequate bleaching. A new system should be started up using the suggested replenisher rates given for each bleach version. As the process or system seasons, the rates may be adjusted to give the desired tank concentrations. Bromide, iron, and pH are the critical parameters and should stay within limits given. If bromide or iron is too high, no harm to the process or film will occur, but expensive chemicals will be wasted due to carryout.

## Chemical Supplies and Substitutions

Ferric nitrate is supplied in crystalline form as nonahydrate or dissolved in water as a 35 or 45% solution. Various bromides, carbonates, and hydroxides may be used interchangeably provided attention is given to effluent requirements and various molecular weights and activities are compensated. The following multipliers may be used to calculate between formulations:

One gram of ferric nitrate nonahydrate = 1.31 mL of 35% = 0.93 mL of 45% solution

One gram of ammonium bromide = 1.21 grams KBr = 1.05 grams NaBr

One mL of 50% NaOH = 1.64 mL 45% KOH

If the odor or handling of acetic acid is a problem or undesirable, solid chemicals may be substituted. They are added as follows:

One mL of glacial acetic acid is equivalent to 1.05 grams of glacial acetic acid. One millilitre of glacial acetic acid can then be replaced by 1.35 grams of ammonium acetate. In potassium formulations, the one mL of glacial acetic acid can be replaced with 1.71 grams of potassium acetate. The ammonium formulation is compensated by removing 2.2 mL of 28% ammonium hydroxide per mL of acetic acid from the formulation. The potassium formulation gets compensated by 1.49 mL of 45% potassium hydroxide for each mL of glacial acetic acid removed. This calculation is illustrated in the following example:

Formula calls for 10 mL of glacial acetic acid and 30 mL of 28% ammonium hydroxide. Substituting for 10 mL of acetic: 10 mL x 1.35 grams ammonium acetate per gram acetic = 13.5 grams ammonium acetate. The amount of ammonium hydroxide to subtract is: 2.2 mL ammonium hydroxide per mL of acetic or  $2.2 \times 10 = 22$  mL. The formula becomes zero acetic acid, 13.5 grams of ammonium acetate and 8 mL of ammonium hydroxide.

"Dissolvine MP" is a PDTA Ferric Potassium Solution, [1,3 PDTA-Fe] K, that contains approximately 48 g of total Fe / L of solution. It may be used in any Potassium UL Bleach formulation by substituting "Dissolvine MP" for the entire amounts of KODAK Chelating Agent No. 1 (PDTA) and Ferric Nitrate (Nonahydrate) in the formulation. A potassium UL bleach can be made by using 20.8 ml of "Dissolvine MP" for each gram of total Fe in the formula and removing any KODAK Chelating Agent No. 1 (PDTA) and Ferric Nitrate (Nonahydrate) from the formulation. For example, if the total amount of Fe in a Potassium UL Bleach replenisher is 10 g/L, 1 L of that bleach replenisher could be made by substituting 208 ml of "Dissolvine MP" for all the KODAK Chelating Agent No. 1 (PDTA) and Ferric Nitrate (Nonahydrate) in the formulation. "Dissolvine MP" is a colored solution and its use will result in darker colored bleach replenisher and tank solutions.

## Mixing Instructions

The preparation of UL bleaches from raw chemistry involves the reaction of iron with ammonium or potassium hydroxide and PDTA to form bleaching agent. Since a reaction is involved, take care to ensure that the solution is ready for each sequential addition so the reaction proceeds correctly. To get experience in the look and feel of mixing, it is recommended that you make a small mix and observe it in the chemical laboratory prior to making the first large mix. Optimum mixing practices should yield the correct pH after the ferric nitrate addition, thereby avoiding expensive and time-consuming adjustments.

**Table 7-2 Mechanical Specifications for Process ECN-2 with Ferricyanide Bleach**

| Process Steps           | Footnotes | KODAK Formula  |             | Temperature              |            | Time min:sec | Replenisher (Wash Rate) per 100 ft. (30.5 m) of 35 mm film | Recirculation (R); Filtration (F); Turbulation (T) |
|-------------------------|-----------|----------------|-------------|--------------------------|------------|--------------|--|--|
|                         |           | Tank           | Replenisher | °C                       | °F         |              |  |  |
|                         |           |                |             | (See Note)               |            |              | (See Note)   |  |
| Prebath                 | 1         | PB-2           | PB-2R       | 27 ±1                    | 80 ±2      | :10          | 400 mL   | R & F @ 20 to 40 L/min                             |
| Rem-Jet Removal & Rinse | 2         | —              | —           | 27 to 38                 | 80 to 100  | —            | —  | None   |
| Developer               | 3, 4      | SD-49          | SD-49R      | 41.1 ±0.1                | 106.0 ±0.2 | 3:00         | 900 mL   | R, F, & T  |
| Stop                    | 5         | SB-14          | SB-14       | 27 to 38                 | 80 to 100  | :30          | 600 mL   | R & F @ 20 to 40 L/min                             |
| Wash                    | 6         | —              | —           | 27 to 38                 | 80 to 100  | :30          | 1.3 L  | None   |
| Ferricyanide Bleach     | 7         | SR-29          | SR-29R      | 38 ±1                    | 100 ±2     | 3:00         | 200 mL   | R & F @ 20 to 40 L/min                             |
| Wash                    | 6         | —              | —           | 27 to 38                 | 80 to 100  | 1:00         | 1.3 L  | None   |
| Fixer                   | 8         | F-34a          | F-34aR      | 38 ±1                    | 100 ±2     | 2:00         | 600 mL   | R & F @ 20 to 40 L/min                             |
| Wash                    | 9         | —              | —           | 27 to 38                 | 80 to 100  | 2:00         | 270 mL   | None   |
| Final Rinse             | 10        | FR-1           | FR-1R       | 27 to 38                 | 80 to 100  | :10          | 400 mL   | R & F @ 20 to 40 L/min                             |
|                         |           | <b>Type</b>    |             | <b>Temperature</b>       |            | <b>RH</b>    | <b>Air Flow</b>  | <b>Time</b>  |
| Dryer                   |           | Impingement    |             | 32 to 47°C (90 to 117°F) |            | 30 to 50%    | 1000 ft <sup>3</sup> /min                                  | 5 to 7 min.  |
|                         |           | Nonimpingement |             | 30 to 38°C (80 to 100°F) |            | 30 to 50%    | 1000 ft <sup>3</sup> /min                                  | 6 to 8 min.  |

- 1 Use polypropylene, fiberglass, or bleached cotton as a filter medium in the developer. Viscose rayon is not recommended for prebath, developer, or bleaches because of undesirable photographic effects.
- 2 Rem-jet removal time and wash rate will vary with equipment design and method. See Table 2-1, Module 2, *Equipment and Procedures*.
- 3 Maintain close control of developer time and temperature, since small deviations can lead to severe contrast mismatch. Use an accurate thermometer for checking the temperature controller variability. The temperature should be uniform throughout the developer tank.
- 4 Design developer racks with submerged rollers and rack-drive assemblies to minimize solution aeration and splashing.
- 5 Install an exhaust over the stop tank, since developer carried over into the stop generates sulfur dioxide. The exhaust system should produce an air flow of 175 ft<sup>3</sup>/min (5 m<sup>3</sup>/min) for every square foot (0.09 m<sup>2</sup>) of solution surface and provide 50 to 75 ft/min (15 to 23 m/min) control velocity over the surface of the tank.
- 6 The wash preceding the ferricyanide bleach must not become acid enough to lower the bleach pH below 6.0. Low pH in a ferricyanide bleach can promote the formation of Prussian blue. Keep the wash after the bleach effective enough to prevent film mottle from the reaction products of bleach carry-over into the fixer. Two-stage countercurrent washes with solution crossover devices between stages are recommended for efficient washing. The wash rates given in the table assume the use of such two-stage washes. Single-stage washes require substantially greater wash rates.
- 7 Reconstitute and reuse the bleach to obtain the full economic advantage. See Module 5, *Chemical Recovery Procedures*, for a procedure for reconstituting and regenerating ferricyanide bleach.
- 8 Fixer replenisher requirements vary with silver recovery equipment, method, and operating conditions. If provision is made for continuous electrolytic desilvering of the recirculated fixer, the silver concentration should be maintained between 0.5 and 1 g/L. See Module 5, *Chemical Recovery Procedures*, for details. The fixer and replenisher should be kept separate from other processes.
- 9 The wash rate given in this table assumes that the final wash is composed of four countercurrent-wash stages with solution crossover devices between stages.
- 10 The final rinse contains a wetting agent to promote more uniform wetting of the film strand prior to drying. The Proxel GXL or Spectrus NX106 controls biological growth in the tank.

**Note: Temperature**--Celsius temperatures are rounded consistent with process-control requirements. Fahrenheit temperatures are primary.

**Replenisher (Wash Rate) for 16 mm film**--Use one-half the 35 mm rate. Since processing operations can vary greatly in respect to such factors as film-to-leader ratio, solution crossover device efficiency, and amount of film processed per unit of time, adjustments in replenisher rates and/or formulas may be required to maintain the recommended tank concentrations.

**Table 7-3 Mechanical Specifications for Process ECN-2 with Various “UL” Bleaches (SR-33, SR-34, SR-35)**

| Process Steps             | Footnotes | KODAK Formula           |                            | Temperature                 |            | Time min:sec | Replenisher (Wash Rate) per 100 ft. (30.5 m) of 35 mm film | Recirculation (R); Filtration (F); Turbulation (T) |
|---------------------------|-----------|-------------------------|----------------------------|-----------------------------|------------|--------------|--|--|
|                           |           | Tank                    | Replenisher                | °C                          | °F         |              |  |  |
|                           |           |                         |                            | (See Note)                  |            |              | (See Note)   |  |
| Prebath                   | 1         | PB-2                    | PB-2R                      | 27 ±1                       | 80 ±2      | :10          | 400 mL   | R & F @ 20 to 40 L/min                             |
| Rem-Jet Removal & Rinse   | 2         | —                       | —                          | 27 to 38                    | 80 to 100  | —            | —  | None   |
| Developer                 | 1, 3, 4   | SD-49                   | SD-49R                     | 41.1 ±0.1                   | 106.0 ±0.2 | 3:00         | 900 mL   | R, F, & T  |
| Stop                      | 5         | SB-14                   | SB-14                      | 27 to 38                    | 80 to 100  | :30          | 600 mL   | R & F @ 20 to 40 L/min                             |
| Wash                      | 6         | —                       | —                          | 27 to 38                    | 80 to 100  | :30          | 1.3 L  | None   |
| “UL” Bleach: (Select one) | 7, 1      | SR-33<br>SR-34<br>SR-35 | SR-33R<br>SR-34R<br>SR-35R | 27 ±1                       | 80 ±2      | 3:00         | 200 mL<br>100 mL<br>400 mL                                 | R & F @ 20 to 40 L/min                             |
| Wash                      | 6, 8      | —                       | —                          | 27 to 38                    | 80 to 100  | 1:00         | 1.3 L  | None   |
| Fixer                     | 9         | F-34a                   | F-34aR                     | 38 ±1                       | 100 ±2     | 2:00         | 600 mL   | R & F @ 20 to 40 L/min                             |
| Wash                      | 10        | —                       | —                          | 27 to 38                    | 80 to 100  | 2:00         | 270 mL   | None   |
| Final Rinse               | 11        | FR-1                    | FR-1R                      | 27 to 38                    | 80 to 100  | :10          | 400 mL   | R & F @ 20 to 40 L/min                             |
|                           |           | <b>Type</b>             |                            | <b>Temperature</b>          |            | <b>RH</b>    | <b>Air Flow</b>  | <b>Time</b>  |
| Dryer                     |           | Impingement             |                            | 32 to 47°C<br>(90 to 117°F) |            | 30 to 50%    | 1000 ft³/min   | 5 to 7 min.  |
|                           |           | Nonimpingement          |                            | 30 to 38°C<br>(80 to 100°F) |            | 30 to 50%    | 1000 ft³/min   | 6 to 8 min.  |

- 1 Use polypropylene, fiberglass, or bleached cotton as a filter medium in the developer. Viscose rayon is not recommended for prebath, developer, or bleaches because of undesirable photographic effects.
- 2 Rem-jet removal time and wash rate will vary with equipment design and method. See Table 2-1, Module 2, *Equipment and Procedures*.
- 3 Maintain close control of developer time and temperature, since small deviations can lead to severe contrast mismatch. Use an accurate thermometer for checking the temperature controller variability. The temperature should be uniform throughout the developer tank.
- 4 Design developer racks with submerged rollers and rack-drive assemblies to minimize solution aeration and splashing.
- 5 Install an exhaust over the stop tank, since developer carried over into the stop generates sulfur dioxide, and UL Bleach tanks which have an ammonia or acetic-acid odor. The exhaust system should produce an air flow of 175 ft³/min (5 m³/min) for every square foot (0.09 m²) of solution surface and provide 50 to 75 ft/min (15 to 23 m/min) control velocity over the surface of the tank.
- 6 Two-stage countercurrent washes with solution crossover devices between stages are recommended for efficient washing. The wash rates given in the table assume the use of such two-stage washes. Single-stage washes require substantially greater wash rates.
- 7 Reconstitute and reuse the bleach to obtain the full economic advantage. See Module 5, *Chemical Recovery Procedures*, for a procedure for reconstituting and regenerating “UL” Bleach.
- 8 “UL” Bleach and the wash after the bleach are prone to biogrowth. Addition of Proxel GXL or Spectrus NX106 to the bleach controls this growth. Frequent dumping and changing of this wash tank may prove necessary.
- 9 Fixer replenisher requirements vary with silver recovery equipment, method, and operations conditions. If provision is made for continuous electrolytic desilvering of the recirculated fixer, the silver concentration should be maintained between 0.5 and 1 g/L. See Module 5, *Chemical Recovery Procedures*, for details. The fixer and replenisher must be kept separate from other processes.
- 10 The wash rate given in this table assumes that the final wash is composed of four countercurrent-wash stages with solution crossover devices between stages.
- 11 The final rinse contains a wetting agent to promote more uniform wetting of the film strand prior to drying. Proxel GXL or Spectrus NX106 are added to control biological growth in the tank.

**Note: Temperature**--Celsius temperatures are rounded consistent with process-control requirements. Fahrenheit temperatures are primary.

**Replenisher (Wash Rate) for 16 mm film**--Use one-half the 35 mm rate. Since processing operations can vary greatly in respect to such factors as film-to-leader ratio, solution crossover device efficiency, and amount of film processed per unit of time, adjustments in replenisher rates and/or formulas may be required to maintain the recommended tank concentrations.

## Drying Specifications

Drying photographic film depends on time in the dryer, the geometry of the dryer, the pattern of air flow and/or impingement on the film, the volume of air flow, the humidity and temperature of the air in the drying cabinet, and the efficiency of the final solution crossover device before the dryer. The optimum conditions for drying film must be determined for each processor, making allowance for film moisture content and static buildup.

With careful control of the above factors, adequate drying of Process ECN-2 films can be achieved in times as short as 5 1/2 minutes when using an impingement-type dryer.

Extending the dryer time to 6 to 8 minutes allows for a wider range of drying conditions and dryer geometry (including nonimpingement drying) and less stringent control of drying conditions. General specifications for both impingement and nonimpingement drying are shown in Tables 7-2 and 7-3. Upon cooling to room temperature after leaving the dryer, the film should have a moisture content in equilibrium with air at 50 percent relative humidity and show minimum curl.

## Turbulation Specifications

Turbulators are essential in the recirculation system for Process ECN-2 developer to provide uniform film processing. The turbulators are used submerged in the solution and are located in such a way that the recirculated solution impinges uniformly over the full width of the film strand.

Turbulation at the emulsion surface must be provided along the film path at a suitable frequency. Backup rollers opposite the turbulators are necessary in most processors when adequate turbulator pressures are used. Design guidelines for Process ECN-2 developer turbulation, along with typical solution flow information, are given in Module 2, *Equipment and Procedures*. Precise turbulation design must be determined specifically for a particular processing machine to promote good uniformity of development. The guidelines in Module 2 provide starting points for such designs.

## Wash-Water Flow Rates

Adequate washing in conjunction with conservation of wash water is a matter of concern for all processors. Ways of reducing wash-water usage while maintaining adequate washing include: 1. using multi-stage countercurrent-flow washes (see Figure 7-2); 2. installing solution crossover devices between wash stages as well as before the wash (see Figures 7-2); and 3. shutting off wash water when the machine is not transporting film or leader. The last alternative can easily be accomplished by installing solenoid valves in the wash-water supply lines that are opened when the machine drive is running. The water saving from the use of solution crossover devices and countercurrent stages can be substantial. A three-stage countercurrent final wash with solution crossover devices before and after each stage requires approximately 1/25 of the water of a single-stage wash with entrance and exit solution crossover devices.

### **Overflow from one wash step should never be used in any other wash step.**

Decreased water flow in the final wash may increase the propensity toward biological growth. See Module 2, *Equipment and Procedures*, for information on control of biological growth. Temperature control can also be a concern at lower flow rates. After establishing the final flow rate, check to be sure the process stays within the temperature tolerances specified in Tables 7-2 or 7-3.

The wash-water flow rates in Tables 7-2 and 7-3 have been found to be satisfactory in a 75 ft/min (23 m/min) processor, using two-stage countercurrent washes (four-stage final wash) with efficient solution crossover devices between stages. The optimum wash rates for a particular installation must be determined after the film transport rate, the number of countercurrent stages, and the solution crossover device efficiencies have been established.

Experimentation is necessary to determine minimum wash-water flow rates that will provide adequate washing. Inadequate washing could result in significant contamination of the solution after the wash with the solution before the wash and/or loss of image stability.

## Stop Wash

An inadequate stop wash in the ferricyanide bleach sequence will cause a low pH in the ferricyanide bleach which, in turn, will increase the formation of prussian blue. The prussian blue can contaminate the film in the form of blue dirt or scum. For adequate safety from Prussian blue, the final stage of the stop wash should have a pH greater than 3.0.

## Bleach Wash

If the ferricyanide bleach wash is inadequate, the processed film may be mottled from reaction products of bleach carry-over in the fixer.

## Final Wash

The final wash must remove most of the thiosulfate (hypo) from the film. Retained hypo levels of 4  $\mu\text{g}/\text{cm}^2$  or greater can cause serious dye fading. If the recommended four-stage countercurrent wash and wash rate are used, residual hypo in the designated films processed in Process ECN-2 should be barely detectable (0.2 to 0.4  $\mu\text{g}/\text{cm}^2$ ) by Analytical Method ULM-0004/1 in Module 3, *Analytical Procedures*.

## Rewashing

For many years, the term rewashing referred to the common practice of running processed film through a complete process for a second time. This operation removes dirt and/or heals slight emulsion scratches and digs. Rewashing a film once in the original process produces minimal changes in the dye stability and sensitometry. However, several rewashes may cause changes in green (or other) density over the full exposure scale of the film. After several rewashes, subsequent print orders can require the green light printer exposure (or other) to be changed from the original setting.

Rewash RW-1 is designed to avoid these sensitometric and dye stability changes, and at the same time to produce similar emulsion swells to that obtained by going through the original developer.

**Table 7-4 Rewash RW-1 Sequence**

| Step                | Function   |
|---------------------|--|
| 1. Prebath PB-6     | Swells the emulsion, causing the scratches to be filled in and embedded dirt particles to be released. |
| 2. Wash             | Removes unwanted chemicals, which, if left in, affect dye stability.                                   |
| 3. Final Rinse FR-1 | Contains a wetting agent to help prevent water spots while the film is being dried.                    |
| 4. Dry              | Dries film for subsequent handling.  |

The rewash machine consists of a loading elevator, tanks for the prebath, wash, and final rinse solutions, and a dryer. Submerged rollers and rack-drive assemblies will minimize spattering of solutions and aerial oxidation of sulfite in the prebath. Type 316 stainless steel is suitable for tanks, racks, and recirculation equipment. Use 10-micron filters of polypropylene, fiberglass, or bleached cotton in the recirculation system. Use no solution crossover devices, except after the final rinse, where a high efficiency final solution crossover device is needed.

**Table 7-5 Mechanical Specifications for Rewash RW-1**

| Process Steps | KODAK Formula Tank and Replenisher | Temperature <sup>1</sup> |           | Time min:sec | Replenisher (Wash Rate) per 100 ft. (30.5 m) of 35 mm film <sup>2</sup> | Recirculation (R); Filtration (F) |
|---------------|------------------------------------|--------------------------|-----------|--------------|---|-----------------------------------|
|               |                                    | °C                       | °F        |              |   |                                   |
| Prebath       | PB-6                               | 21 ±1                    | 70 ±2     | 2:00         | 600 mL  |                                   |
| Wash          | —                                  | 21 to 38                 | 70 to 100 | 3:00         | 300 mL <sup>3</sup>   |                                   |
| Final Rinse   | FR-1                               | 21 to 38                 | 70 to 100 | :10          |   |                                   |
|               | <b>Type</b>                        | <b>Temperature</b>       |           | <b>RH</b>    | <b>Air Flow</b>   | <b>Time</b>                       |
| Dryer         | Impingement                        | 32 to 47°C (90 to 117°F) |           | 30 to 50%    | 1000 ft <sup>3</sup> /min   | 5 to 7 min.                       |
|               | Nonimpingement                     | 30 to 38°C (80 to 100°F) |           | 30 to 50%    | 1000 ft <sup>3</sup> /min   | 6 to 8 min.                       |

1 Celsius temperatures are rounded consistent with process-control requirements. Fahrenheit temperatures are primary.

2 For 16 mm film, use one-half the 35 mm film replenishment and wash rates.

3 Use a two-stage countercurrent wash.





## PROCESSING CHEMICALS

### Prepackaged Chemicals

There are prepackaged kits available for preparing the processing solutions used in Process ECN-2. For information on KODAK ECN-2 Kit Chemicals, see *Using KODAK Kit Chemicals in Motion Picture Film Laboratories H-333*.

As an alternative to kit chemicals, each solution can be prepared according to formulas, using chemicals purchased in bulk.





## Solution Mixing

Use the following mixing practices when preparing processing solutions with common mixing equipment. Mix solutions in the order in which the solutions occur in the process sequence. This order will minimize the effect of contamination of a solution by the previously mixed solution. The solutions are also less likely to be placed in the wrong holding or machine tanks. See Module 8, *Effects of Mechanical and Chemical Variations in Process ECN-2*, for sensitometric effects of contamination and solution concentration errors.

The mixing area should be well ventilated and have a local exhaust over the mixing tank to carry off fumes and chemical dust. See Module 2, *Equipment and Procedures*, for exhaust specifications.

Good mixing practices:

1. Observe all precautionary information on containers and packages of each chemical, and on the Material Safety Data Sheets available from the seller of the individual chemical. Footnotes with some formulas provide further precautionary information.
2. Rinse the mix tank with water, and run fresh water through the pump. Drain the tank and pump.  
“UL” BLEACH: If converting from ferricyanide bleach, first remove all red brass from the system, then clean up the bleach system. A high pH wash (10 to 12) will help eliminate any prussian blue in the system. Three cleaning cycles are recommended.  
If converting from persulfate bleach, a series of hot water rinses is needed in the accelerator and bleach tanks. Since the accelerator tank will become a wash tank, the initial series of rinses is enough. The bleach tank should be filled with hot water and the recirculation and replenishment system turned on. Three to five cleaning cycles are recommended.
3. Fill the tank to the mixing level with water at the appropriate temperature, and start the mixer. Be sure the mixer is large enough to provide adequate agitation for the volume of solution desired. Allow 30 seconds for agitating the water between the time the mixer is started and the first chemical addition is made. This action helps remove air from the water and disperse the first chemical addition.
4. Premeasure all chemicals,\* but do not combine the dry chemicals together before adding them to the mixing tank. This practice can result in unwanted chemical reactions producing toxic and noxious fumes. The formula for each processing solution lists chemicals in the proper mixing order. Add and dissolve the chemicals in the order given, and dilute the solution to volume with water  
DEVELOPER: To avoid problems in dissolving the KODAK Color Developing Agent, CD-3, agitate the developer mix for 15 minutes after the addition of the sodium bromide and for 10 minutes after the addition of the CD-3 and before diluting to volume. Be sure the starting volume of water is 85% of the volume

to be mixed. If a water hopper is used, take care not to over dilute the solution.

FERRICYANIDE BLEACH: When the ferricyanide bleach is made with ferrocyanide and persulfate, the solution should be allowed to sit approximately an hour before final adjustments are made. This allows for complete reaction of the two chemicals.



### Caution

**CORROSIVE.** Avoid contact with ammonium hydroxide solution and vapor. Avoid breathing vapor. Wear safety goggles and impervious gloves. Store in a cool place to prevent pressure build-up in the container.

“UL” BLEACH: When adding ammonium hydroxide to the mix tank, be sure to add it below, or at the surface of the solution to minimize the escape of ammonia vapor. Careless handling may require evacuation of the mix room.

5. Agitate the solution for a few minutes after it has been diluted to volume, to promote complete and uniform dissolution of all the constituents. The prebath, developer, stop, and final rinse should be agitated for at least 5 minutes after dilution to volume; the fixer for 10 minutes; and the bleach for 15 minutes.
6. Analyze the solution for its critical constituents after mixing. Then place the certified solution into the appropriate storage tank.
7. Carefully rinse the mixing tank and any pump used to transport the solution. Clean the mixing equipment immediately after the tank is emptied, before salts and tars have time to form. The tank is more efficiently rinsed with numerous small-volume rinses than with a few large-volume rinses.

\* When preparing processing solutions, use photographic grade chemicals (passing ANSI or ANSI/ACS specifications). Kodak, as well as some other suppliers, provide such chemicals.

## FORMULAS AND ANALYTICAL SPECIFICATIONS

### Bulk Formulas

Each processing solution prepared from bulk chemicals must be prepared according to the formulas given below. After mixing, each solution should be analyzed to check conformity to pH, specific gravity, and analytical specifications given in the formula. Procedures for chemical analysis are given in Module 3, *Analytical Procedures*.

Maintain the fresh tank formula specifications exactly as given in the formulas. Immediately correct any deviations from tank specifications revealed by chemical analysis, by making appropriate additions or cuts to the tank solution.

Any long-term tendency to deviate from the tank analytical specifications (e.g., slowly increasing pH) should be corrected by adjustment of the replenisher. The replenisher formula specifications are to be used as starting points for typical operations.



### Important

Observe precautionary information on product labels and on the Material Safety Data Sheets.

### Prebath

| Constituent                       | Fresh Tank    | Fresh and Seasoned Tank <sup>1</sup><br>Analytical Specifications | Fresh Replenisher | Replenisher Analytical Specifications |
|-----------------------------------|---------------|---|-------------------|---------------------------------------|
| <b>Prebath <sup>2</sup></b>       | <b>(PB-2)</b> |   | <b>(PB-2R)</b>    |                                       |
| Water 27 to 38°C (80 to 100°F)    | 800 mL        |   | 800 mL            |                                       |
| Borax (Decahydrated) <sup>3</sup> | 20.0 g        |   | 20.0 g            |                                       |
| Sodium Sulfate (Anhydrous)        | 100 g         |   | 100 g             |                                       |
| Sodium Hydroxide                  | 1.0 g         |   | 1.0 g             |                                       |
| Water to make                     | 1 L           |   | 1 L               |                                       |
| pH at 25.0°C (77.0°F)             |               | 9.25 ± 0.10   |                   | 9.25 ± 0.10                           |
| Specific Gravity                  |               | 1.094 ± 0.004   |                   | 1.094 ± 0.004                         |

<sup>1</sup> If a precipitate tends to form, add 1 mL/L of KODAK Anti-Calcium, No. 4.

<sup>2</sup> If biological growth becomes a problem, Proxel GXL may be added at 0.07 mL/L.

<sup>3</sup> Borax having 5 moles water of crystallization can be used at 15.0 g/L.

## Developer

| Constituent                                    | Fresh Tank | Fresh and Seasoned Tank Analytical Specifications | Fresh Replenisher | Replenisher Analytical Specifications |
|--|------------|---|-------------------|---------------------------------------|
| <b>Developer</b>                               |            |   |                   |                                       |
| Water 21 to 38°C (70 to 100°F)                 | 850 mL     |   | 850 mL            |                                       |
| KODAK Anti-Calcium, No. 4                      | 2.0 mL     |   | 2.7 mL            |                                       |
| Sodium Sulfite (Anhydrous) <sup>1</sup>        | 2.0 g      | 1.8 ± 0.2 g/L                                     | 2.5 g             | 2.2 ± 0.2 g/L                         |
| Sodium Bromide (Anhydrous)                     | 1.20 g     | 1.20 ± 0.05 g/L                                   | 0.80 g            | 0.80 ± 0.05 g/L                       |
| KODAK Color Developing Agent CD-3 <sup>1</sup> | 4.0 g      | 3.9 ± 0.1 g/L                                     | 5.5 g             | 5.2 ± 0.1 g/L                         |
| Sodium Carbonate (Anhydrous)                   | 25.6 g     |   | 25.0 g            |                                       |
| Sodium Bicarbonate                             | 2.7 g      |   | 0.6 g             |                                       |
| KODAK Antifoggant AF-2000                      | 5.0 mL     | 5.0 ± 0.1 mL                                      | 5.3 mL            | 5.3 ± 0.1 mL                          |
| Water to make                                  | 1 L        |   | 1 L               |                                       |
| pH at 25.0°C (77.0°F)                          |            | 10.25 ± 0.05                                      |                   | 10.32 ± 0.05                          |
| Specific Gravity at 25.0°C (77.0°F)            |            | 1.029 ± 0.003                                     |                   | 1.028 ± 0.003                         |
| Total Alkalinity (5 mL sample)                 |            | 25.6 ± 1.5 mL                                     |                   | 23.6 ± 0.5 mL                         |

<sup>1</sup> Mix CD-3 for minimum of 10 minutes or until completely desolved. The difference between the mix levels and the analytical specifications for CD-3 and sodium sulfite are to compensate for aeration losses that occur during mixing and transfer of solution to the machine tank. The mix levels necessary to achieve the required analytical specifications will vary with mixing equipment and solution transfer techniques.

Because of the very good stability of AF-2000 in the color developer, no modification of the replenisher AF-2000 concentration is necessary even if the machine is idle for a long period of time.

**Stop**

| Constituent  | Fresh Tank         | Fresh and Seasoned Tank Analytical Specifications | Fresh Replenisher | Replenisher Analytical Specifications |
|--|--------------------|---|-------------------|---------------------------------------|
| <b>Stop</b>  | <b>(SB-14)</b>     |   | <b>h</b>          |                                       |
| Water 21 to 38°C (70 to 100°F)   | 900 mL             |   | Same as Tank      |                                       |
| Sulfuric Acid (7.0 N)  | 50 mL <sup>1</sup> |   |                   |                                       |
| Water to make  | 1 L                |   |                   |                                       |
| pH at 25.0°C (77.0°F)  |                    | 0.8 to 1.5  |                   |                                       |
| <b>WARNING!</b> May cause eye and skin irritation and allergic skin reaction. Avoid contact with eyes and skin. In case of contact, immediately flush with plenty of water; for eyes, get medical attention. |                    |   |                   |                                       |

<sup>1</sup> 10 mL of concentrated sulfuric acid may be substituted for 50 mL of 7.0 N acid.









## Fixer

| Constituent                         | Fresh Tank      | Fresh and Seasoned Tank Analytical Specifications | Fresh Replenisher | Replenisher Analytical Specifications |
|-------------------------------------|-----------------|---|-------------------|---------------------------------------|
| <b>Fixer</b>                        | <b>(SF-34a)</b> |   | <b>(F-34aR)</b>   |                                       |
| Water 21 to 38°C (70 to 100°F)      | 700 mL          |   | 700 mL            |                                       |
| KODAK Anti-Calcium, No. 4           | 2.0 mL          |   | 2.8 mL            |                                       |
| Ammonium Thiosulfate Solution 58%   | 185 mL          | 185 ± 15 mL/L                                     | 200 mL            | 200 ± 15 mL/L                         |
| Sodium Sulfite (Anhydrous)          | 10.0 g          | 20.0 ± 2.0 g/L <sup>1</sup>                       | 22.0 g            | 26.0 ± 2.0 g/L <sup>1</sup>           |
| Sodium Metabisulfite (Anhydrous)    | 8.4 g           |   | 4.0 g             |                                       |
| Water to make                       | 1 L             |   | 1 L               |                                       |
| pH at 25.0°C (77.0°F)               |                 | 6.5 ± 0.2 <sup>2</sup>                            |                   | 7.2 ± 0.2 <sup>3</sup>                |
| Specific Gravity at 25.0°C (77.0°F) |                 | 1.086 ± 0.003 <sup>2</sup>                        |                   | 1.103 ± 0.003                         |
| Hypo Index (3 mL sample)            |                 | 39.5 ± 2.5 mL                                     |                   | 45.0 ± 2.0 mL                         |

1 The analytical method measures the total sulfite content of the solution and reports it as sodium metabisulfite (Na<sub>2</sub>S<sub>2</sub>O<sub>5</sub>). If a solution addition to the sodium metabisulfite level must be made but sodium bisulfite is to be used, multiply the sodium metabisulfite addition weight by the factor 1.09 to obtain the equivalent amount of sodium bisulfite.

2 These specifications apply to a fresh (unseasoned) tank only.

3 Fixer pH may decrease with certain operating conditions when electrolytically desilvering the fixer. If the fixer is not continuously desilvered or desilvered by the batch method and reused as replenisher, the replenisher pH should be 6.50 ± 0.2. If bleach regeneration is practiced, the fixer pH should never be allowed to fall below 5.5, since low fixer pH affects the dye stability of Kodak color negative films.

## Final Rinse

| Constituent                     | Fresh Tank     | Fresh and Seasoned Tank Analytical Specifications | Fresh Replenisher | Replenisher Analytical Specifications |
|---------------------------------|----------------|---|-------------------|---------------------------------------|
| <b>Final Rinse <sup>1</sup></b> | <b>(SB-29)</b> |   | <b>(SR-29R)</b>   |                                       |
| Water 21 to 38°C (70 to 100°F)  | 900 mL         |   | 900 mL            |                                       |
| KODAK Stabilizer Additive       | 0.14 mL        |   | 0.17 mL           |                                       |
| Water to make                   | 1 L            |   | 1 L               |                                       |

1 If biological growth becomes a problem, Proxel GXL may be added at 0.07 mL/L, or Spectrus NX106 at 0.7 mL/L.

## Rewash Formulas

The final rinse formula (FR-1) is given above. Additional tank solution (FR-1) may be used in place of the replenisher solution (FR-1R) for the rewash operation.

| Constituent                    | Fresh Tank    | Fresh and Seasoned Tank Analytical Specifications | Fresh Replenisher | Replenisher Analytical Specifications |
|--------------------------------|---------------|---|-------------------|---------------------------------------|
| <b>Prebath</b>                 | <b>(PB-6)</b> |   |                   |                                       |
| Water 21 to 38°C (70 to 100°F) | 800 mL        |   |                   |                                       |
| KODAK Anti-Calcium, No. 4      | 2.0 mL        |   |                   |                                       |
| Sodium Sulfite (anhydrous)     | 8.4 g         | 18.0 ± 2.0 g/L                                    |                   |                                       |
| Sodium Bisulfite (anhydrous)   | 10.0 g        |   |                   |                                       |
| Water to make                  | 1 L           |   |                   |                                       |
| pH at 25.0°C (77.0°F)          |               | 6.5 ± 0.20  |                   |                                       |

| <b>Alternate Prebath<sup>1</sup></b>        |                   |  |                          |  |
|---|-------------------|--|--------------------------|--|
| <b>Constituent</b>                          | <b>Fresh Tank</b> | <b>Fresh and Seasoned Tank<sup>1</sup> Analytical Specifications</b> | <b>Fresh Replenisher</b> | <b>Replenisher Analytical Specifications</b> |
| <b>Sodium Carbonate Prebath<sup>2</sup></b> | <b>(PB-C1)</b>    |  | <b>(PB-C1R)</b>          |  |
| Water 27 to 38°C (80 to 100°F)              | 800 mL            |  | 800 mL                   |  |
| KODAK Anti-Calcium, No. 4                   | 3.0 mL            |  | 3.0 mL                   |  |
| Sodium Carbonate (anhydrous)                | 58.0 g            |  | 58.0 g                   |  |
| Sodium Bicarbonate (anhydrous)              | 19.0 g            |  | 19.0 g                   |  |
| KODAK Stabilizer Additive                   | 0.5 mL            |  | 0.5 mL                   |  |
| Water to make                               | 1 L               |  | 1 L                      |  |
| pH at 25.0°C (77.0°F)                       |                   | 10.0 ±0.20   |                          | 10.0 ±0.20                                   |
| Specific gravity at 25.0°C (77.0°F)         |                   | 1.0660   |                          | 1.0660                                       |

1 May be used in place of PB-2 for Process ECN-2.

2 If biological growth becomes a problem, Proxel GXL may be added at 0.07 mL/L.

| <b>Alternate Prebath<sup>1</sup></b>           |                   |  |                          |  |
|--|-------------------|--|--------------------------|--|
| <b>Constituent</b>                             | <b>Fresh Tank</b> | <b>Fresh and Seasoned Tank<sup>1</sup> Analytical Specifications</b> | <b>Fresh Replenisher</b> | <b>Replenisher Analytical Specifications</b> |
| <b>Potassium Carbonate Prebath<sup>2</sup></b> | <b>(PB-C2)</b>    |  | <b>(PB-C2R)</b>          |  |
| Water 27 to 38°C (80 to 100°F)                 | 800 mL            |  | 800 mL                   |  |
| KODAK Anti-Calcium, No. 4                      | 3.0 mL            |  | 3.0 mL                   |  |
| Potassium Carbonate (47%)                      | 150.0 g           |  | 150.0 g                  |  |
| Potassium Bicarbonate (anhydrous)              | 34.7 g            |  | 34.7 g                   |  |
| KODAK Stabilizer Additive                      | 0.5 mL            |  | 0.5 mL                   |  |
| Water to make                                  | 1 L               |  | 1 L                      |  |
| pH at 25.0°C (77.0°F)                          |                   | 10.0 ±0.20   |                          | 10.0 ±0.20                                   |
| Specific gravity at 25.0°C (77.0°F)            |                   | 1.1410   |                          | 1.1410                                       |

1 May be used in place of PB-2 for Process ECN-2.

2 If biological growth becomes a problem, Proxel GXL may be added at 0.07 mL/L.

## STORAGE OF SOLUTIONS

Do not use replenishers that have been stored at normal room temperatures 21 to 24°C (70 to 75°F), longer than the times given in Table 7-7. Storage temperatures higher than 24°C (75°F) will decrease the storage life of the solutions. Storage temperatures below 16°C (60°F) can cause some solution constituents to precipitate.

Do not attempt to bring aged replenisher solutions to the formula level. Decomposition products that are formed as the solution stands cannot be eliminated from the solution. These compounds build up to a concentration that can cause adverse photographic effects.

**Table 7-7 STORAGE LIFE OF REPLENISHER SOLUTIONS AT 21 TO 24°C (70 TO 75°F)**

| Replenisher     | Floating Cover          | Open Tank |
|-----------------|-------------------------|-----------|
| Color Developer | 2 weeks                 | 1 week    |
| Stop SB-14      | Indefinite <sup>1</sup> | 8 weeks   |
| Others          | 8 weeks                 | 4 weeks   |

<sup>1</sup> If solution is kept clean.

Discard the remaining few litres of replenisher before fresh replenisher is pumped into the holding tank. Replenisher remaining in the holding tank, even if kept under a close-fitting floating cover, usually has deteriorated to such an extent that it is unsatisfactory for further use.

For best process control, equip the holding tank for the color developer replenisher with a tight-fitting floating cover. The cover will minimize air oxidation of the solution, and absorption of carbon dioxide from the air, which would change the pH. Clearance between the cover and the tank wall should not be greater than 1/4 inch (6.4 mm). Polyethylene sheeting of 1/2 inch (12.7 mm) thickness makes adequate covers in sizes up to 3 feet (1 meter) in diameter. A dust cover, alone, permits air to contact more of the solution surface and allows air oxidation to take place. Dust covers should be used for non-developer solutions to minimize dirt in the replenisher tanks.

